

2016.0 RANGE ROVER (LG), 211-02

POWER STEERING

STEERING GEAR (G1606327)

REMOVAL AND INSTALLATION

57.10.01	STEERING GEAR - RENEW	ALL DERIVATIVES	2.5	USED WITHINS	+
----------	-----------------------------	--------------------	-----	-----------------	---

REMOVAL

CAUTION:

Do not remove the plastic transit caps until indicated.

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Some illustrations may show left hand drive. Right hand drive is similar, but the essential information shown is always correct.

1.

WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

2. Refer to: [Engine Undershield](#) (501-02 Front End Body Panels, Removal and Installation).
3. Repeat procedure for the other side.
Refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).

4.

CAUTION:

Discard the bolt.

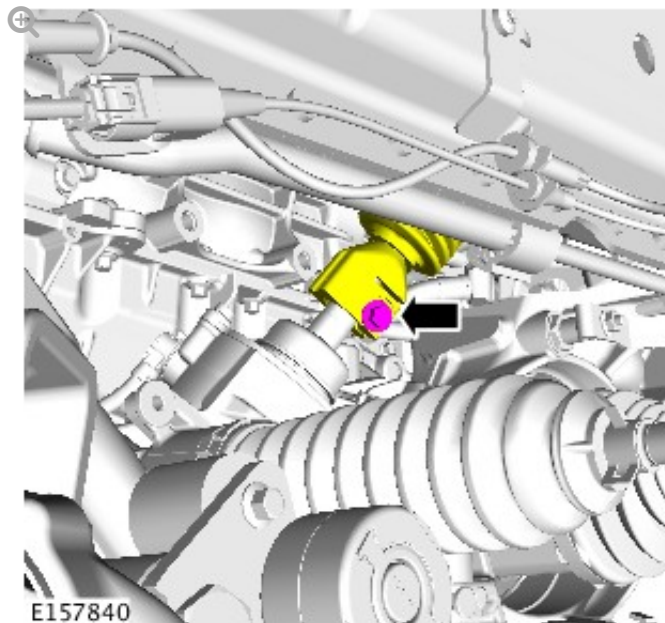

Align the steering wheel to straight ahead.


5.

CAUTIONS:

- Make sure that the area around the component is clean and free of foreign material.
- LH illustration shown, RH is similar.

NOTE:

Discard the retaining clip.

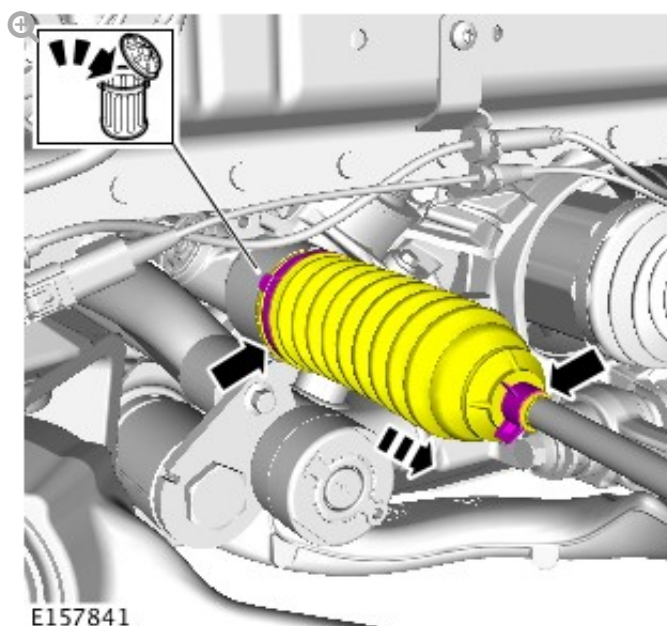

Repeat procedure for the other side.


6.

CAUTION:

Make sure that the area around the component is clean and free of foreign material.

NOTE:

LH illustration shown, RH is similar.

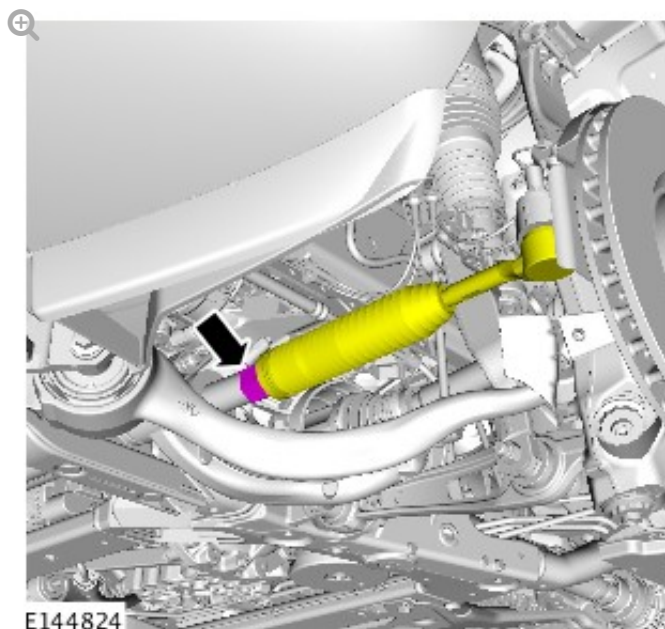


Repeat procedure for the other side.

7.

NOTE:


If equipped.

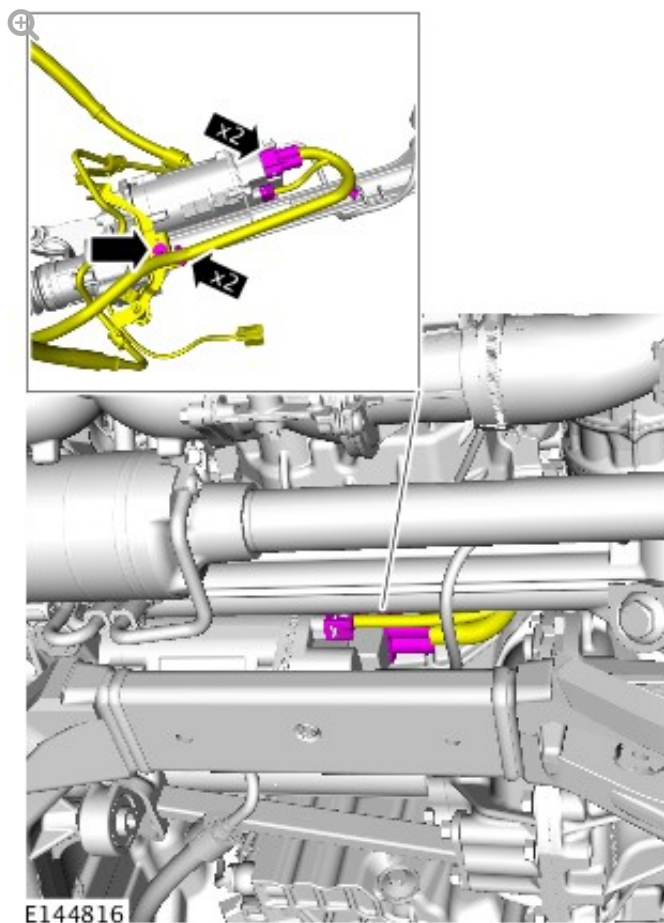

8.

NOTE:


If equipped.

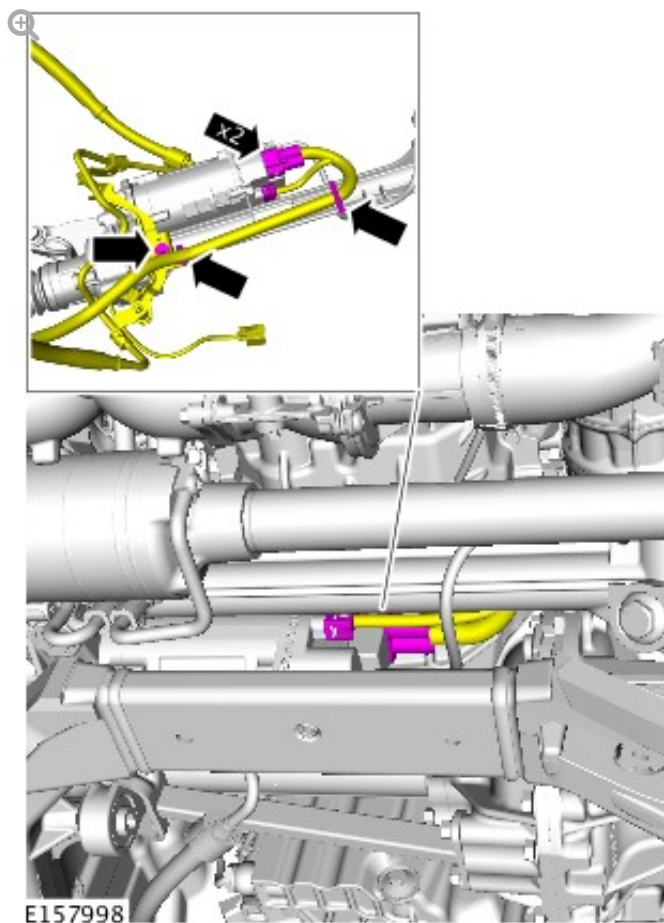

9.

NOTE:


If equipped.

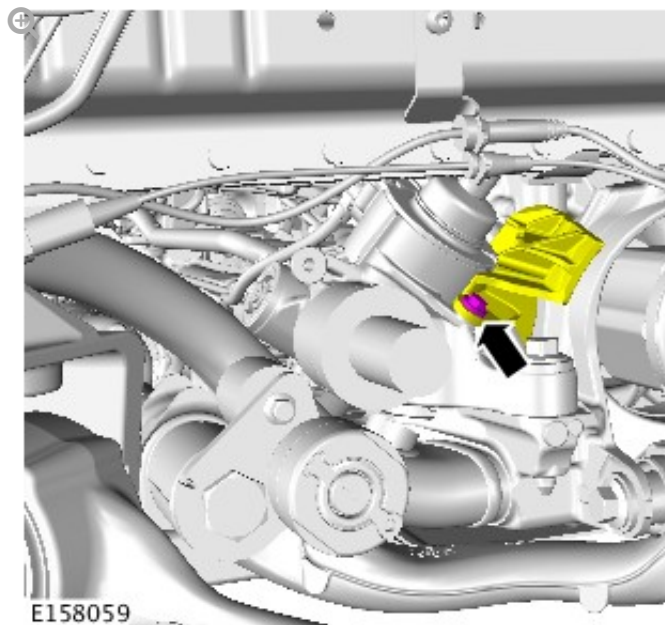

10.

CAUTIONS:

- LH illustration shown, RH is similar.
- Discard the bolt.

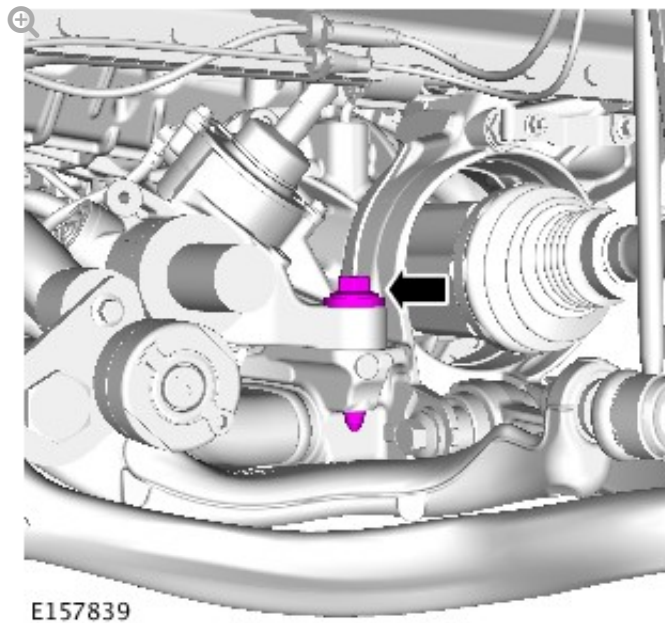


Repeat procedure for the other side.

11.

NOTE:

If equipped.

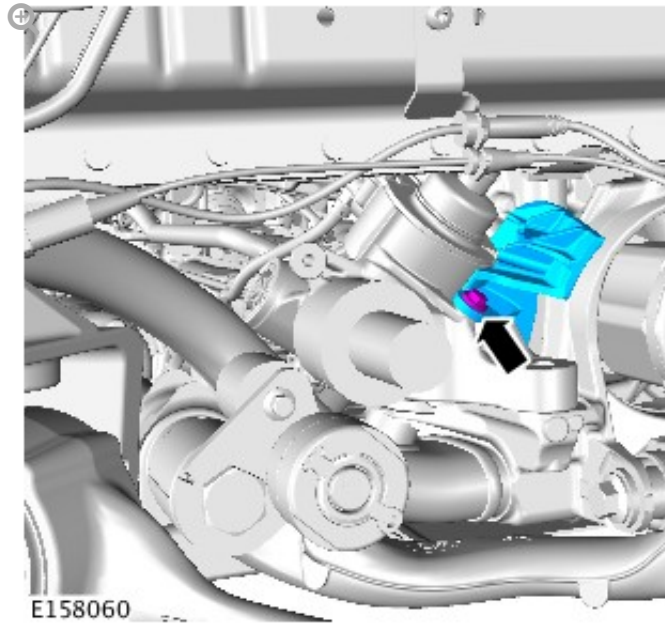


12.

CAUTIONS:

- Make sure that the component is not suspended by the fluid hoses.
- Discard the bolts.

NOTE:


If equipped.

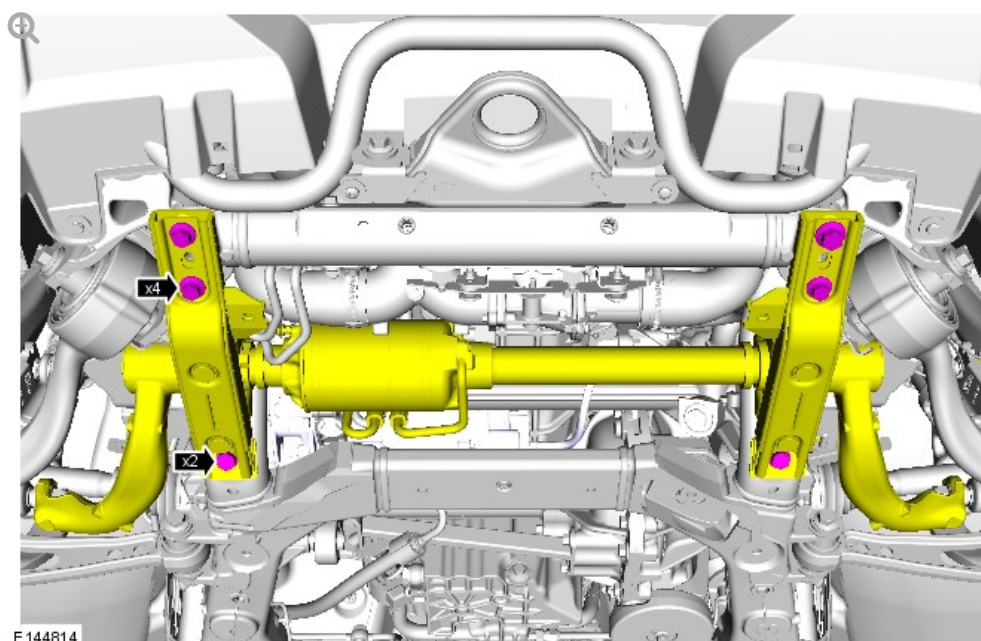

E144814

Using a suitable stand, support the component.


13.

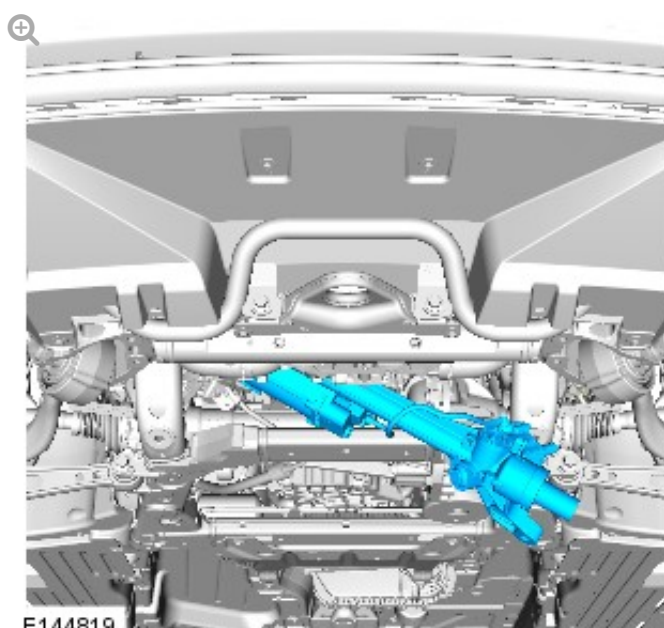

E144819

INSTALLATION

1.

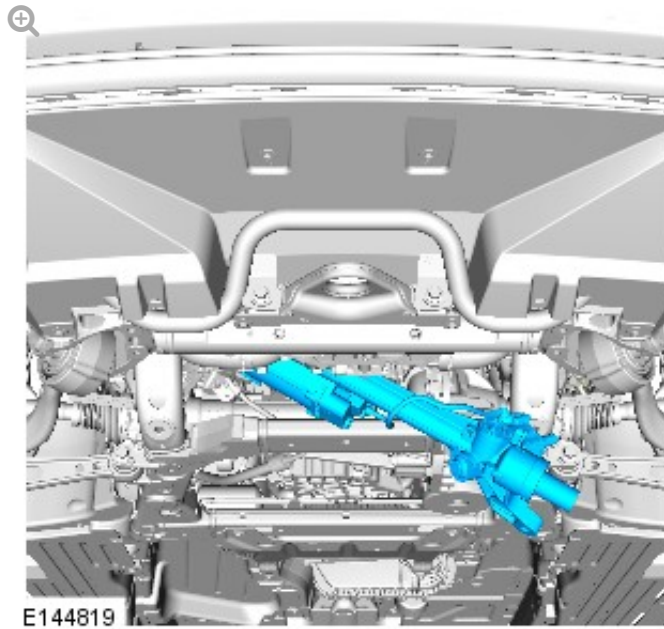


2.

CAUTION:

Make sure that new bolts are installed.

NOTE:

IF equipped.

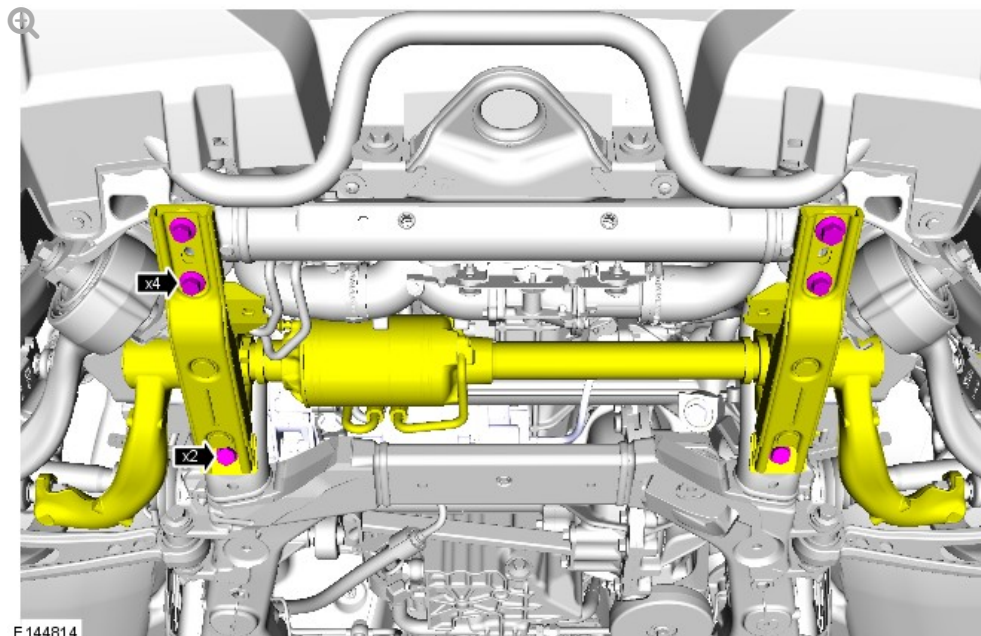

E144814

Torque:

M12 Bolts

Stage 1: **90 Nm**

Stage 2: **180°**

M14 Bolts


Stage 1: **130 Nm**

Stage 2: **120°**

3.

NOTES:


- If equipped.
- Do not tighten at this stage.

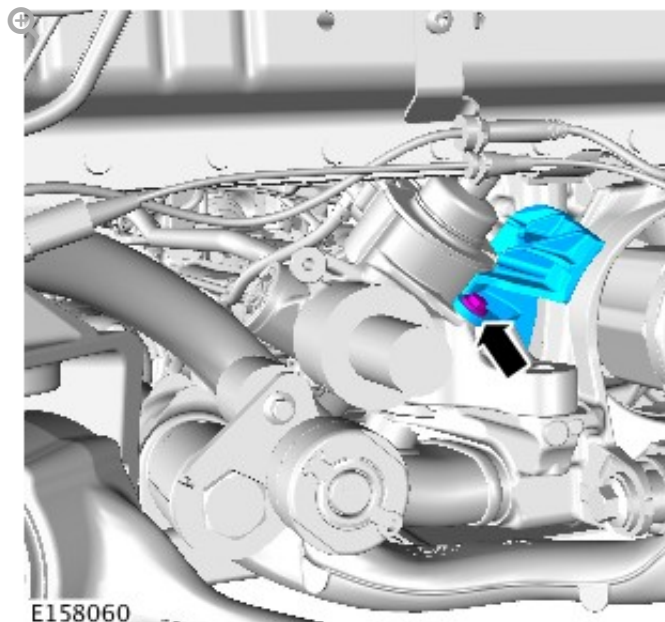

4.

CAUTIONS:

- Make sure that new bolts are installed.
- LH illustration shown, RH is similar.

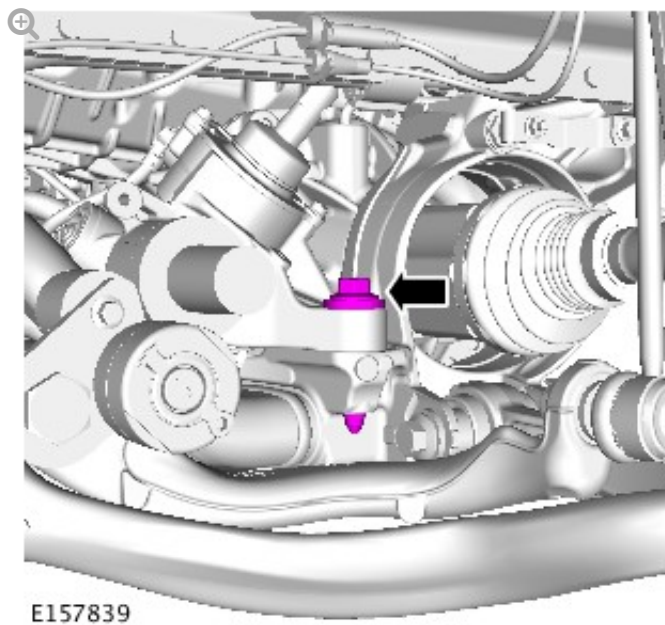

Repeat procedure for the other side.

Torque:


Stage 1: 100 Nm

Stage 2: 240°

5.

NOTE:

If equipped.

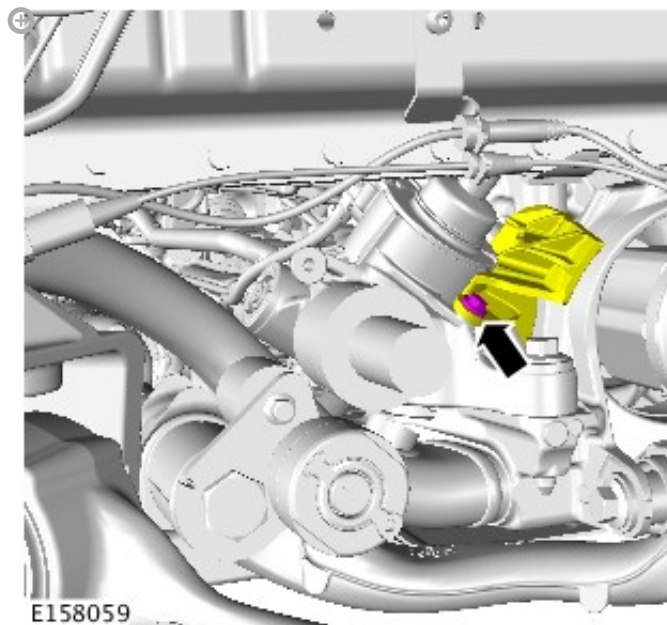


Torque: 10 Nm

6.

NOTE:

If equipped.

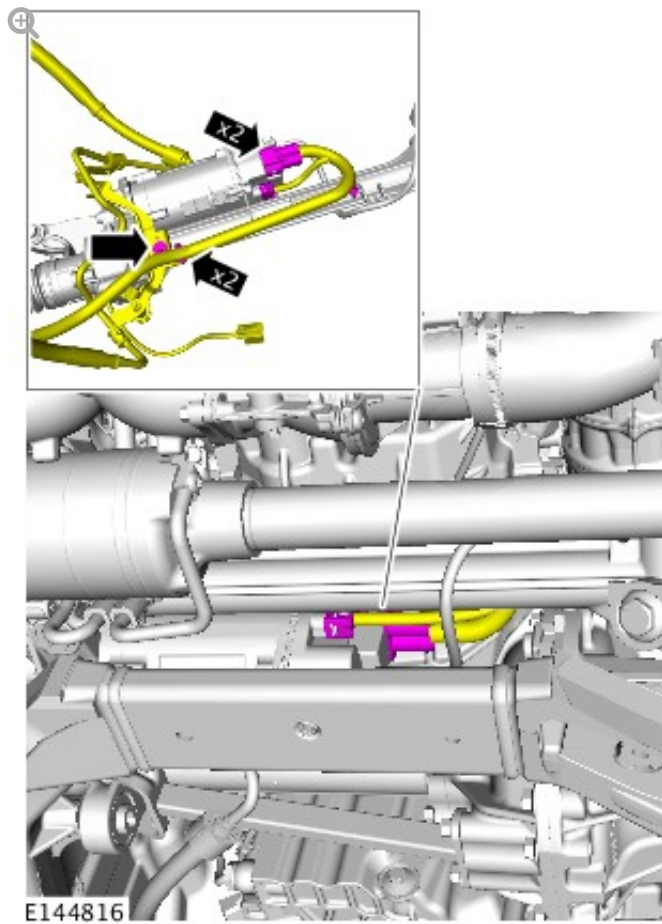


Torque: 10 Nm

7.

NOTE:

If equipped.

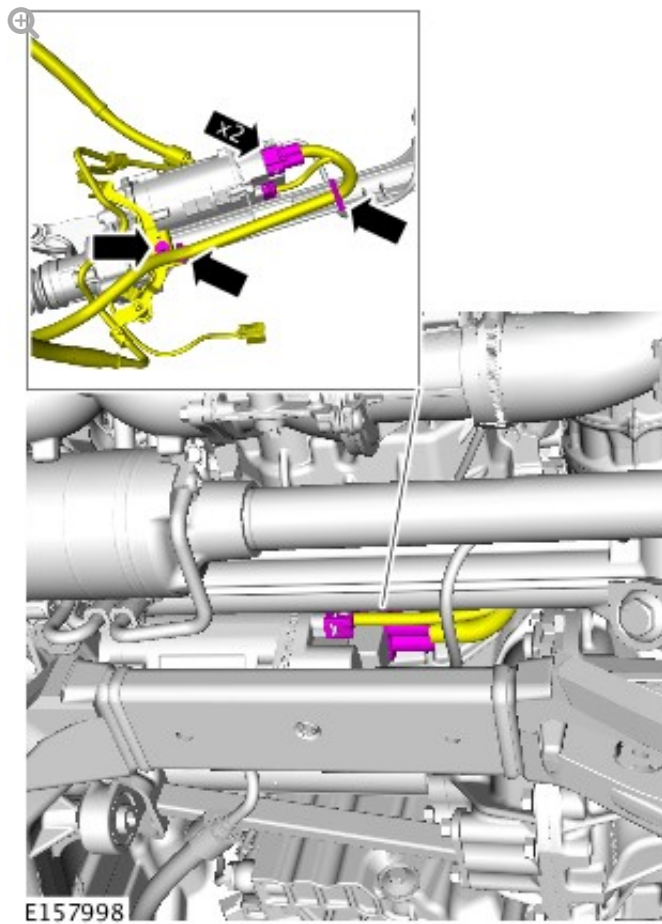


8. Remove the plastic transit caps.

9.

CAUTION:

LH illustration shown, RH is similar.

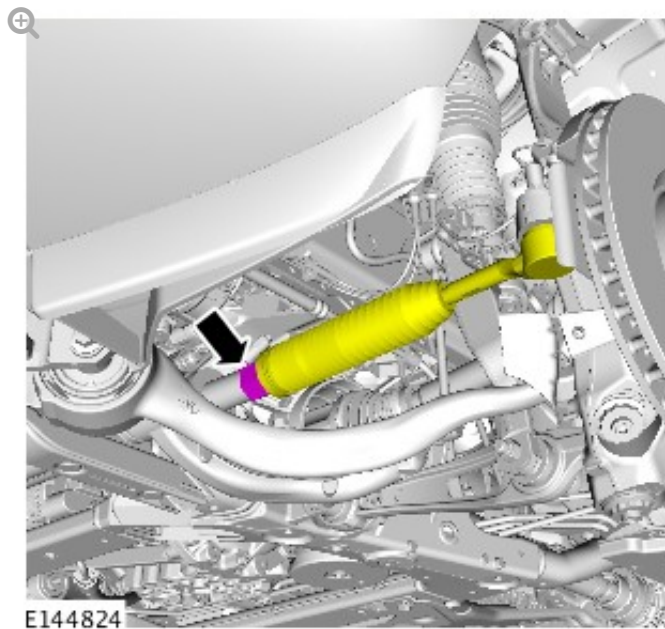

Repeat procedure for the other side.

Torque: 105 Nm


10.

CAUTION:

LH illustration shown, RH is similar.

NOTE:

Install a new retaining clip.

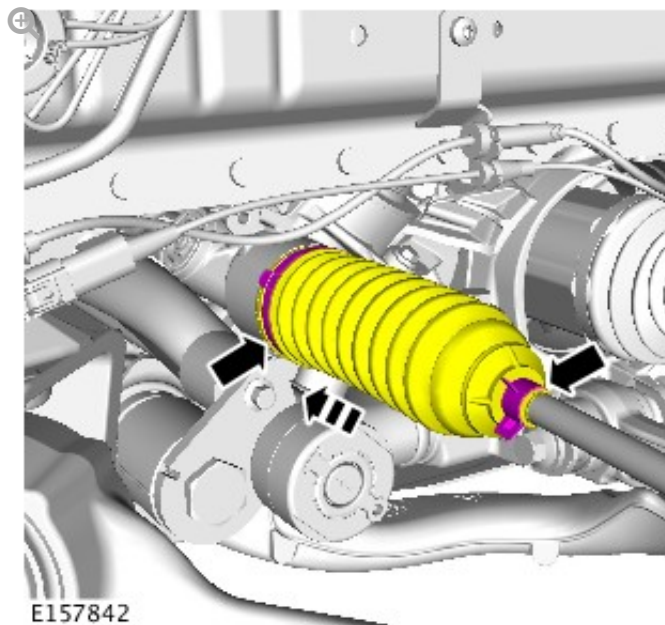


Repeat procedure for the other side.

11.

CAUTION:

Make sure that a new bolt is installed.

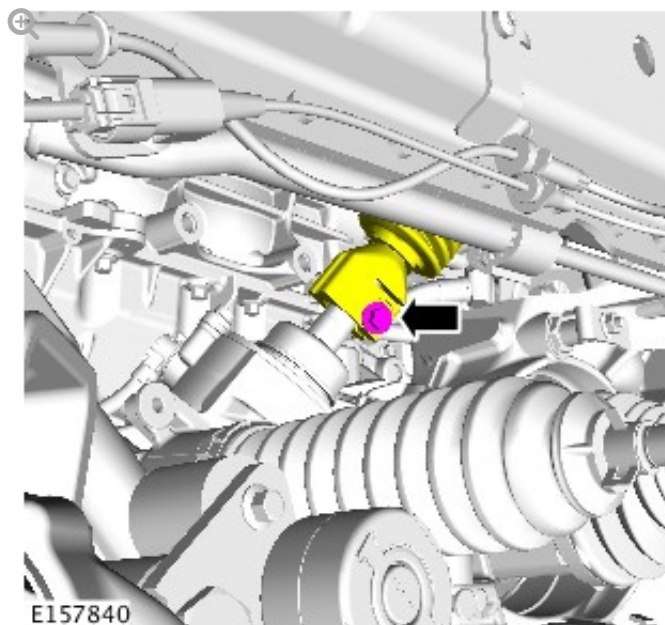

Using a suitable tool, clean out the threads.

Torque: 30 Nm

12. Repeat procedure for the other side.
Refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).
13. Refer to: [Engine Undershield](#) (501-02 Front End Body Panels, Removal and Installation).
14. Using the diagnostic tool, calibrate the new steering gear.
15. Using only four wheel alignment equipment approved by Land Rover, check and adjust the wheel alignment.
Refer to: [Four Wheel Alignment](#) (204-00 Suspension System - General Information, General Procedures).