

2016.0 RANGE ROVER (LG), 211-04

STEERING COLUMN

STEERING COLUMN (G1509122)

REMOVAL AND INSTALLATION

	COLUMN ASSEMBLY				
57.40.01	- INNER AND OUTER - RENEW	ALL DERIVATIVES	0.9	USED WITHINS	+

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Removal Step 13	Renew Part	Steering column lower shaft upper bolt

REMOVAL

CAUTION:

Make sure the steering is in the straight ahead position.

NOTES:


- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.

1. Make the air bag supplemental restraint system (SRS) system safe. Refer to: [Standard Workshop Practices](#) (100-00 General Information, Description and Operation).
2. Refer to: [Driver Airbag Module](#) (501-20B Supplemental Restraint System, Removal and Installation).

3.



CAUTION:

If a new steering column is installed, a new longer retaining bolt must be used to secure the steering wheel.

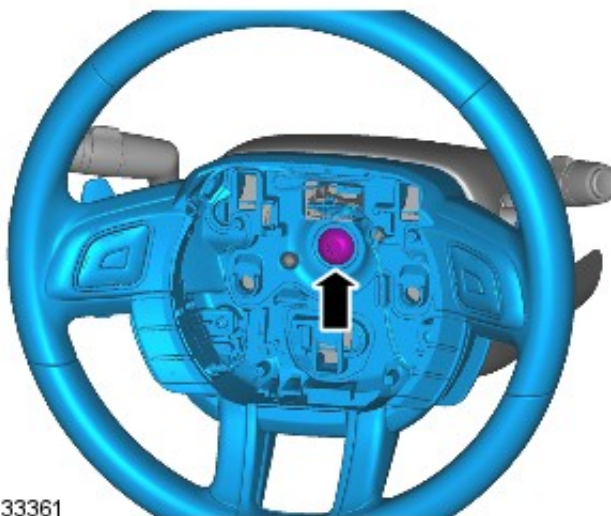



E133361

4.

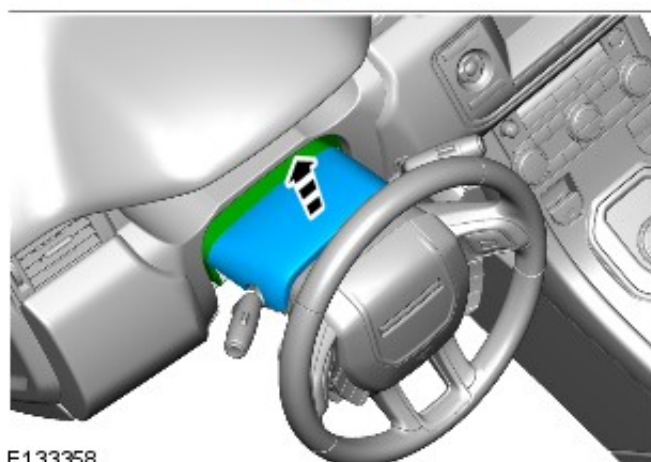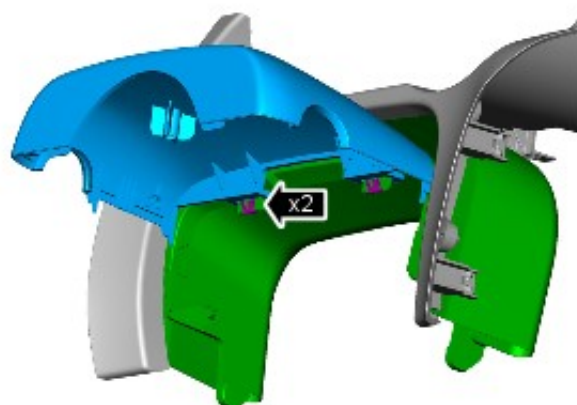


E133358

5.

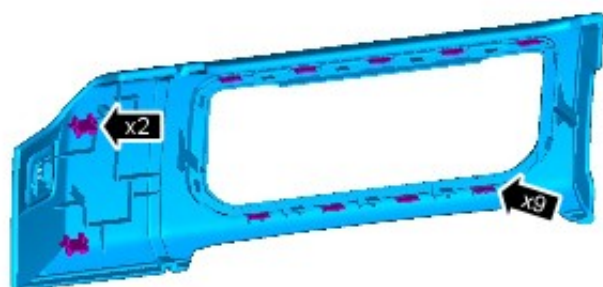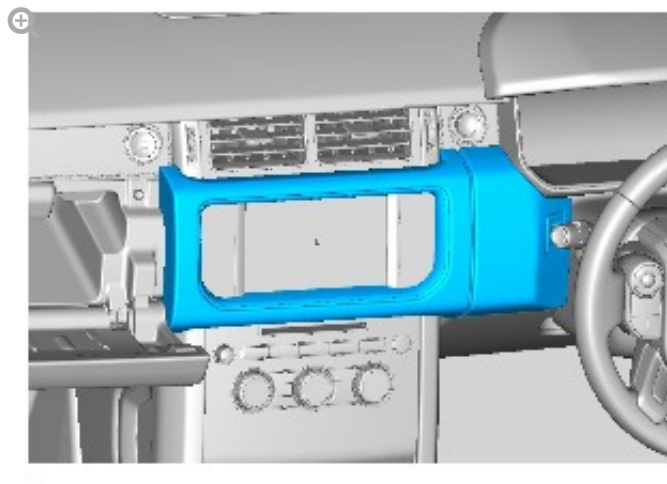


E146064

6.

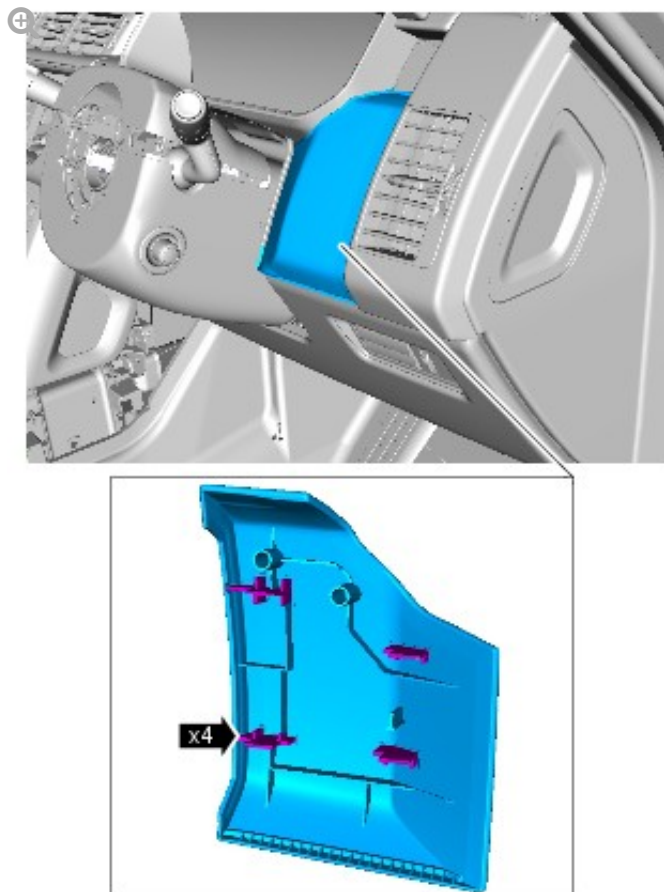



E148285

7.

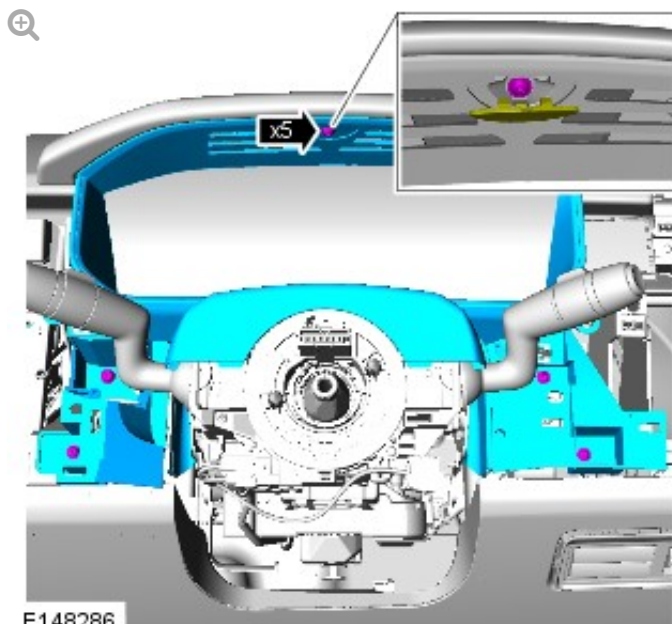


E148286

8.

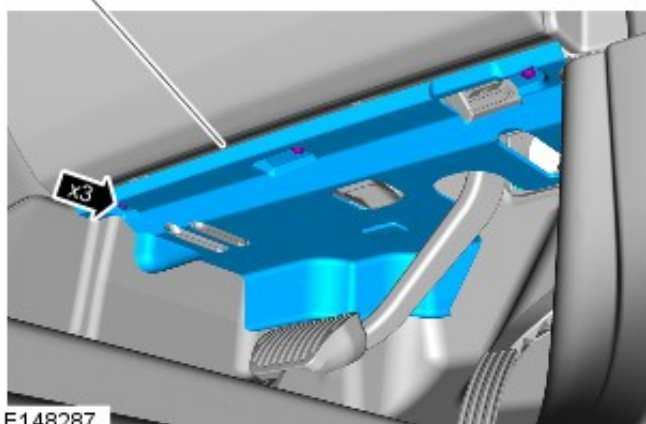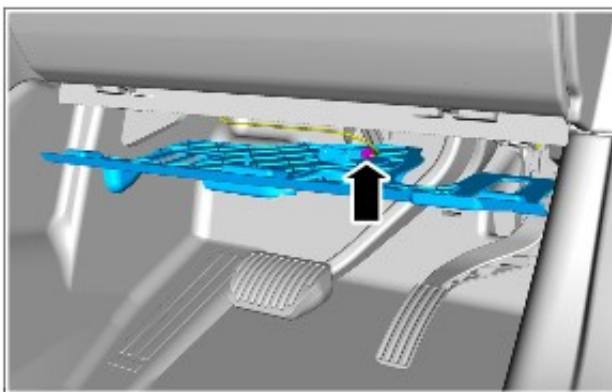


E148287

9.

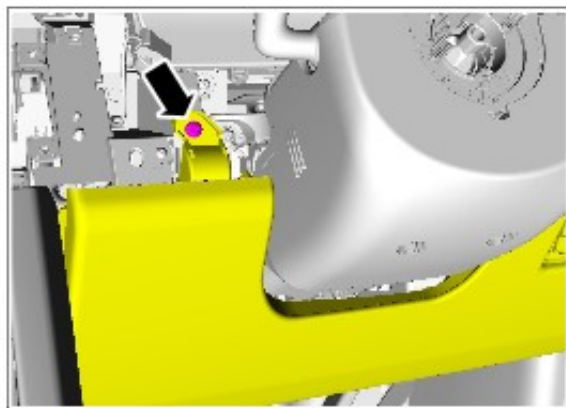


E148288

10.

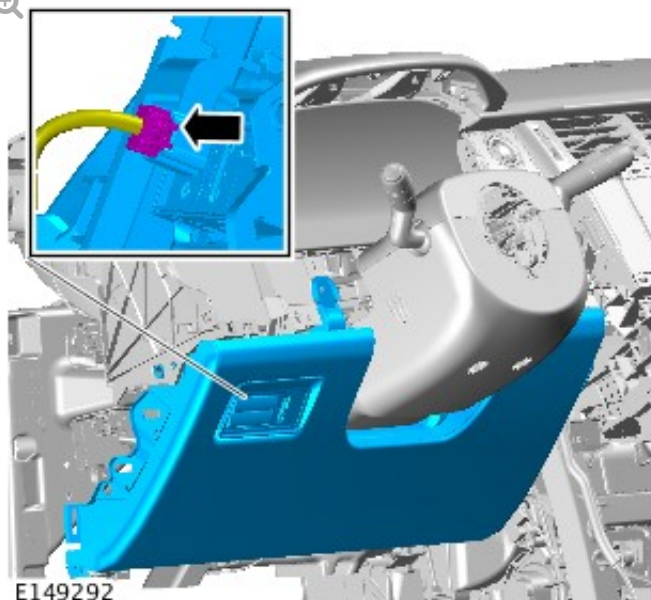


E149292

11.

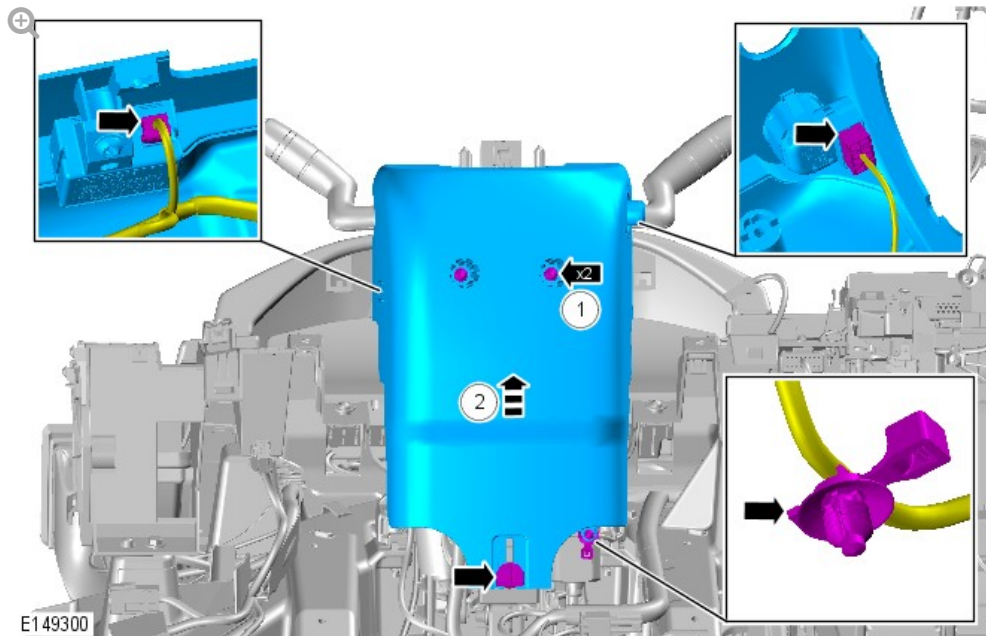


12.

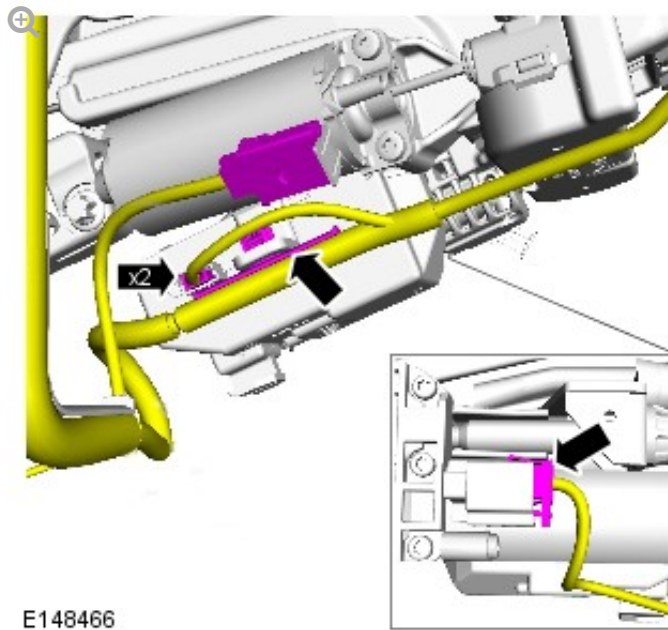

13.

CAUTION:


Discard the bolt.

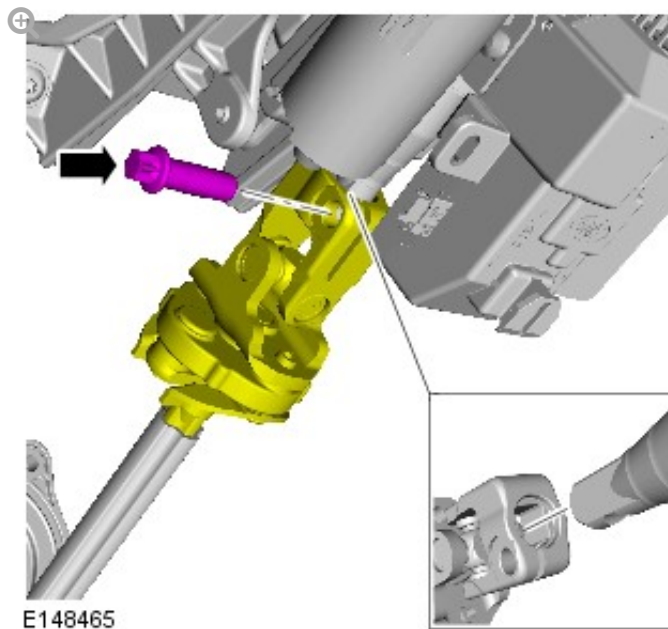

Renew Part: *Steering column lower shaft upper bolt.*

Torque: **44 Nm**

14.

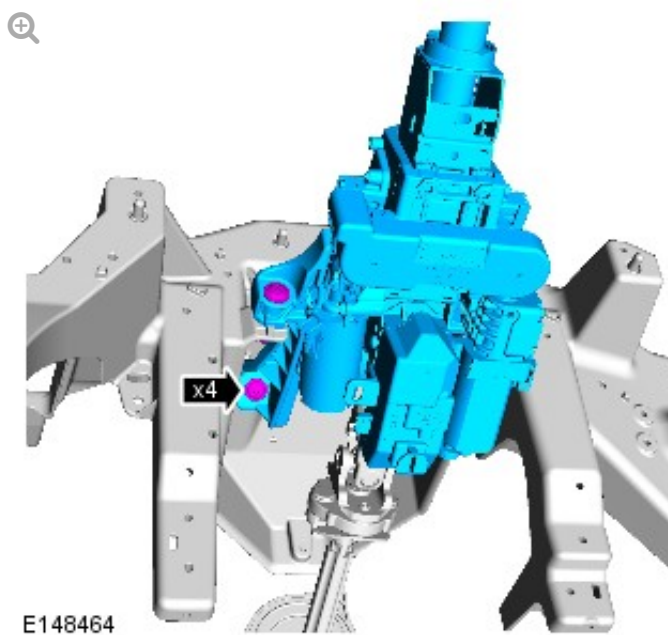


Torque: **25 Nm**

NOTE:

Do not disassemble further if component is removed for access only.

15.

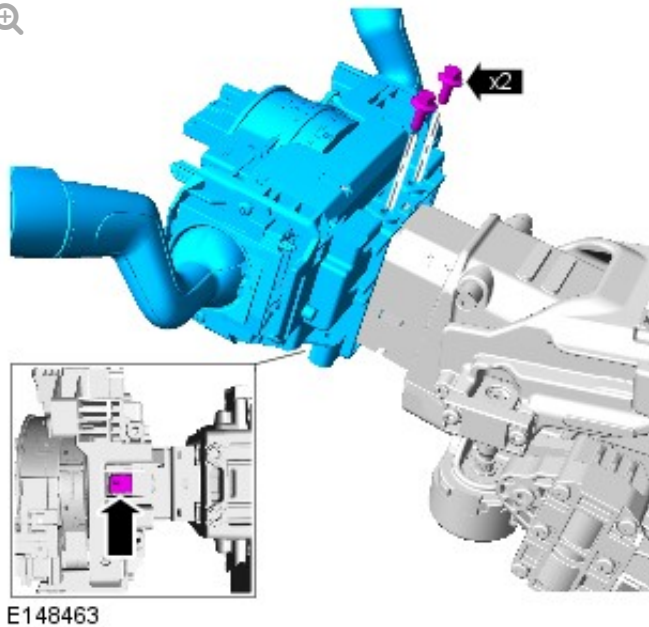

E148463

Torque: 3.5 Nm

NOTE:

Do not disassemble further if component is removed for access only.

INSTALLATION

1.

WARNING:

Make sure that a new steering column flexible coupling bolt is installed.

To install, reverse the removal procedure.

2. If a new component has been installed, configure using Land Rover approved diagnostic equipment.

