

2016.0 RANGE ROVER (LG), 211-04

STEERING COLUMN

STEERING COLUMN SHAFT

[G1509123]



REMOVAL AND INSTALLATION

57.40.22	SHAFT - COLUMN - INTERMEDIATE - RENEW	ALL DERIVATIVES	0.2	USED WITHINS	+
----------	--	--------------------	-----	-----------------	---

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Removal Step 18	Renew Part	Steering column lower shaft upper bolt
Removal Step 22	Renew Part	Steering column lower shaft lower bolt

REMOVAL

CAUTION:

Make sure the steering wheel is in the straight ahead position.


NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.
- Removal steps in this procedure may contain installation details.

1. Disconnect the battery ground cable.


Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

- 2.

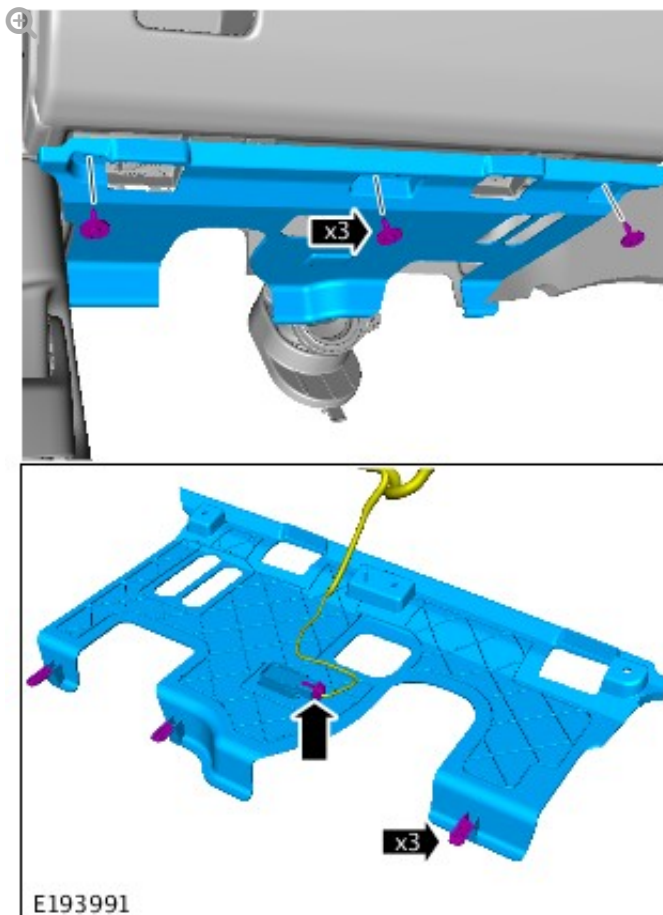


Remove the driver side closing trim panel.

3.

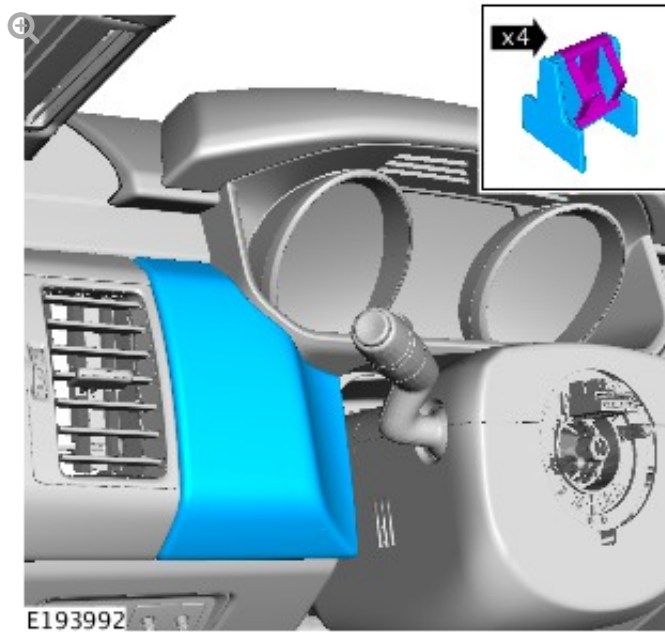


Remove the trim panel.

4.

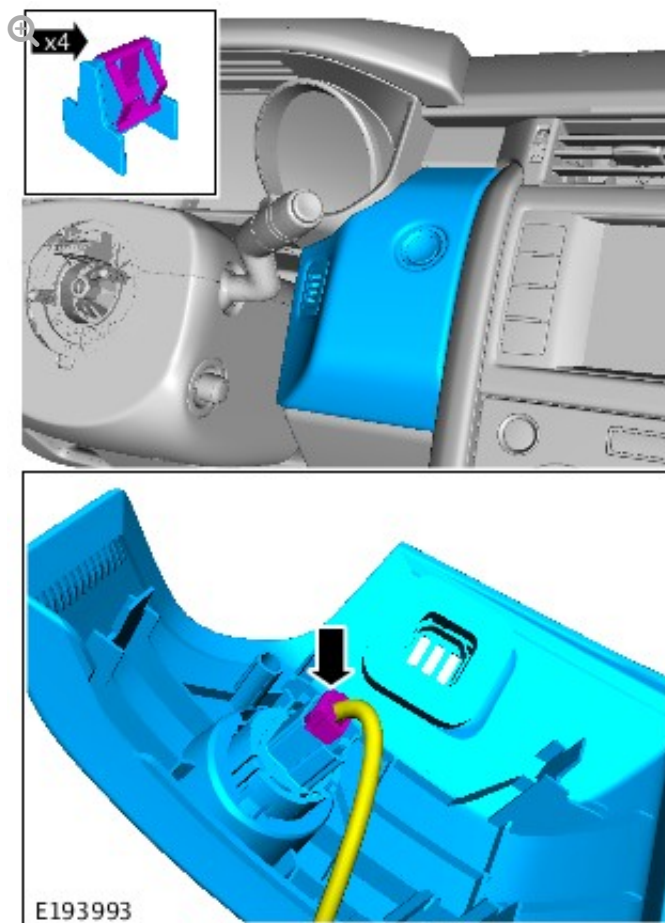


Remove the trim panel.

5.

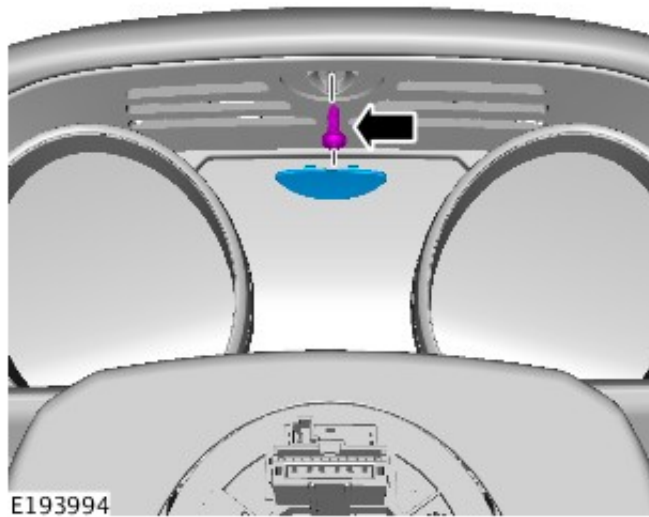


Remove the trim panel screw.

6.

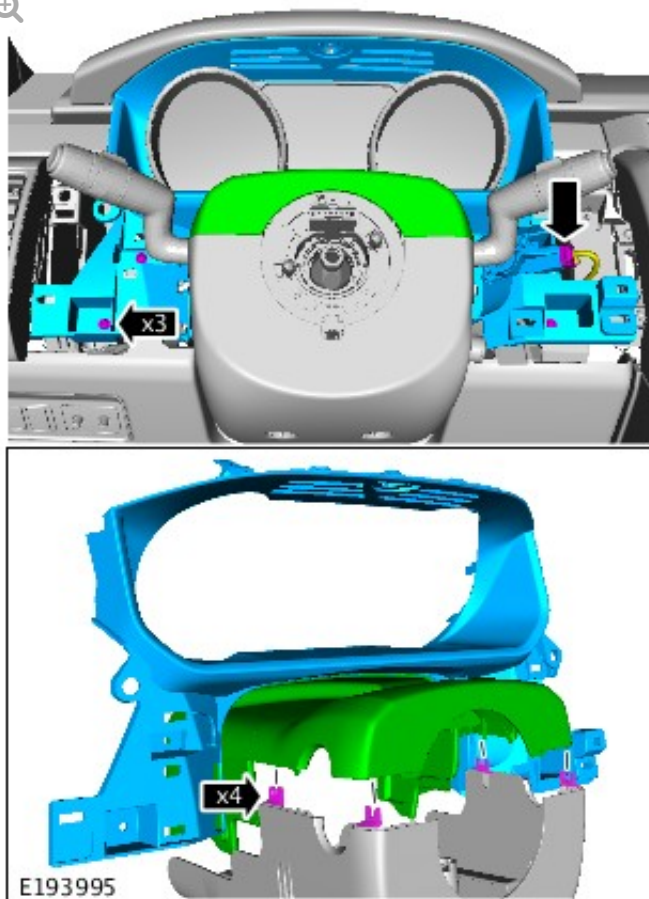


Remove the instrument cluster trim panel.

7.

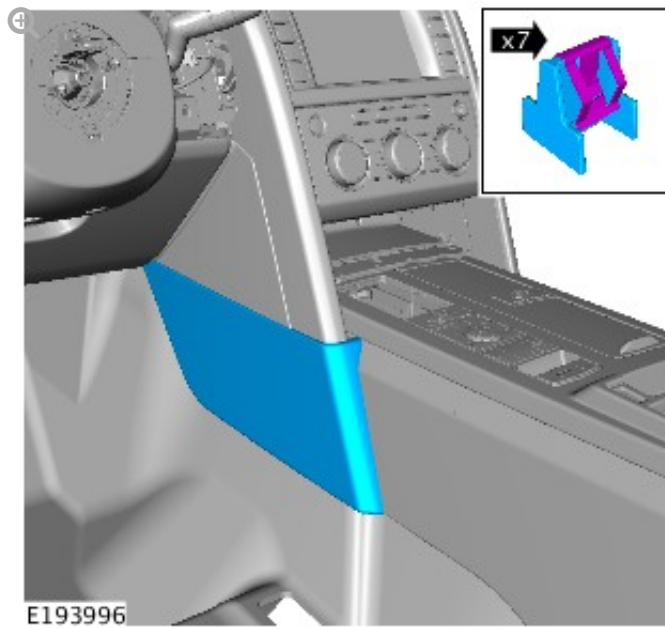


Remove the trim panel.

8.

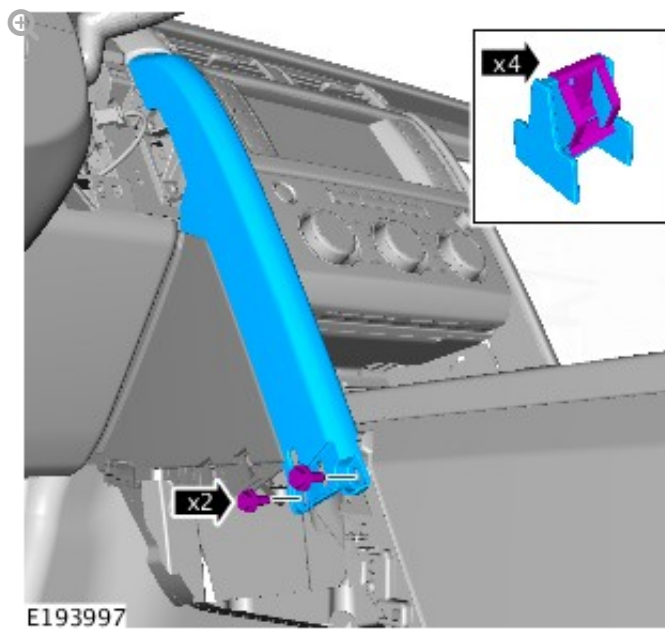


Remove the trim panel.

9.

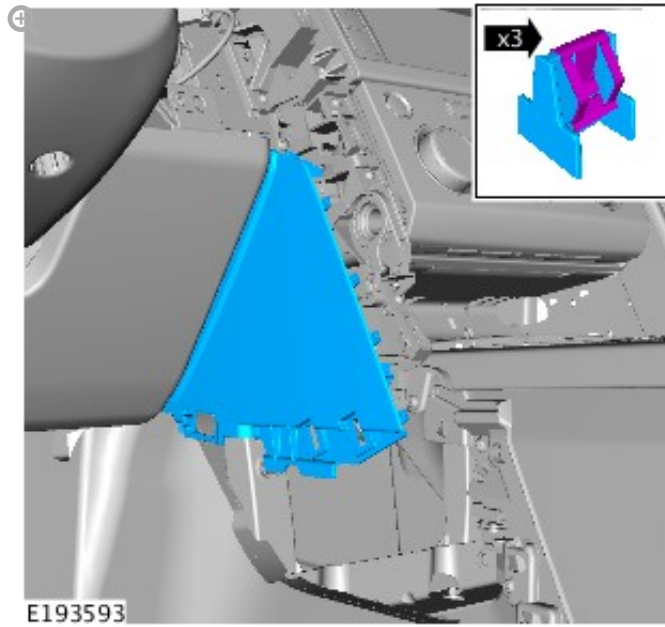


Remove the trim panel.

10.

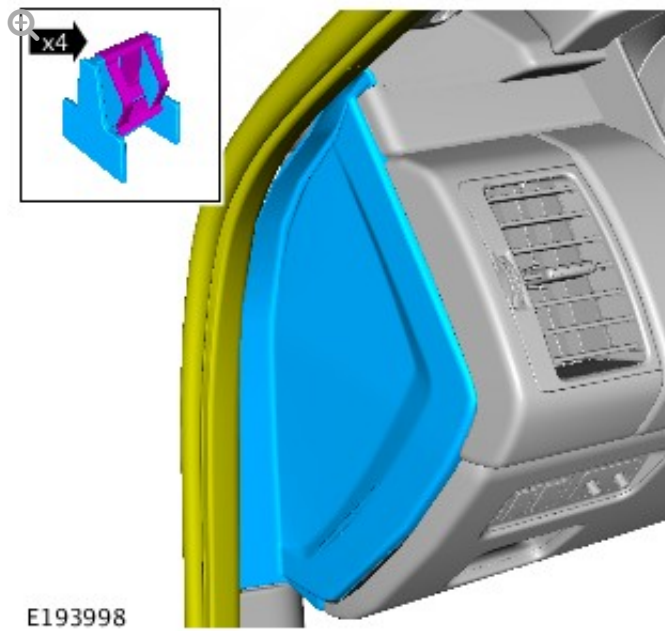


Remove the trim panel.

11.

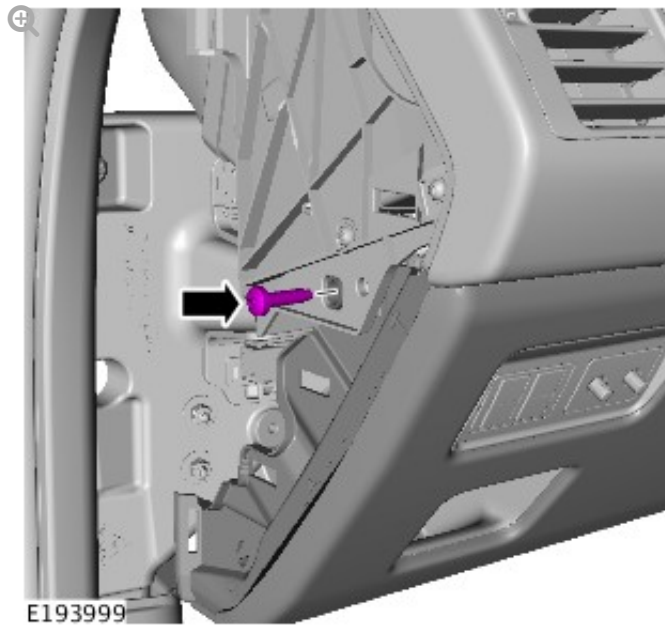

Remove the trim panel screw.

12.

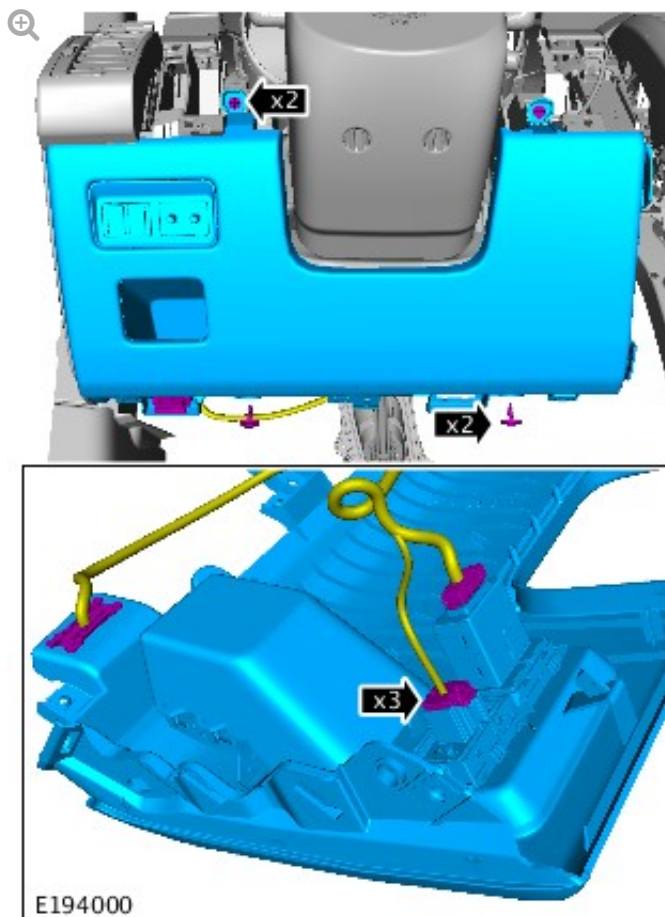

Remove the trim panel.

13. Remove the left side secondary bulkhead panel.

Refer to: [Secondary Bulkhead Left Panel](#) (501-02 Front End Body Panels, Removal and Installation).

14. Remove the right side secondary bulkhead panel.

Refer to: [Secondary Bulkhead Right Panel](#) (501-02 Front End Body Panels, Removal and Installation).


15. Remove the secondary bulkhead center panel.

Refer to: [Secondary Bulkhead Centre Panel - TDV6 3.0L Diesel](#) (501-02 Front End Body Panels, Removal and Installation).

Refer to: [Secondary Bulkhead Centre Panel - V6 S/C 3.0L Petrol](#) (501-02 Front End Body Panels, Removal and Installation).


Refer to: [Secondary Bulkhead Right Panel](#) (501-02 Front End Body Panels, Removal and Installation).

- 16.

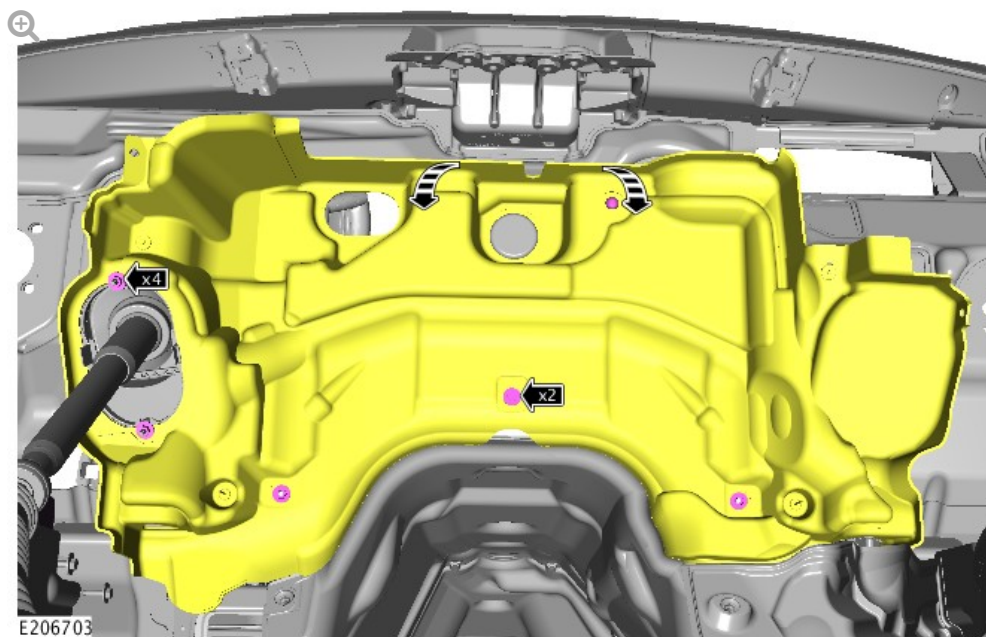


- Remove the 4 secondary bulkhead center panel retaining bolts.
Torque: 6 Nm
- Remove the secondary bulkhead center panel.

17.

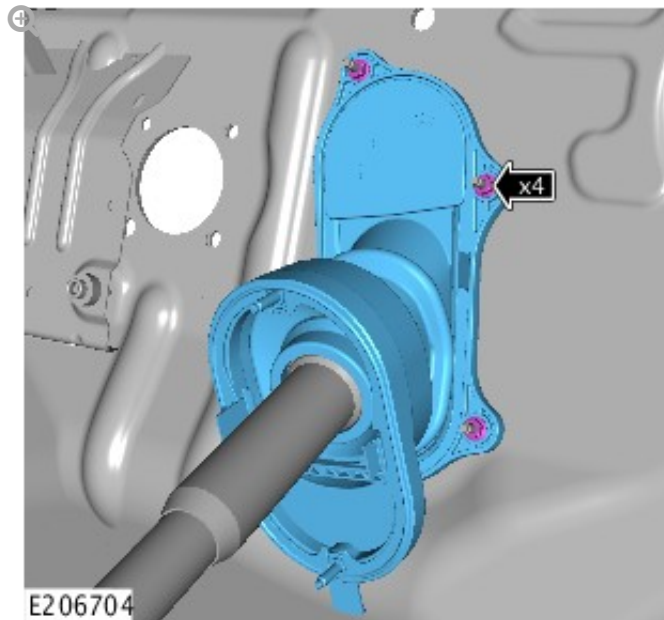

- Remove the 4 steering column gaiter retaining bolts.
Torque: 12 Nm
- Remove the steering column gaiter.

18.

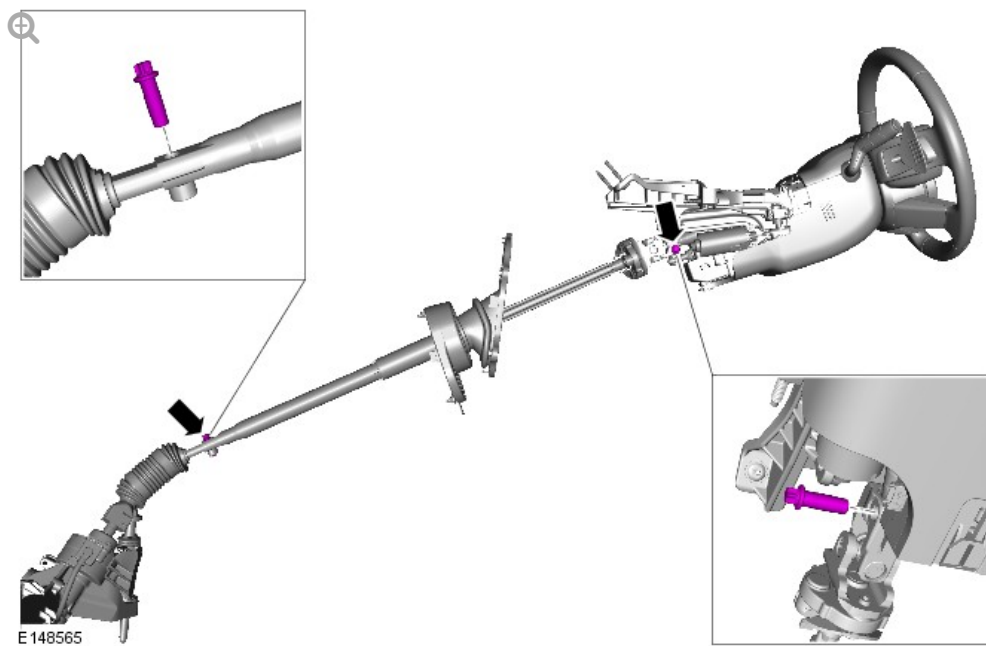


Discard the bolts


Renew Part: *Steering column lower shaft upper bolt.*

Torque: 44 Nm

19.

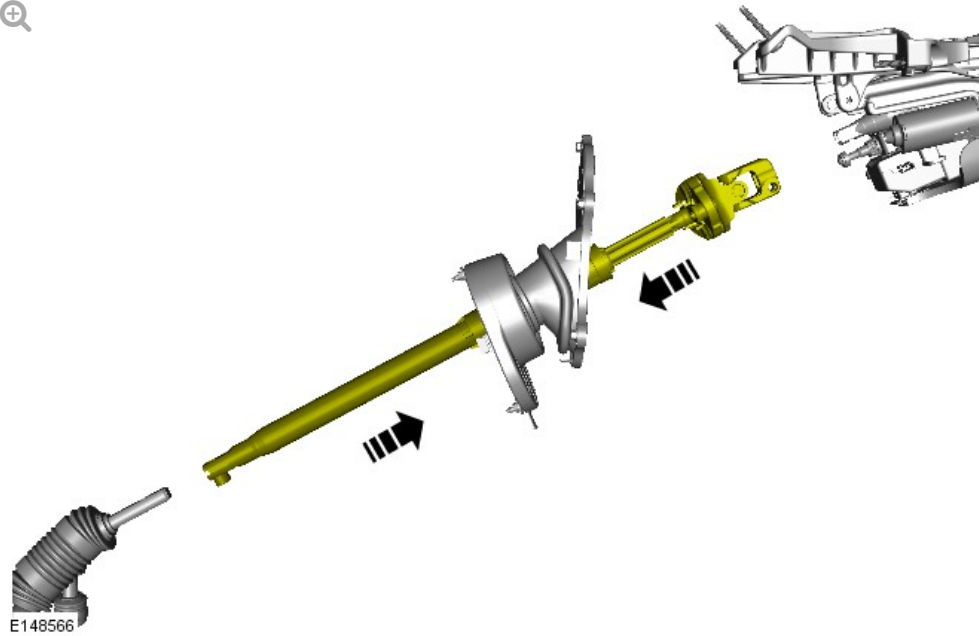


20.

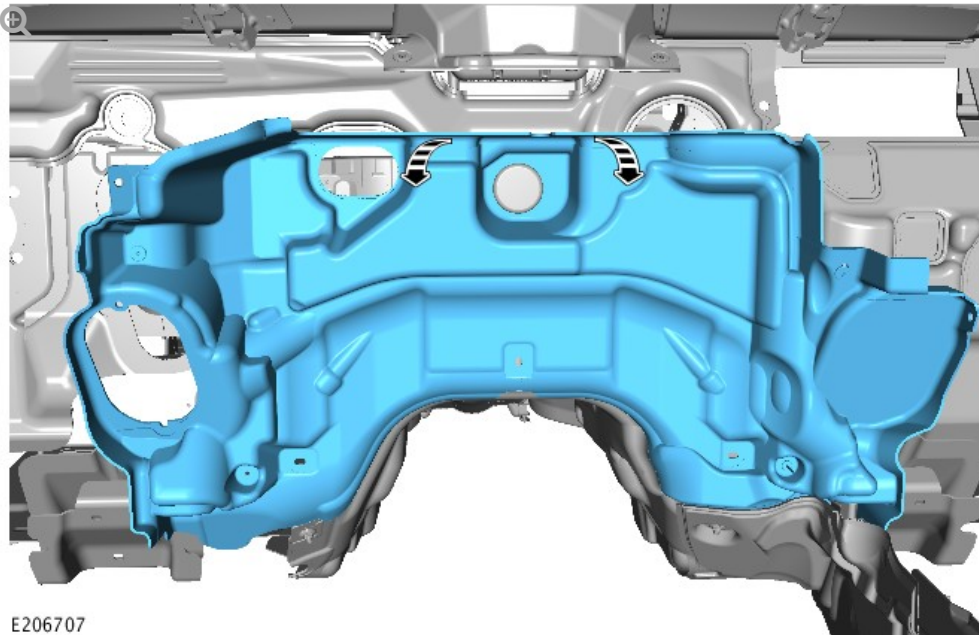


Remove the steering column secondary bulkhead.

21.

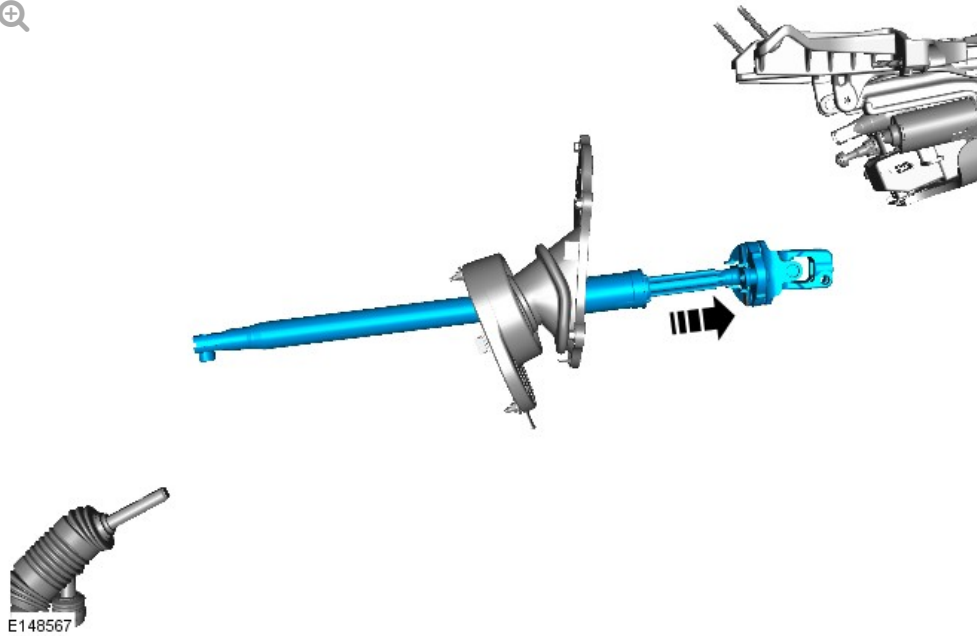

22.

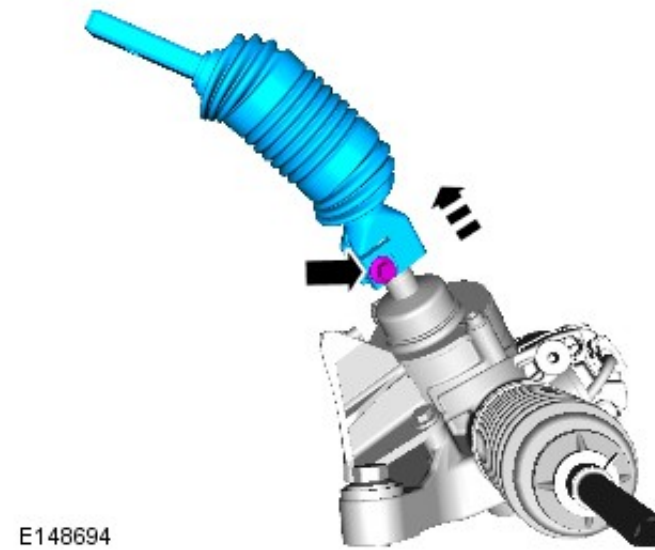

Discard the bolt.

Renew Part: *Steering column lower shaft lower bolt.*

Torque: 30 Nm

INSTALLATION

1. To install, reverse the removal procedure.

