

2016.0 RANGE ROVER (LG), 211-04

STEERING COLUMN

STEERING WHEEL (G1509124)

REMOVAL AND INSTALLATION

57.61.01	STEERING WHEEL - RENEW	ALL DERIVATIVES	0.4	USED WITHINS	+
----------	------------------------------	--------------------	-----	-----------------	---

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 7	Renew Part	Steering wheel retaining bolt

REMOVAL


CAUTION:

Make sure that the road wheels are in the straight ahead position.

NOTE:


- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1. Disconnect the startup battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).
2. Make the Supplementary Restraint System (SRS) safe.
Refer to: [Airbag Supplemental Restraint System](#) (501-20B Supplemental Restraint System, Diagnosis and Testing).
3. Remove the driver airbag.
Refer to: [Driver Airbag Module](#) (501-20B Supplemental Restraint System, Removal and Installation).

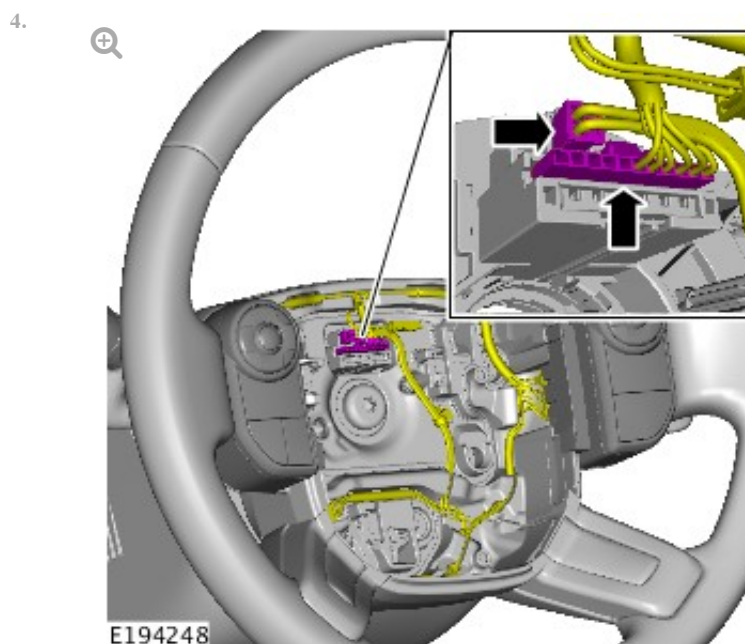

Disconnect the 2 electrical connectors.


5.

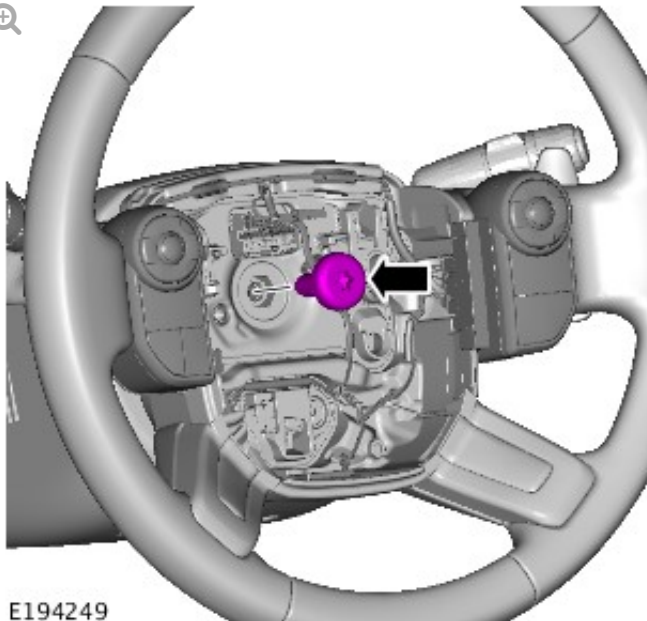

E194249

Remove the steering wheel retaining bolt.

6.

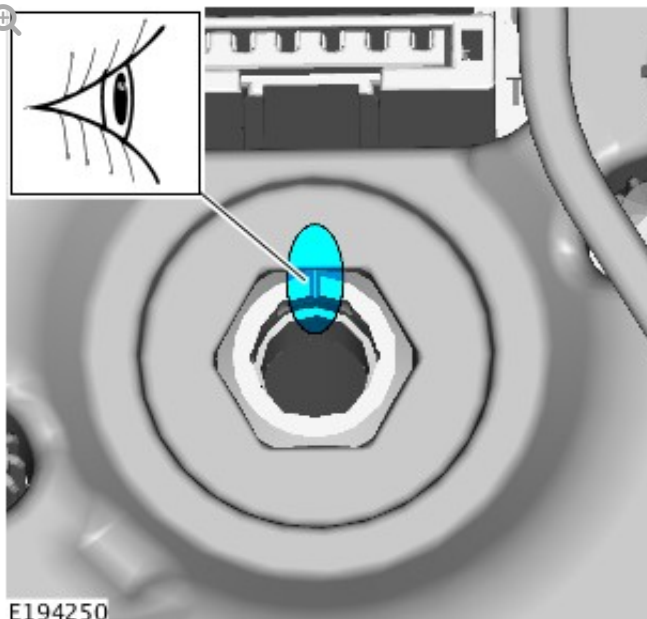


E194250

Note the steering wheel to column alignment mark.

7.

NOTE:

Do not disassemble further if the component is removed for access only.

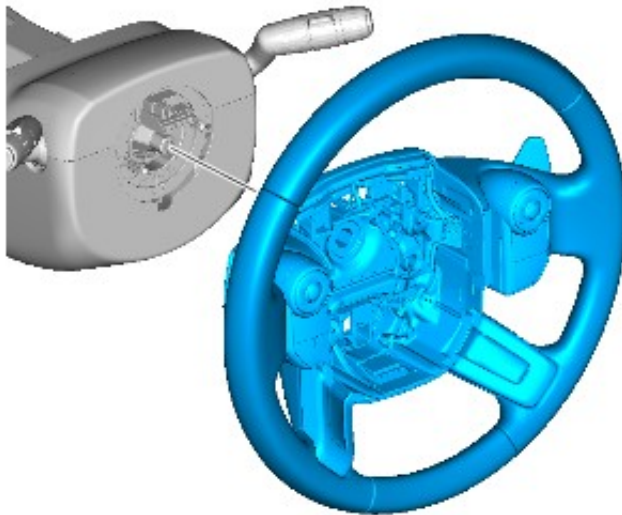


E194251

Remove the steering wheel.

8.

CAUTION:


Make sure that the clockspring rotor does not rotate.

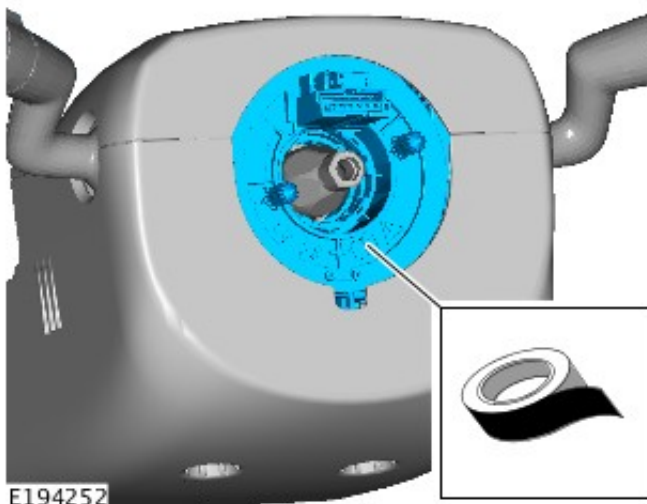

E194252


Secure with adhesive tape.

9.

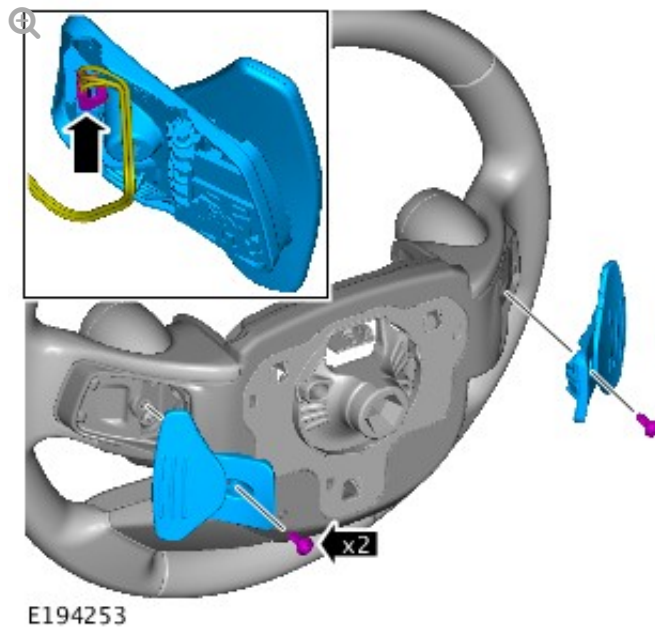


Remove the 2 paddle shifter mounting bracket screws.

10.

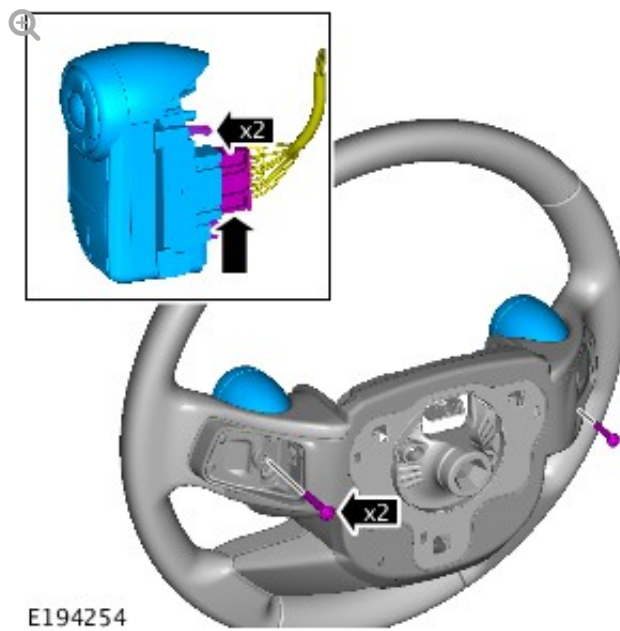

Remove the speed control switch and steering wheel audio controls.

11.

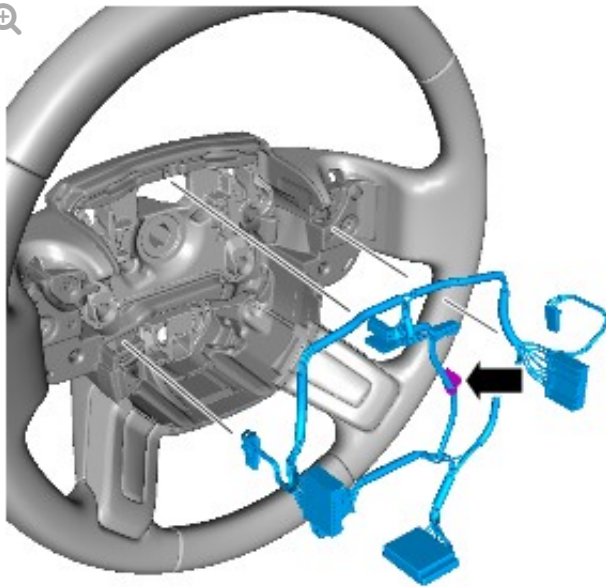


E194255

Remove the steering wheel wiring harness.

INSTALLATION


1.

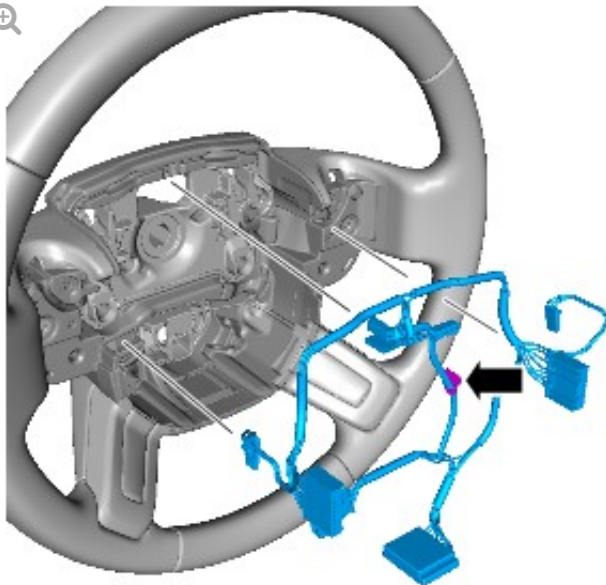

E194255


Install the steering wheel wiring harness.

2.

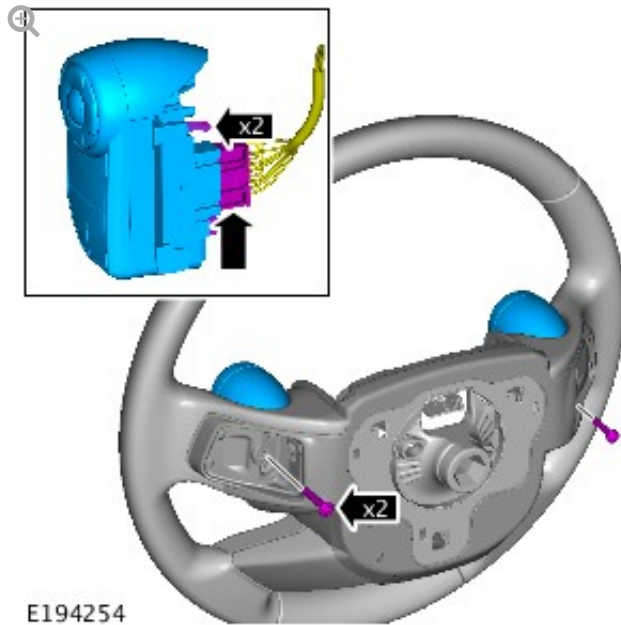

Install the speed control switch and steering wheel audio controls.

3.

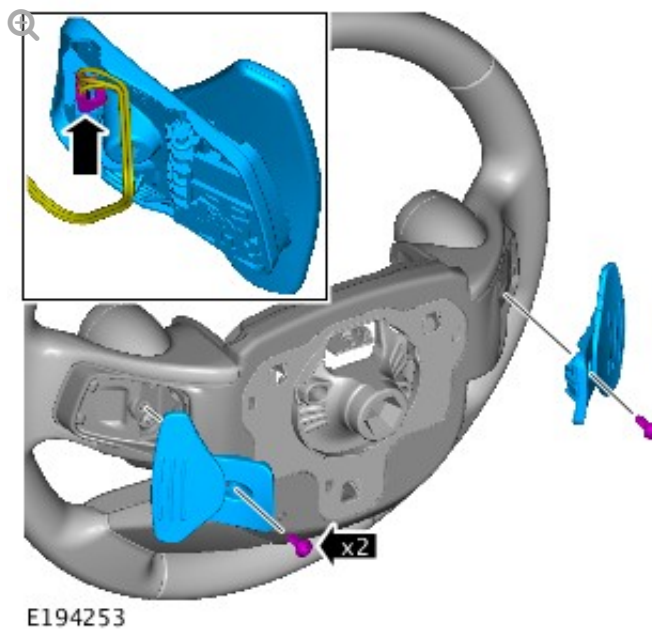


Install the 2 paddle shifter mounting bracket screws.

4.


CAUTION:

Make sure that the clockspring rotor does not rotate.

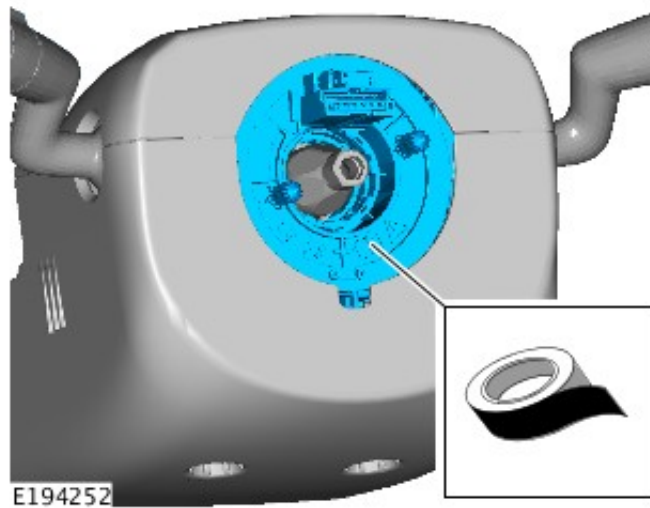


Remove the adhesive tape.

5.

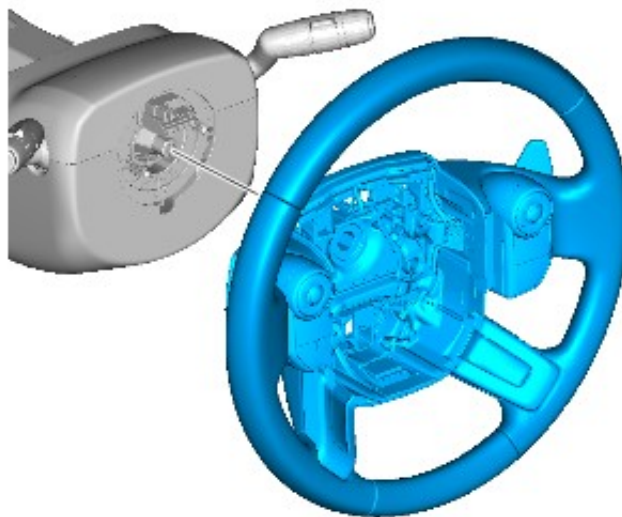

Carefully install the steering wheel, align the clockspring and align to the steering column.

6.

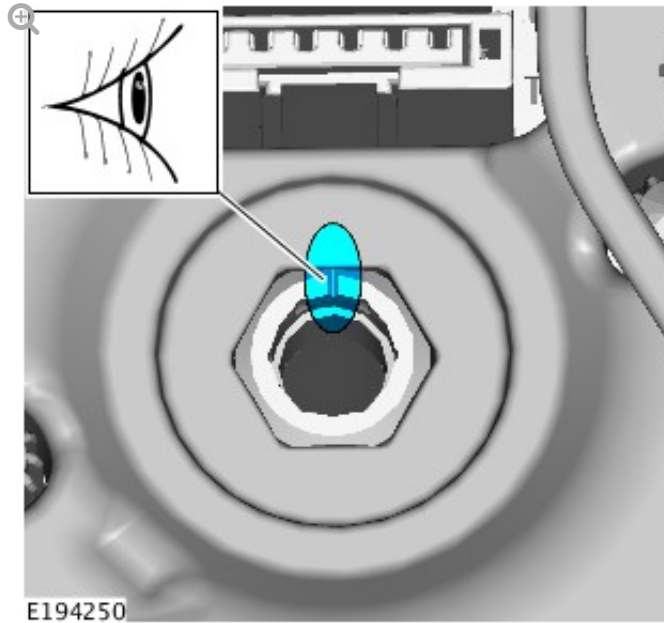


Note the steering wheel to column alignment mark.

7.

CAUTION:

If a new steering column is installed, a new longer retaining bolt must be used to secure the steering wheel.

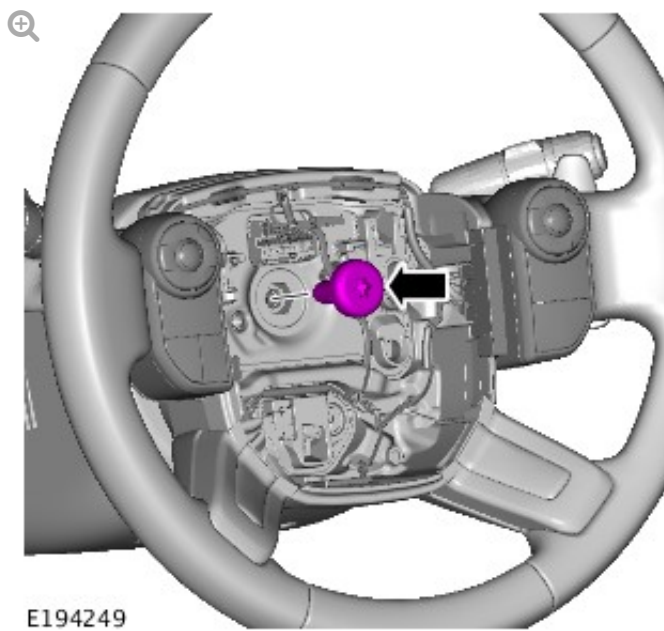


- Carefully install the steering wheel, align the clockspring and align to the steering column.

Renew Part: [Steering wheel retaining bolt](#).

Torque: **47 Nm**

8.

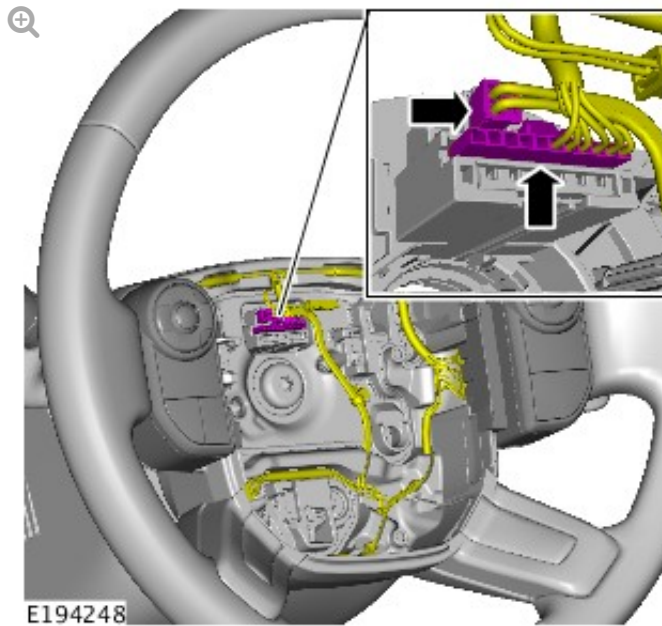

Install the 2 electrical connectors.

9. Install the driver airbag.

Refer to: [Driver Airbag Module](#) (501-20B Supplemental Restraint System, Removal and Installation).

10. Connect the startup battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

11. If a new component is installed, the soft lock stop reset routine should be completed on the power steering system, using the approved diagnostic tool.