

2016.0 RANGE ROVER (LG), 211-03

STEERING LINKAGE

STEERING GEAR BOOT (G1551582)

REMOVAL AND INSTALLATION

57.10.29	BOOT - EACH - RENEW	ALL DERIVATIVES	1.3	USED WITHINS	+
----------	---------------------------	--------------------	-----	-----------------	---

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 1	Renew Part	Steering gear boot kit

REMOVAL

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.
- Removal steps in this procedure may contain installation details.

1. Raise and support the vehicle on a suitable 2 post lift.
Refer to: [Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

2. Remove the tie rod end.

Refer to: [Tie Rod End](#) (211-03 Steering Linkage, Removal and Installation).


- 3.

CAUTION:

Make sure that the area around the component is clean and free of foreign material.

NOTE:

Note the position of the components prior to removal.

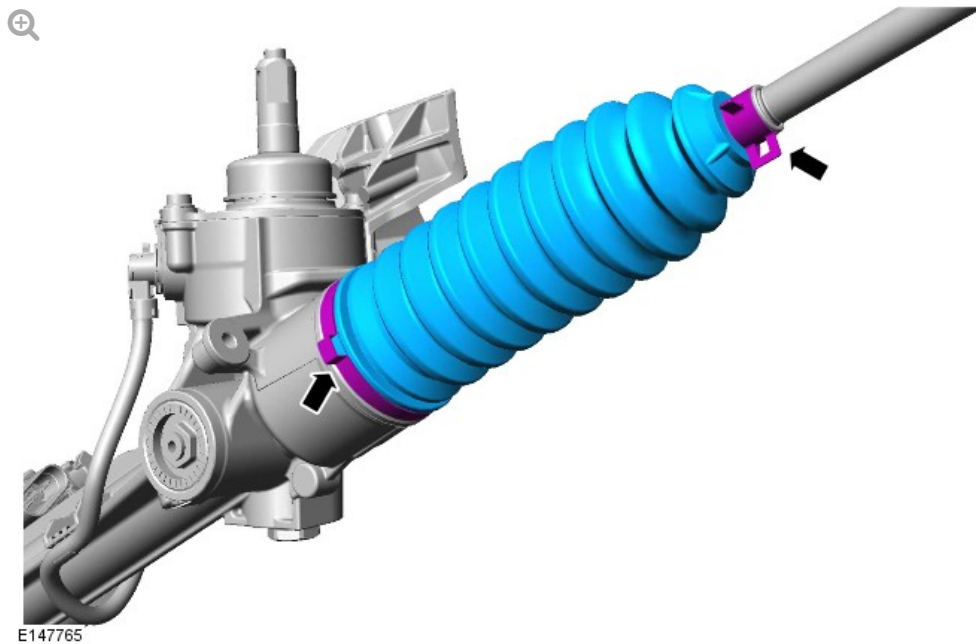

Remove and discard both retaining clips.

INSTALLATION


1.

CAUTION:

Make sure that the area around the component is clean and free of foreign material.

NOTE:

Note the position of the components prior to removal.

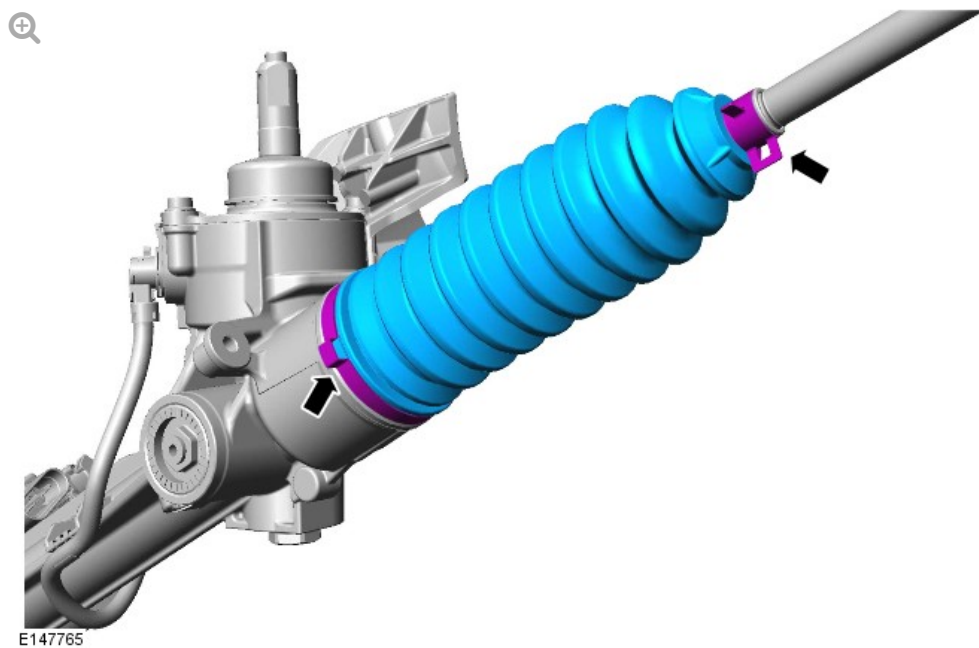

Install a steering gear boot. Make sure that 2 new retaining clips are installed.

Renew Part: [Steering gear boot kit](#).

2. Remove the tie rod end.

Refer to: [Tie Rod End](#) (211-03 Steering Linkage, Removal and Installation).