

2016.0 RANGE ROVER (LG), 204-01

FRONT SUSPENSION

FRONT WHEEL BEARING (G1509289)

REMOVAL AND INSTALLATION


	BEARINGS				
60.25.14	- HUB -	ALL	1.5	USED	+
	ONE SIDE	DERIVATIVES		WITHINS	
	- RENEW				

SPECIAL TOOL(S)



204-250

Wheel bearing
install and removal
tool

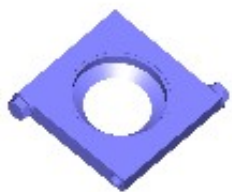

E117832

204-305

Remover, Wheel
Bearing



E101990

204-726

204-726

Remover/Installer,
Wheel Bearing



E136166

JLR-204- 807

Installer, Front
Wheel Bearing



E136165

JLR-204- 808

Installer, Front
Wheel Bearing



JLR-204-811

Support, Hub

GENERAL EQUIPMENT

EQUIPMENT NAME

Copper Hammer
Hydraulic press
Punch
Vise

REMOVAL

1.


WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2. Refer to: [Wheel Knuckle](#) (204-01 Front Suspension, Removal and Installation).


3.

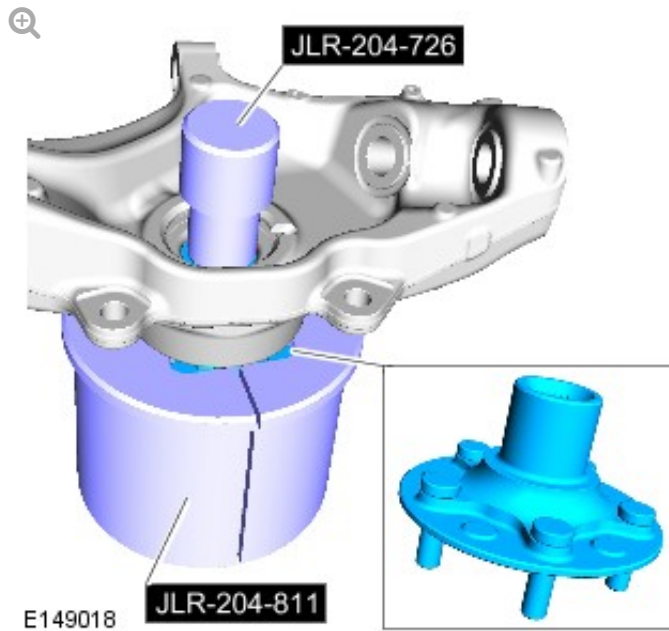

Special Tool(s): 204-726, JLR-204-811

General Equipment: Hydraulic press

4.

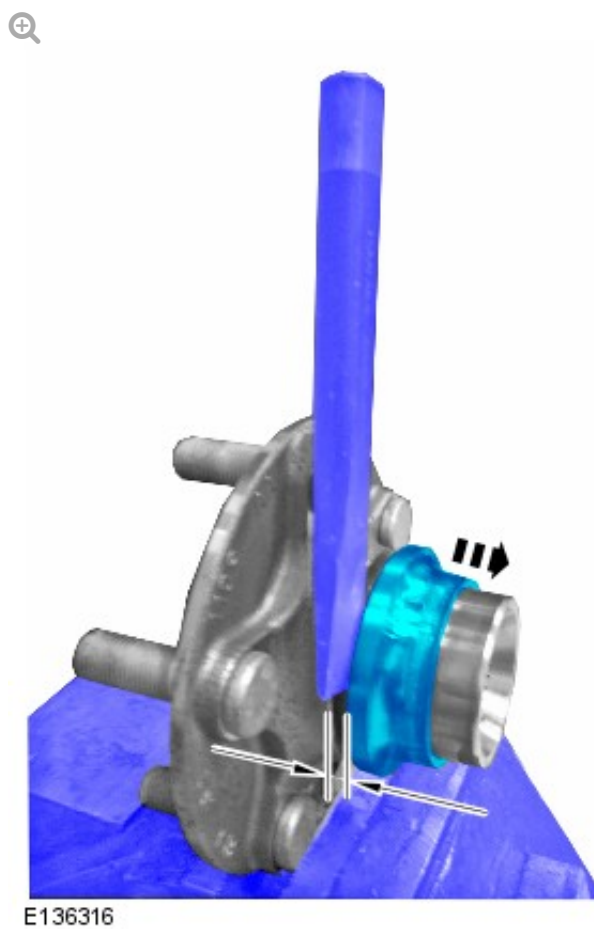


General Equipment: Vise

General Equipment: Copper Hammer

General Equipment: [Punch](#)

5.


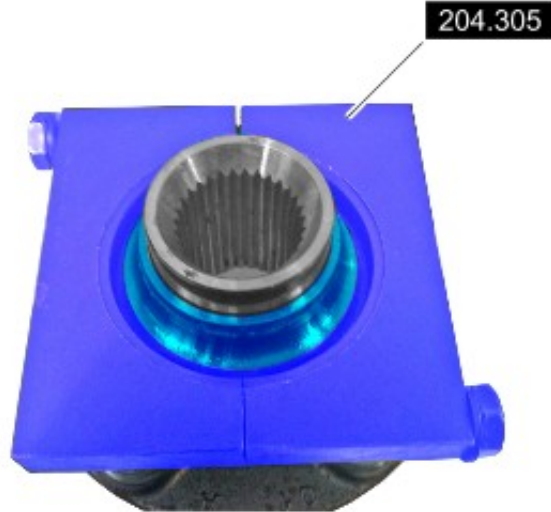


E136317

Special Tool(s): [204-305](#)

General Equipment: [Hydraulic press](#)


6.

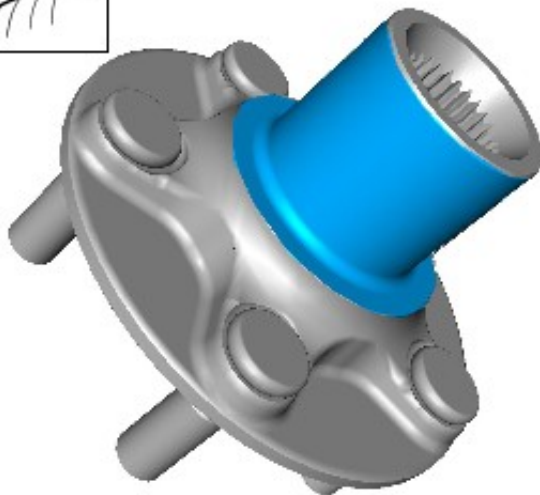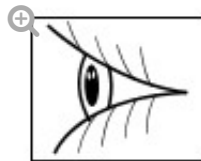

E136320

Clean all the mating faces and reusable parts thoroughly and check for damage


7.

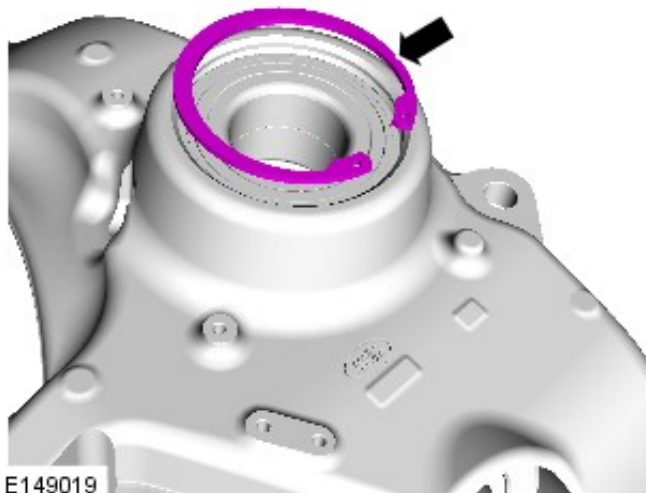

8.

NOTE:

Note the orientation of the component prior to removal.

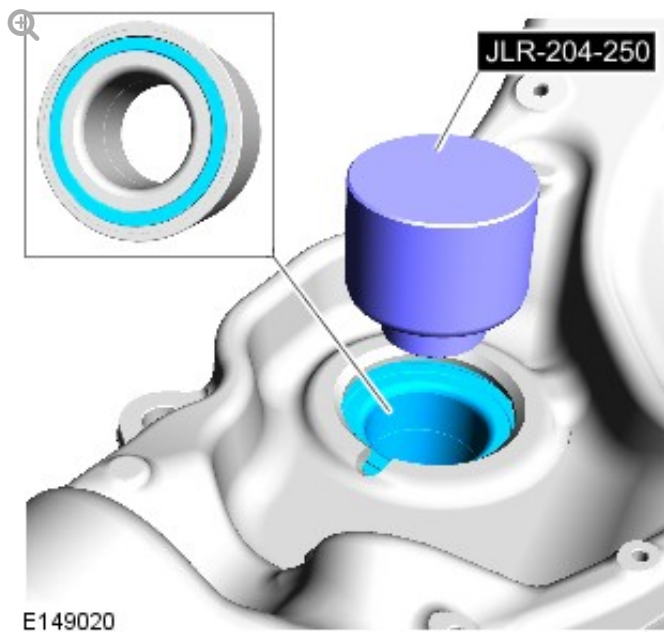

Special Tool(s): [204-250](#)

General Equipment: [Hydraulic press](#)

INSTALLATION


1.

CAUTION:

Make sure that the area around the component is clean and free of foreign material.

NOTE:


Make sure that the component is installed to the noted removal position.

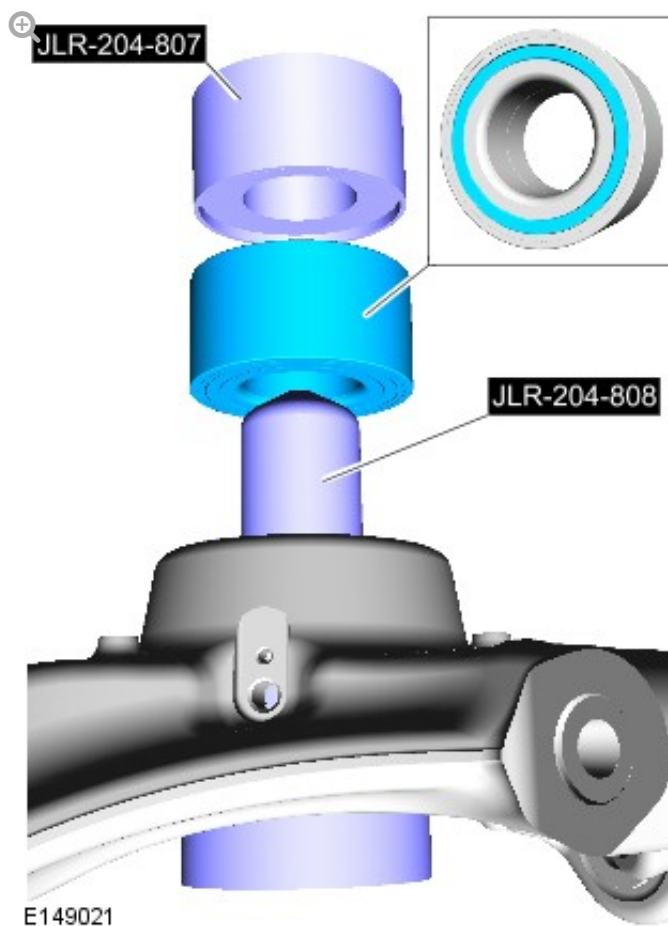

Special Tool(s): JLR-204-808, JLR-204-807


General Equipment: Hydraulic press

2.

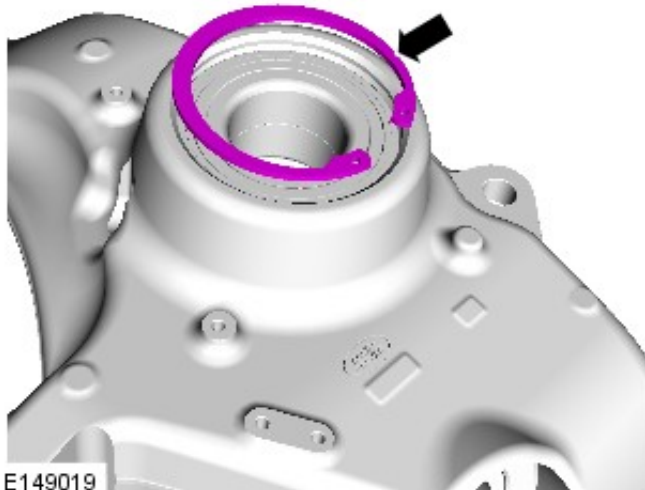

E149019

3.

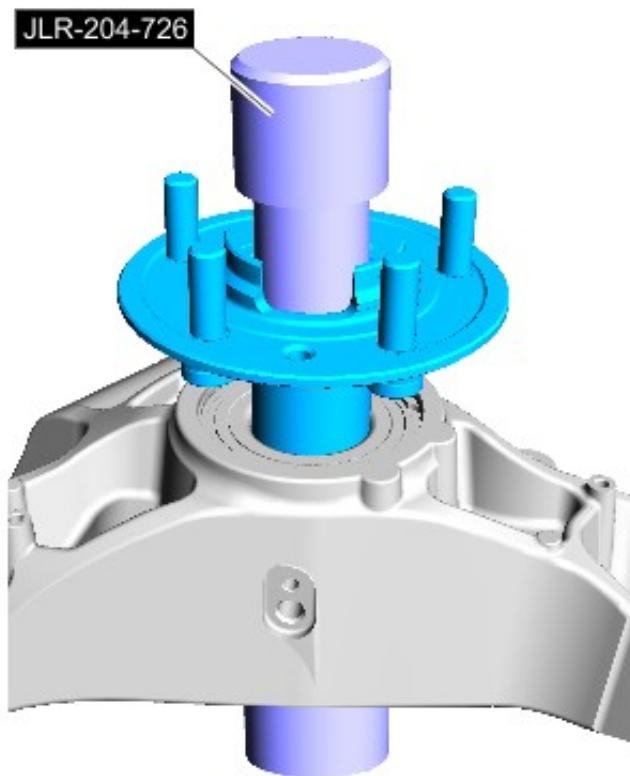

E149022

Special Tool(s): [204-726](#)

General Equipment: [Hydraulic press](#)

4. Refer to: [Wheel Knuckle](#) (204-01 Front Suspension, Removal and

Installation).