

2016.0 RANGE ROVER (LG), 204-01

FRONT SUSPENSION

LEFT UPPER ARM (G1560568)

REMOVAL AND INSTALLATION

	SUSPENSION				
	ARM				
60.35.06	ASSEMBLY -	3000 CC,	0.6	USED	+
	UPPER -	TDV6		WITHINS	
	LEFT -				
	RENEW				

SPECIAL TOOL(S)



E145966

JLR-204-803

Splitter, Upper Arm

GENERAL EQUIPMENT

EQUIPMENT NAME	

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Step 5	Renew Part	Front suspension upper arm ball joint to knuckle nut and bolt

REMOVAL

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.



All vehicles

1.

WARNING:

Do not work on or under a vehicle supported only by a jack.
Always support the vehicle on safety stands.

Raise and support the vehicle.

2. Refer to: [Left Air Cleaner](#) (303-12A Intake Air Distribution and Filtering - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).

Refer to: [Left Air Cleaner](#) (303-12E Intake Air Distribution and Filtering - TDV8 4.4L Diesel, Removal and Installation).

Refer to: [Left Air Cleaner](#) (303-12C Intake Air Distribution and Filtering - V8 N/A 5.0L Petrol, Removal and Installation).

Refer to: [Left Air Cleaner](#) (303-12D Intake Air Distribution and

Filtering - V8 S/C 5.0L Petrol, Removal and Installation).




Vehicles with diesel engine

3. Refer to: [Fuel Filter Element](#) (310-01E Fuel Tank and Lines - SDV6 3.0L Diesel - Hybrid Electric Vehicle, Removal and Installation).
Refer to: [Fuel Filter Element](#) (310-01D Fuel Tank and Lines - TDV8 4.4L Diesel, Removal and Installation).



Vehicles with petrol engine


4.

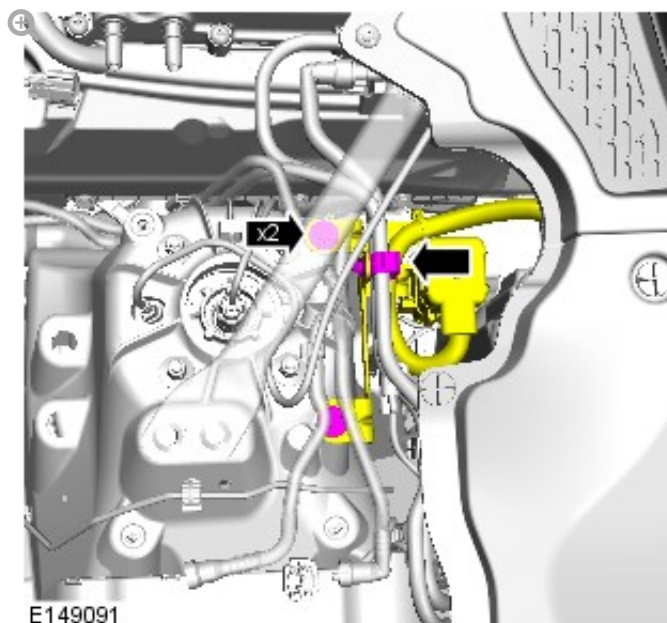

All vehicles

5. Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).
6. Using the Land Rover approved diagnostic system, depressurize the air suspension.
Refer to: [Air Suspension System Depressurize and Pressurize](#) (204-


7.

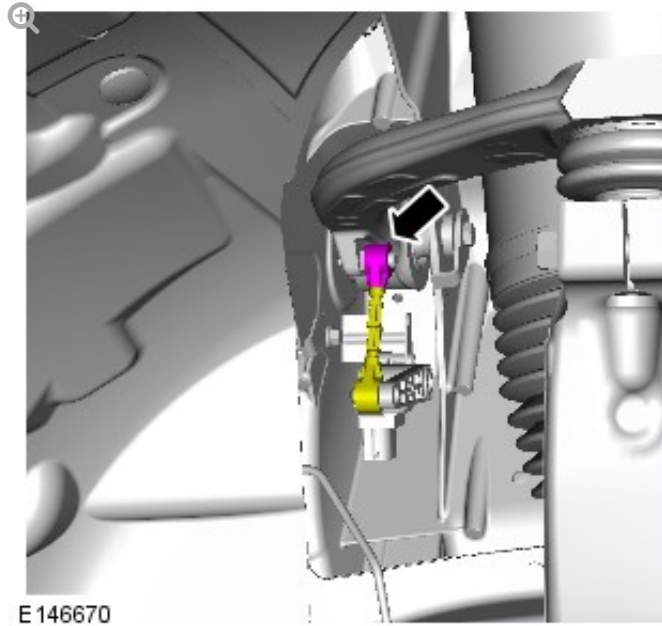


8.

CAUTION:

Discard the nut and bolt.

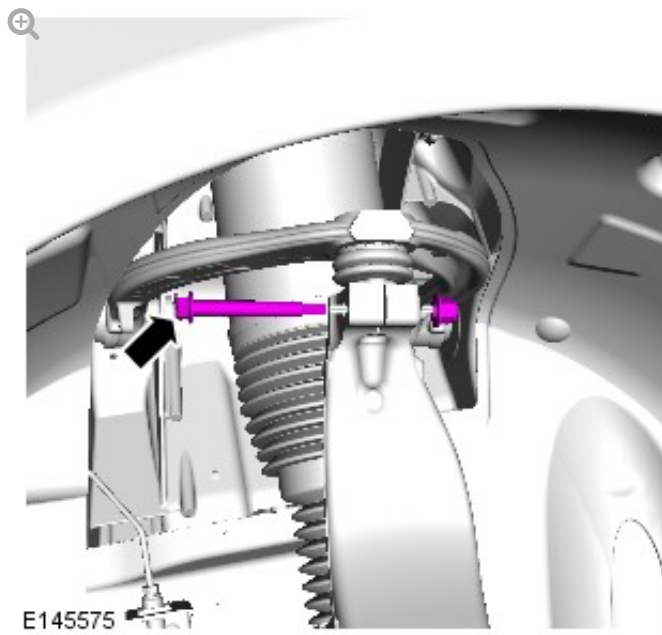


9.

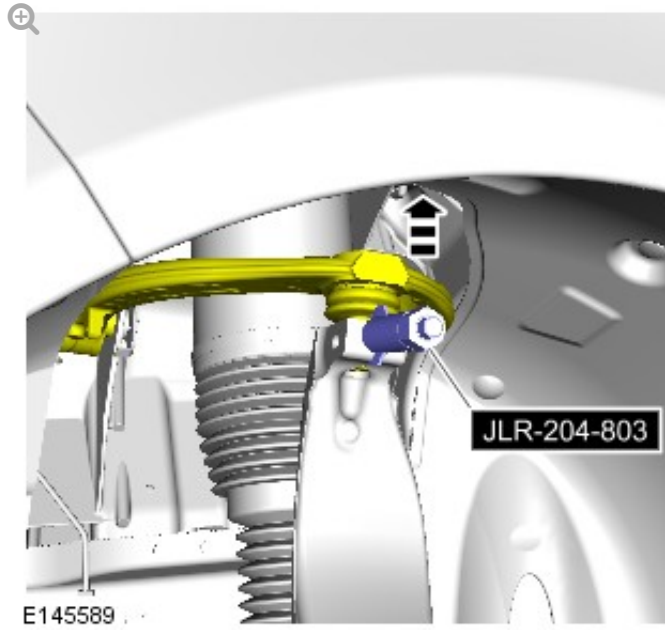


Special Tool(s): [JLR-204-803](#)

10.

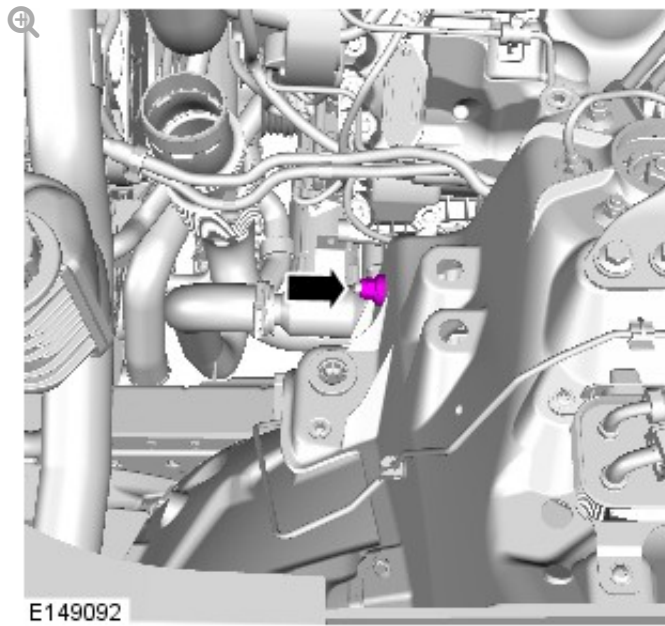


11.

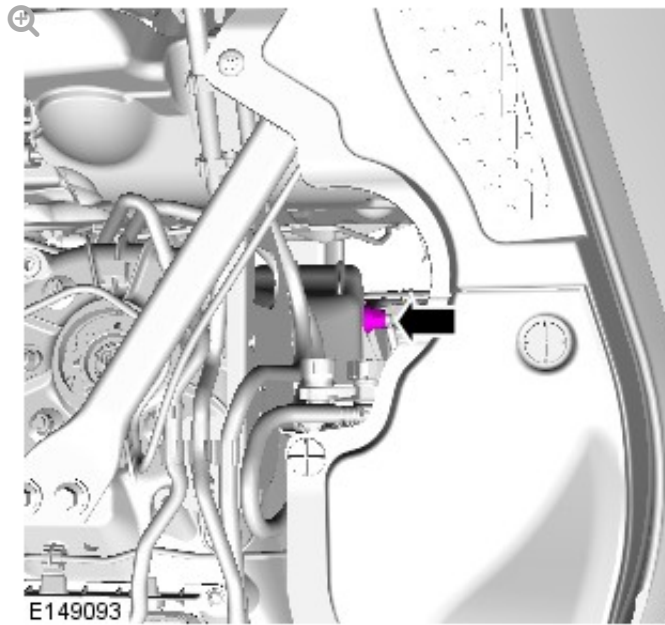

12.

NOTE:

RH illustration shown, LH is similar.

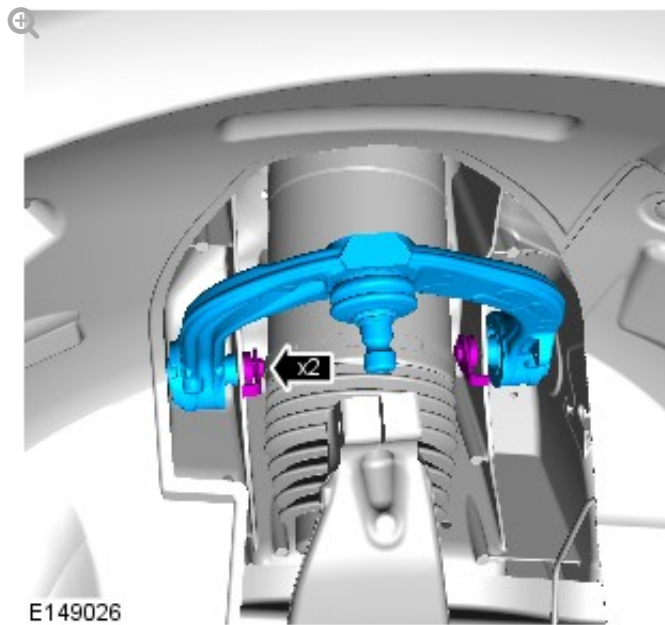

INSTALLATION






All vehicles

1.

NOTE:


RH illustration shown, LH is similar.

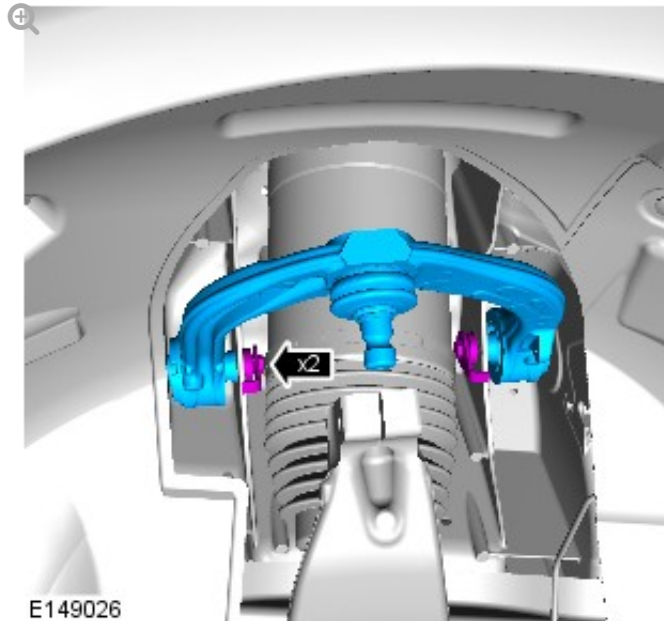

2.

CAUTION:

Nuts must be tightened with vehicle at normal ride height.

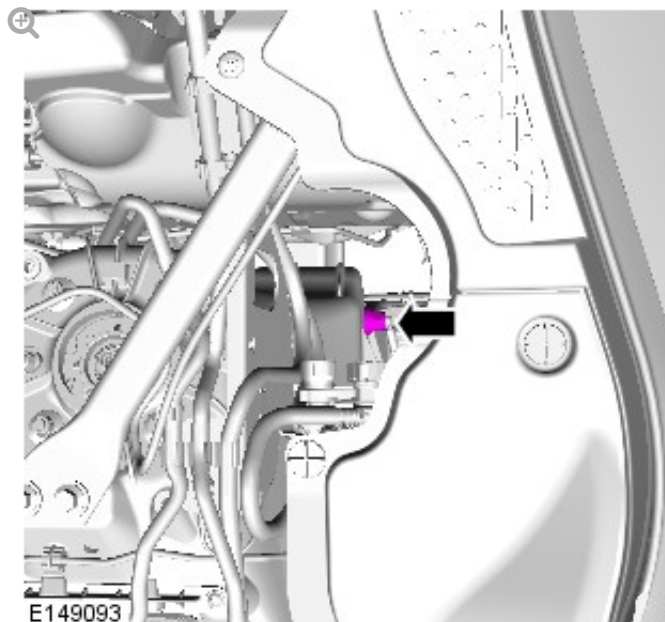

Torque:


Stage 1: **24 Nm**

Stage 2: **60°**

3.

CAUTION:

Nuts must be tightened with vehicle at normal ride height.

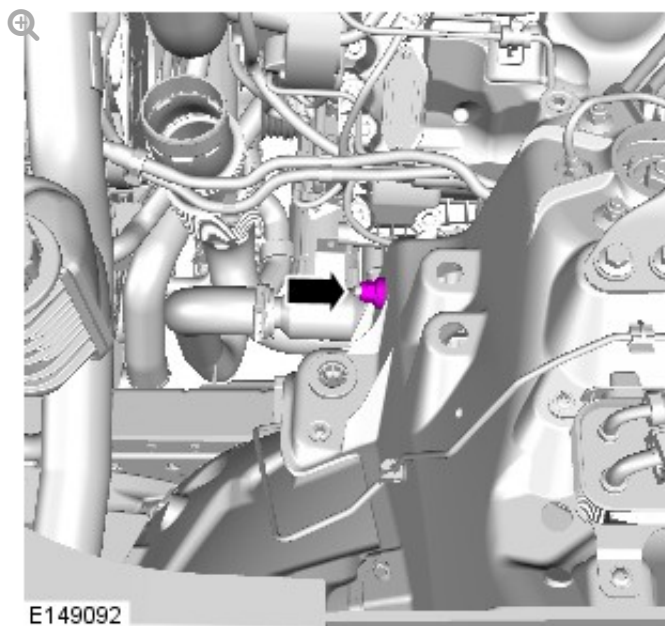


Torque:


Stage 1: **24 Nm**

Stage 2: **60°**

4.

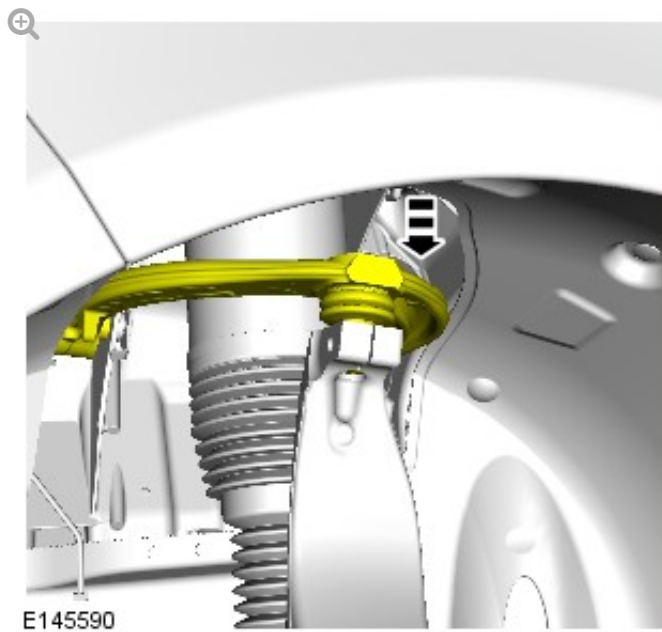

5.

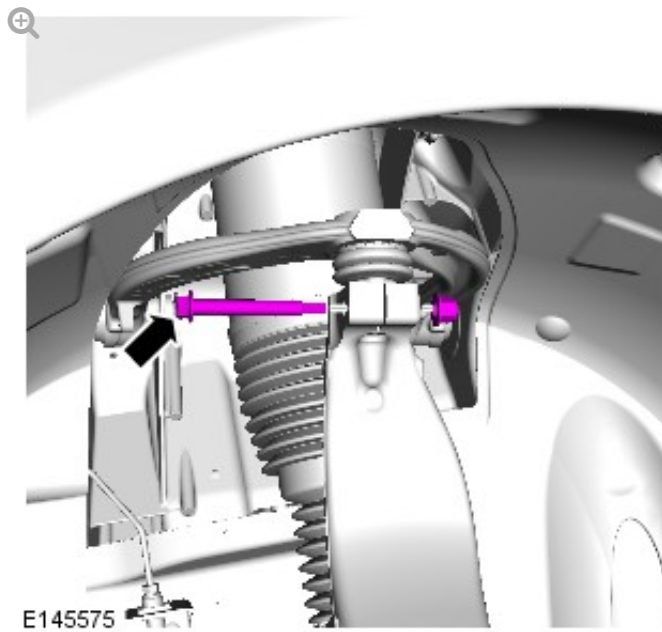

Renew Part: *Front suspension upper arm ball joint to knuckle nut and bolt.*

Torque: **70 Nm**


6. Using a suitable transmission jack, support the component while tightening the nuts and bolts at normal ride height.

Refer to: [Specifications](#) (204-00 Suspension System - General Information, Specifications).

General Equipment: [Transmission jack](#)

7. Remove the transmission jack.

8.

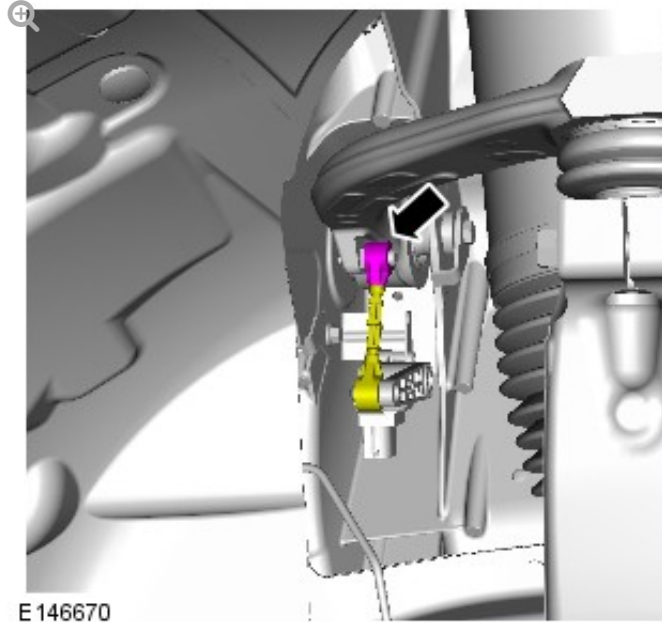


9. Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).



Vehicles with petrol engine

10.

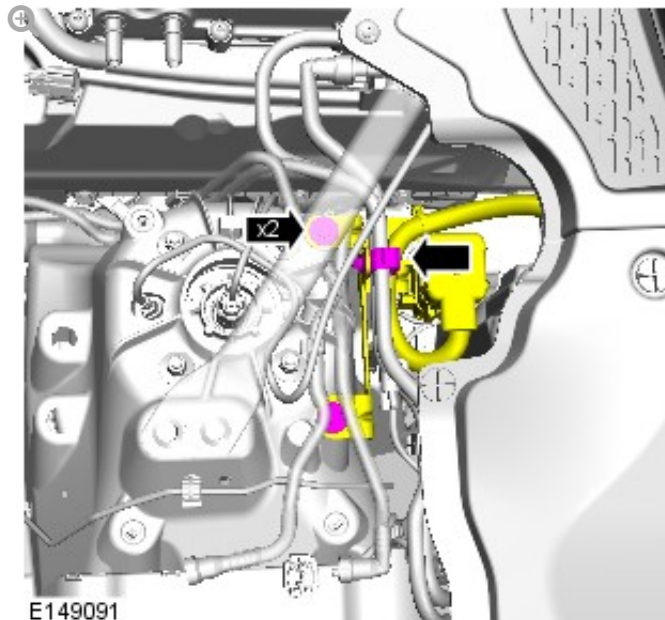

Torque: 10 Nm



Vehicles with diesel engine

11. Refer to: [Fuel Filter Element](#) (310-01E Fuel Tank and Lines - SDV6 3.0L Diesel - Hybrid Electric Vehicle, Removal and Installation).
Refer to: [Fuel Filter Element](#) (310-01D Fuel Tank and Lines - TDV8 4.4L Diesel, Removal and Installation).



All vehicles

12. Refer to: [Left Air Cleaner](#) (303-12A Intake Air Distribution and Filtering - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).
Refer to: [Left Air Cleaner](#) (303-12E Intake Air Distribution and Filtering - TDV8 4.4L Diesel, Removal and Installation).
Refer to: [Left Air Cleaner](#) (303-12C Intake Air Distribution and Filtering - V8 N/A 5.0L Petrol, Removal and Installation).
Refer to: [Left Air Cleaner](#) (303-12D Intake Air Distribution and Filtering - V8 S/C 5.0L Petrol, Removal and Installation).

13. Using the Land Rover approved diagnostic system, pressurize the air suspension.
Refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).
14. Using the Land Rover approved diagnostic system, calibrate the suspension ride height.
Refer to: [Ride Height Adjustments](#) (204-05 Vehicle Dynamic Suspension, General Procedures).