

2016.0 RANGE ROVER (LG), 204-01

FRONT SUSPENSION

REAR LOWER ARM (G1548984)

REMOVAL AND INSTALLATION

SPECIAL TOOL(S)



JLR-204-
793

Ball Joint Splitter

GENERAL EQUIPMENT

EQUIPMENT NAME

Transmission jack

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME

Installation Step 2	Renew Part	Lower control arm bolt
Installation Step 3	Renew Part	Lower control arm bolt

REMOVAL

NOTES:

- Removal steps in this procedure may contain installation details.
- LH illustration shown, RH is similar.

1.

WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

2. Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

3.

NOTE:


Discard the bolt.

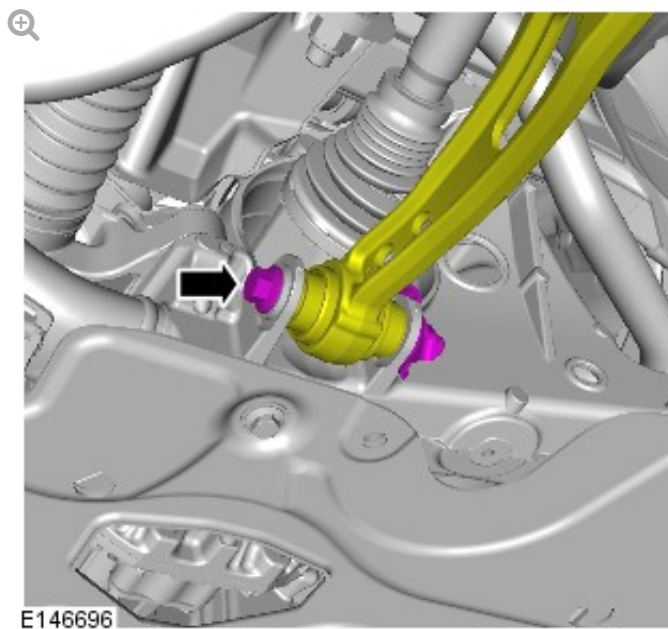

4.

NOTE:


Discard the bolt.

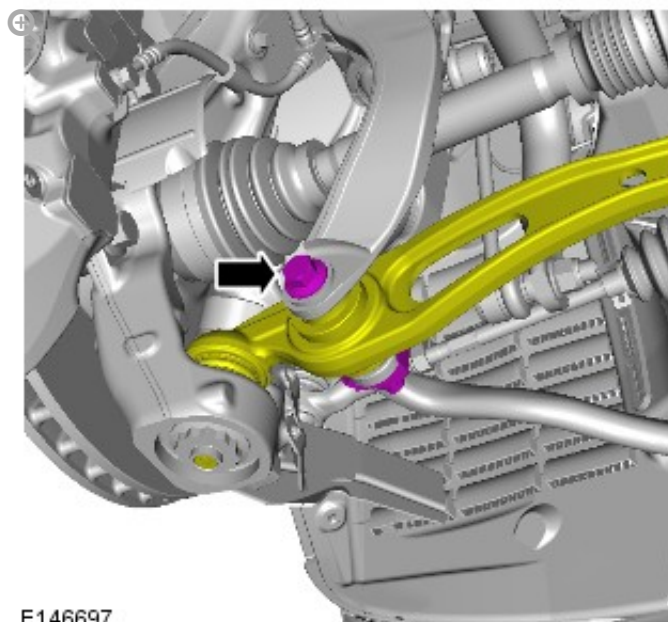

5.

NOTE:


Loosen but do not remove the nut.

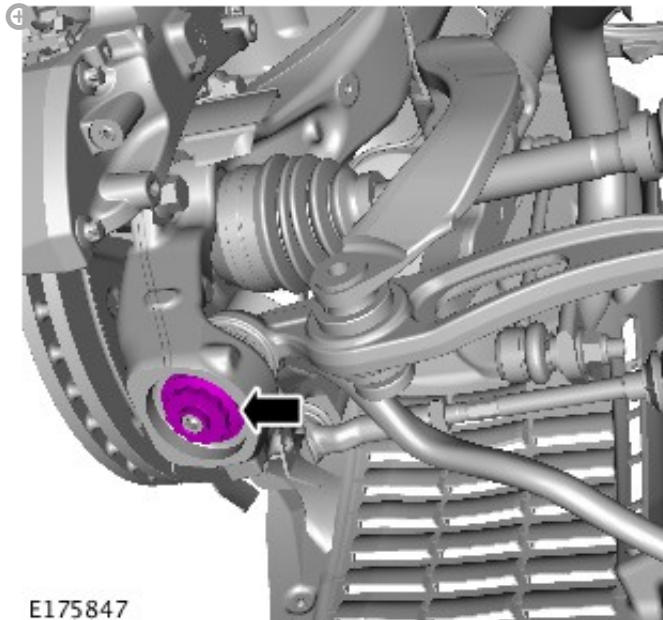

6.

CAUTION:

Make sure the special tool is correctly located and the lower ball joint boot is not damaged while carrying out the operation. Failure to follow this instruction may result in damage to the component.

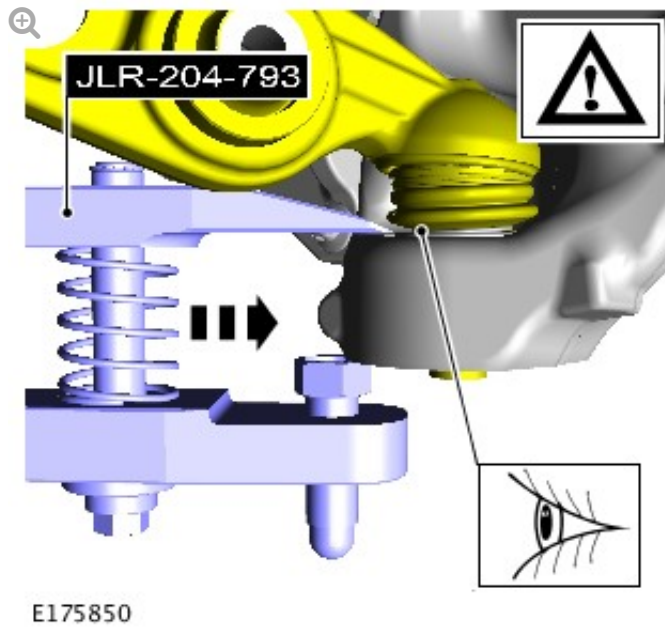


Special Tool(s): [JLR-204-793](#)

7.


CAUTION:

Make sure due care is taken when releasing the lower arm ball joint so that no damage is caused to the halfshaft gaiter.

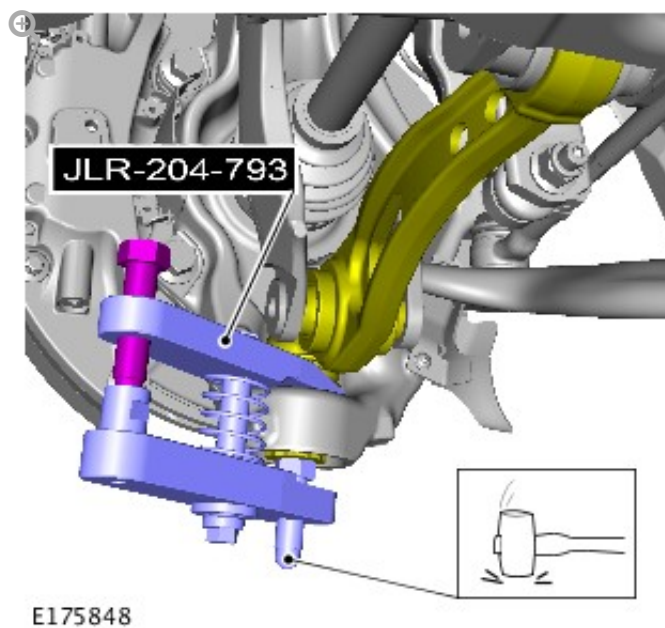

Special Tool(s): [JLR-204-793](#)

8.

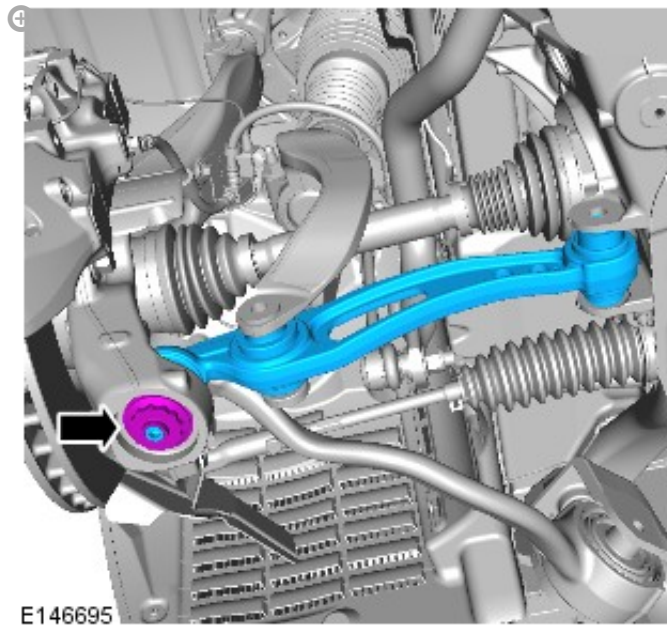


INSTALLATION

1.

CAUTION:

Nuts and bolts must be tightened with vehicle at normal ride height.

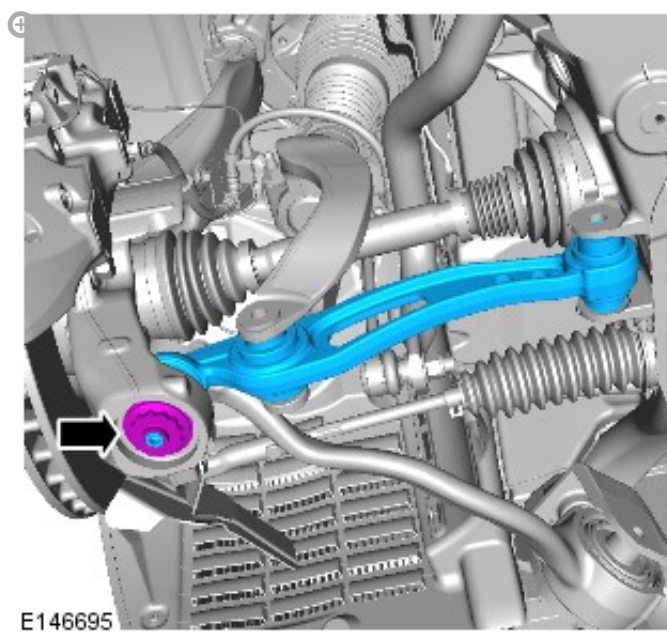


Torque: 290 Nm

2.

CAUTIONS:

- Nuts and bolts must be tightened with vehicle at normal ride height.
- Make sure that a new bolt is installed.

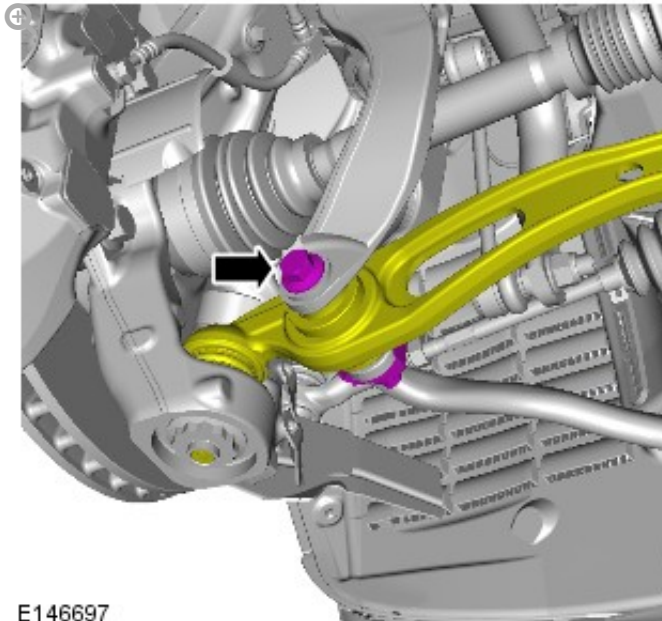

Renew Part: [Lower control arm bolt](#).

Torque:


Stage 1: 100 Nm

Stage 2: 240°

3.

CAUTIONS:

- Nuts and bolts must be tightened with vehicle at normal ride height.
- Make sure that a new bolt is installed.

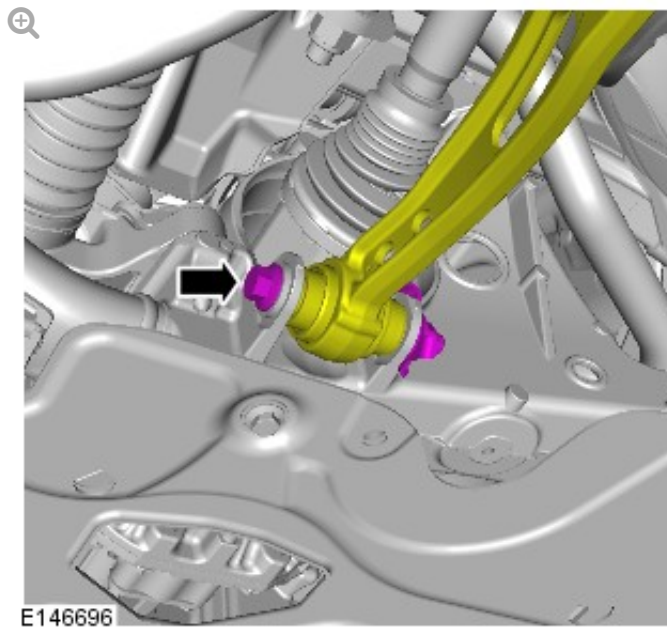

Renew Part: [Lower control arm bolt](#).

Torque:

Stage 1: **100 Nm**

Stage 2: **360°**

4. Using a suitable transmission jack, support the component while tightening the nuts and bolts at normal ride height.
Refer to: [Specifications](#) (204-00 Suspension System - General Information, Specifications).
General Equipment: [Transmission jack](#)
5. Remove the transmission jack.
6. Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).
7. Using only four wheel alignment equipment approved by Land Rover, check and adjust the wheel alignment.
Refer to: [Four Wheel Alignment](#) (204-00 Suspension System - General Information, General Procedures).

