

2016.0 RANGE ROVER (LG), 204-01

FRONT SUSPENSION

RIGHT UPPER ARM (G1560569)

REMOVAL AND INSTALLATION

SUSPENSION					
ARM					
60.35.07	ASSEMBLY -	3000 CC,	0.8	USED	+
	UPPER -	TDV6		WITHINS	
	RIGHT -				
	RENEW				

SPECIAL TOOL(S)



E145966

JLR-204-803

Splitter, Upper Arm

GENERAL EQUIPMENT

EQUIPMENT NAME

Transmission jack

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 5	Renew Part	Front suspension upper arm ball joint to knuckle nut and bolt

REMOVAL

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

1.

WARNING:

Do not work on or under a vehicle supported only by a jack.
Always support the vehicle on safety stands.

Raise and support the vehicle.

2.

NOTE:

If equipped.

Refer to: [Fuel Fired Booster Heater](#) (412-02A Auxiliary Climate Control, Removal and Installation).

3. Refer to: [Right Air Cleaner](#) (303-12A Intake Air Distribution and Filtering - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).

Refer to: [Right Air Cleaner](#) (303-12E Intake Air Distribution and Filtering - TDV8 4.4L Diesel, Removal and Installation).

Refer to: [Right Air Cleaner](#) (303-12C Intake Air Distribution and Filtering - V8 N/A 5.0L Petrol, Removal and Installation).

Refer to: [Right Air Cleaner](#) (303-12D Intake Air Distribution and Filtering - V8 S/C 5.0L Petrol, Removal and Installation).

4. Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).


5. Using the Land Rover approved diagnostic system, depressurize the air suspension.

Refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

6.

NOTE:

LH illustration shown, RH is similar.

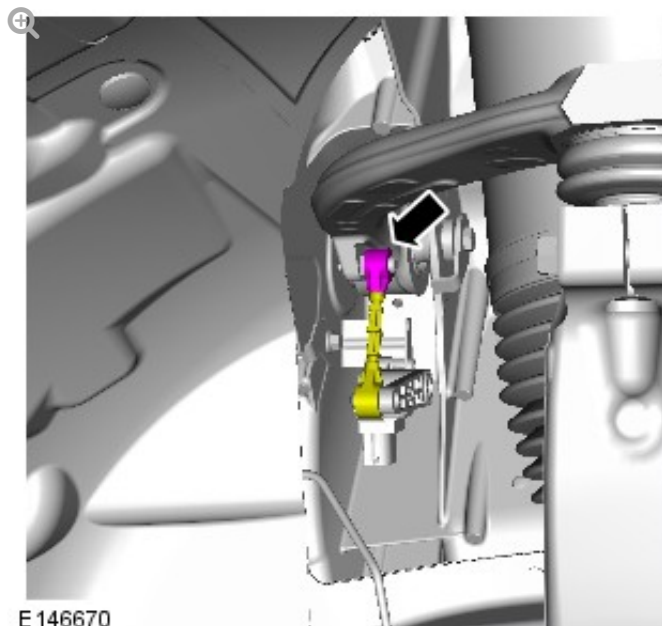


7.

CAUTION:

Discard the nut and bolt.

NOTE:


LH illustration shown, RH is similar.

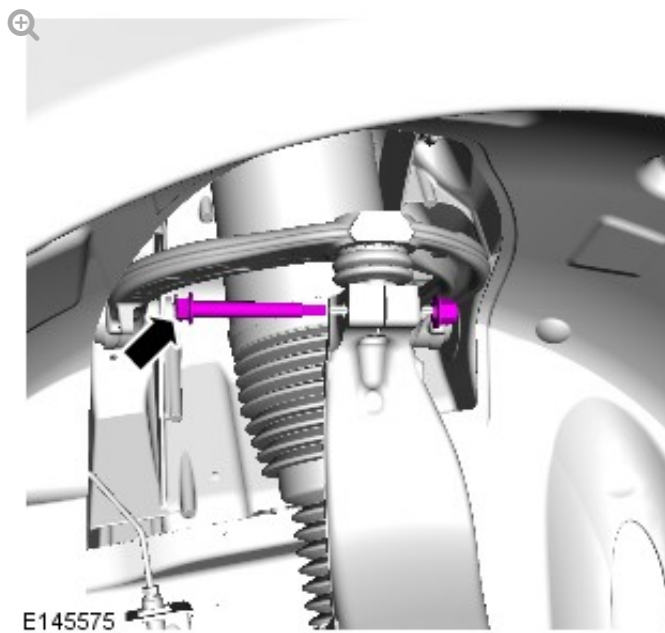

8.


NOTE:

LH illustration shown, RH is similar.

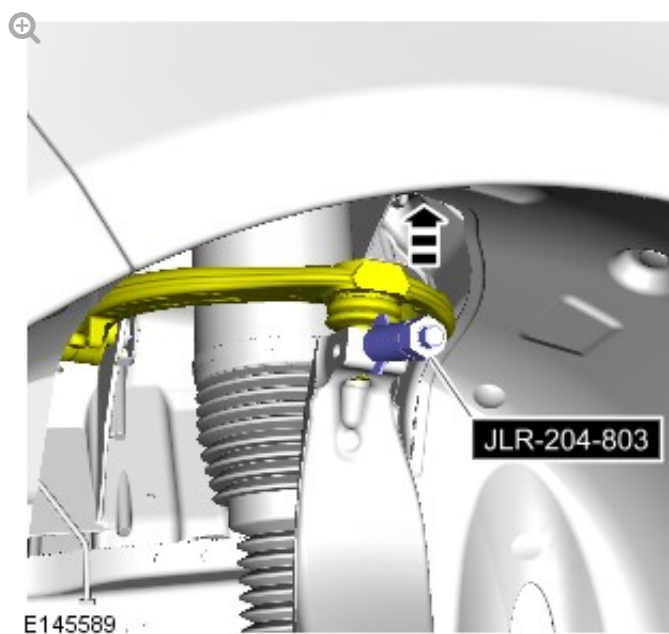


Special Tool(s): [JLR-204-803](#)


9.

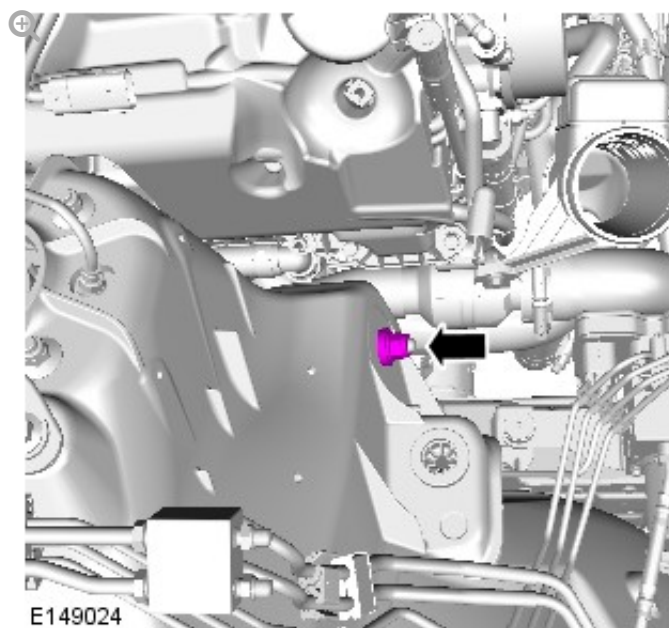

10.

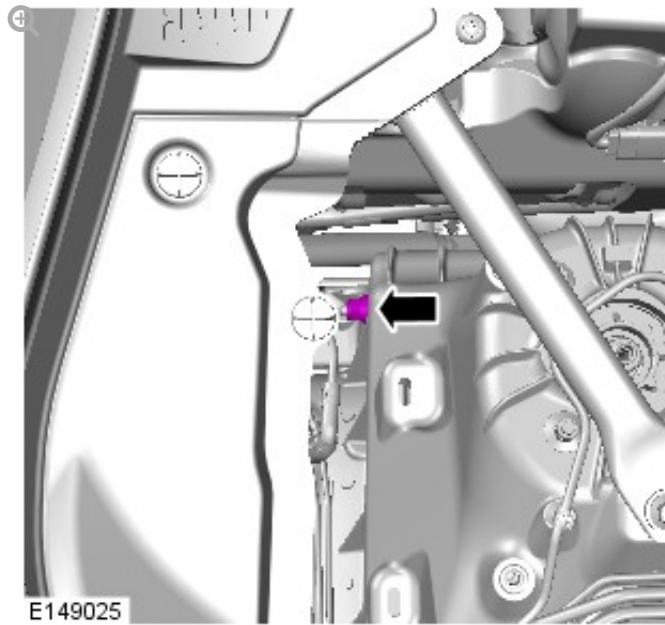


11.

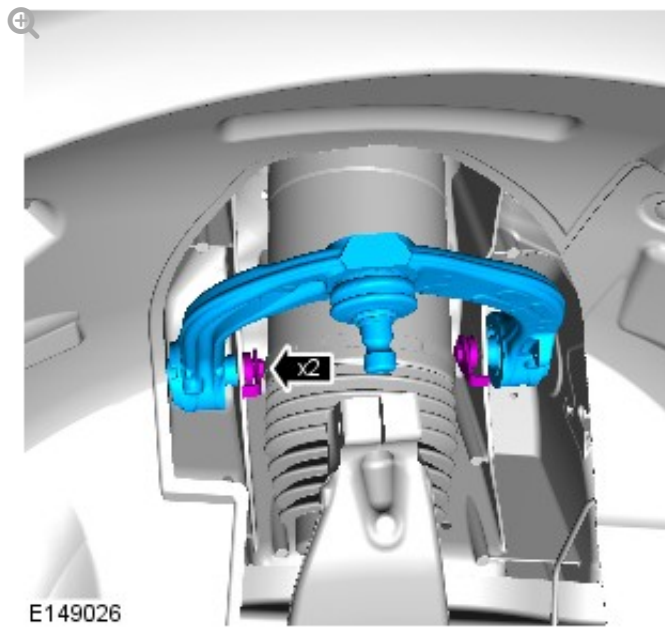

INSTALLATION


1.

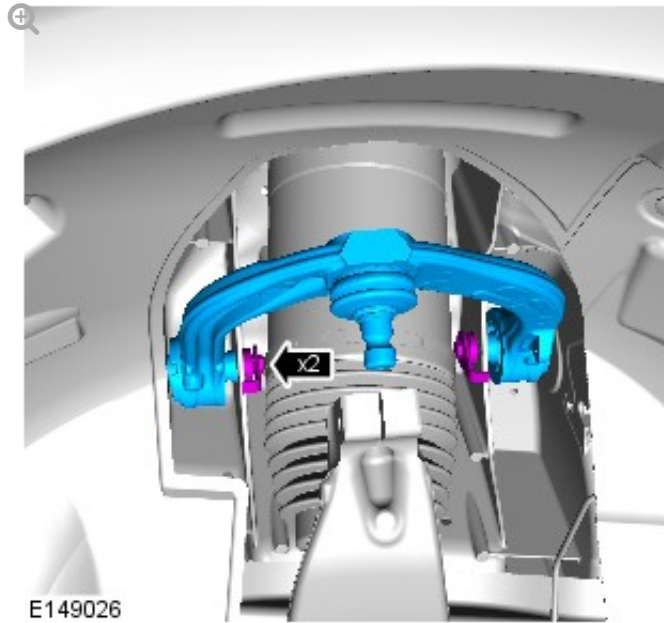

2.

CAUTION:

Nuts must be tightened with vehicle at normal ride height.

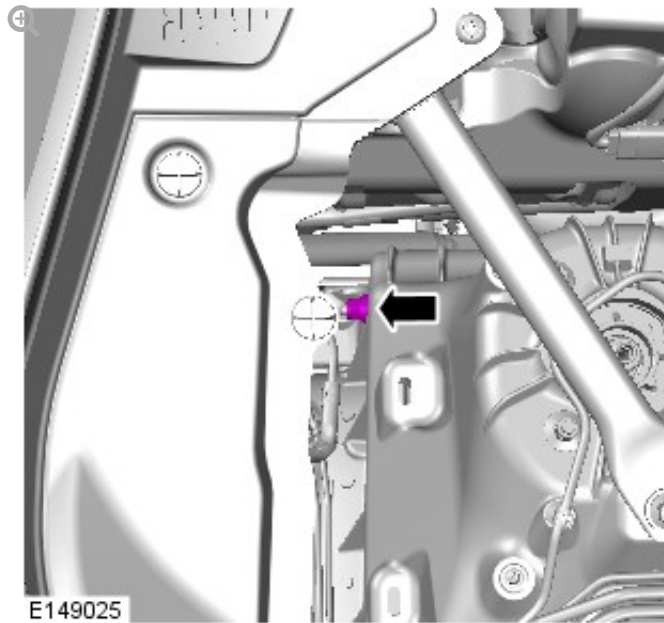

Torque:


Stage 1: **24 Nm**

Stage 2: **60°**

3.

CAUTION:

Nuts must be tightened with vehicle at normal ride height.

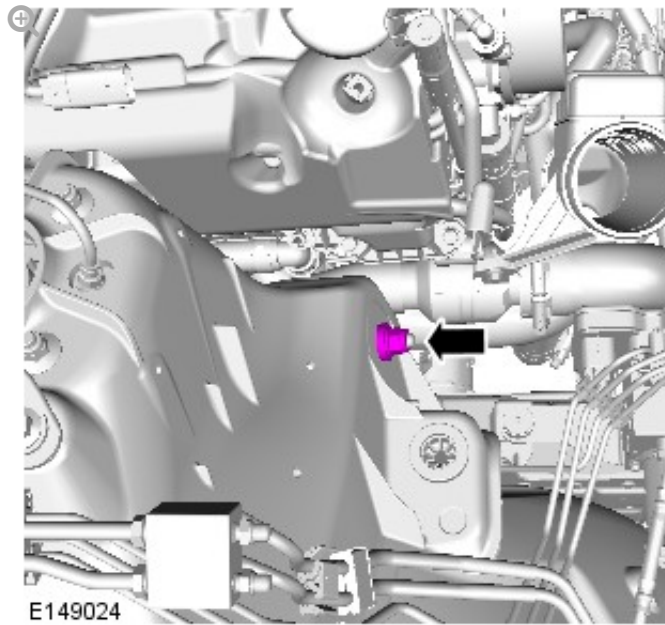

Torque:


Stage 1: **24 Nm**

Stage 2: **60°**

4.

NOTE:


LH illustration shown, RH is similar.

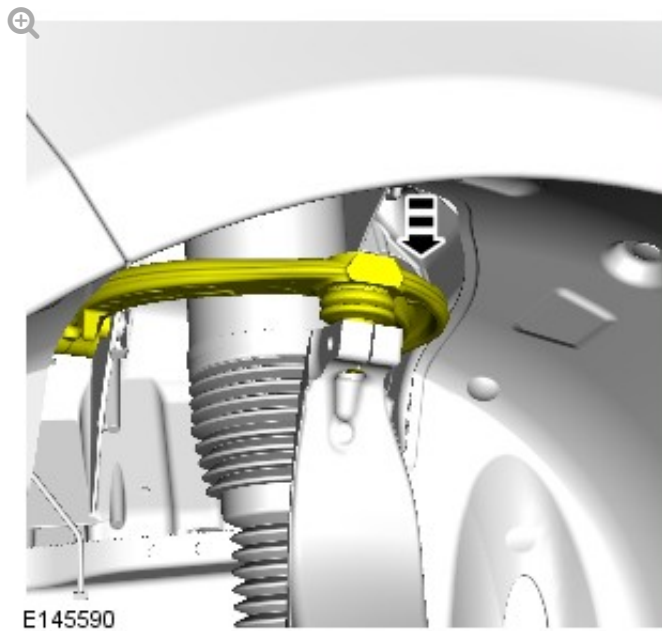

5.

NOTE:

LH illustration shown, RH is similar.

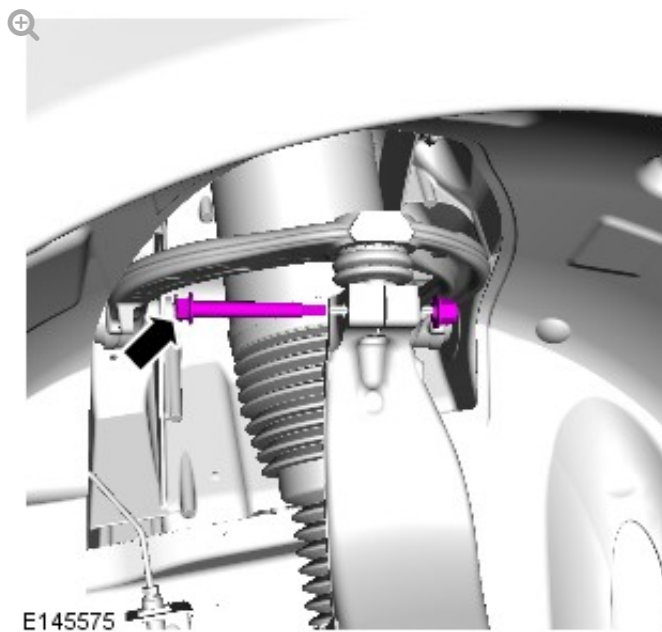

Renew Part: *Front suspension upper arm ball joint to knuckle nut and bolt.*

Torque: 70 Nm

6. Using a suitable transmission jack, support the component while tightening the nuts and bolts at normal ride height.

Refer to: [Specifications](#) (204-00 Suspension System - General Information, Specifications).


General Equipment: [Transmission jack](#)

7. Remove the transmission jack.

8.

NOTE:

LH illustration shown, RH is similar.

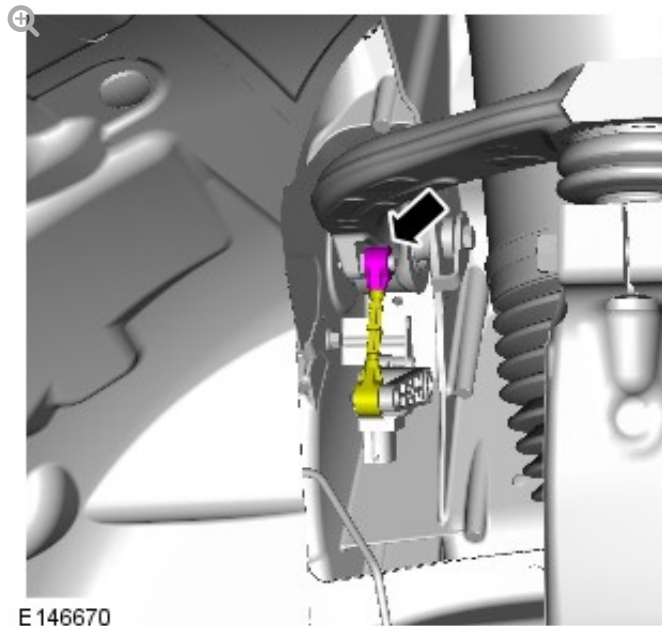

9. Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

10. Refer to: [Right Air Cleaner](#) (303-12A Intake Air Distribution and Filtering - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).

Refer to: [Right Air Cleaner](#) (303-12E Intake Air Distribution and Filtering - TDV8 4.4L Diesel, Removal and Installation).

Refer to: [Right Air Cleaner](#) (303-12C Intake Air Distribution and Filtering - V8 N/A 5.0L Petrol, Removal and Installation).

Refer to: [Right Air Cleaner](#) (303-12D Intake Air Distribution and Filtering - V8 S/C 5.0L Petrol, Removal and Installation).

11.

NOTE:

If equipped.

Refer to: [Fuel Fired Booster Heater](#) (412-02A Auxiliary Climate Control, Removal and Installation).

12. Using the Land Rover approved diagnostic system, pressurize the air suspension.

Refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

13. Using the Land Rover approved diagnostic system, calibrate the suspension ride height.

Refer to: [Ride Height Adjustments](#) (204-05 Vehicle Dynamic Suspension, General Procedures).