

Splitter, Damper

GENERAL EQUIPMENT

EQUIPMENT NAME

Transmission jack

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 2	Renew Part	Air line connector
Installation Step 8	Renew Part	Shock absorber to wheel knuckle mounting nut and bolt
Installation Step 10	Renew Part	Stabilizer bar link upper nut

REMOVAL

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Component shown removed for clarity.
- LH illustration shown, RH is similar.

1.

WARNING:

Do not work on or under a vehicle supported only by a jack.
Always support the vehicle on safety stands.

Raise and support the vehicle.

2. Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L](#)

[Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

3.


CAUTION:

This step must be carried out in order to maintain the correct air suspension compressor/dryer performance.

Using the approved diagnostic equipment, depressurize the front spring.

Refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

4.

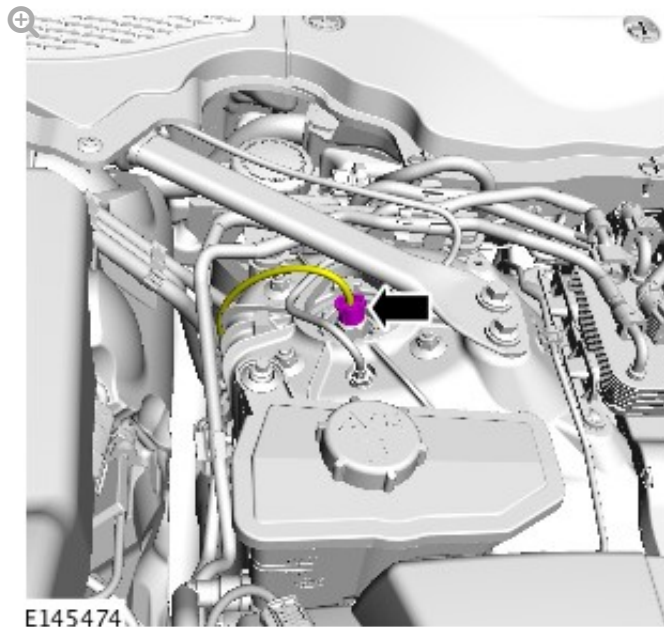

5.

WARNING:


A small amount of air maybe released when removing the air line connector.

CAUTION:

Before disconnecting or removing components, ensure the area around the joint faces and connections are clean. Plug open connections to prevent contamination.


NOTE:

Discard the air line connector.

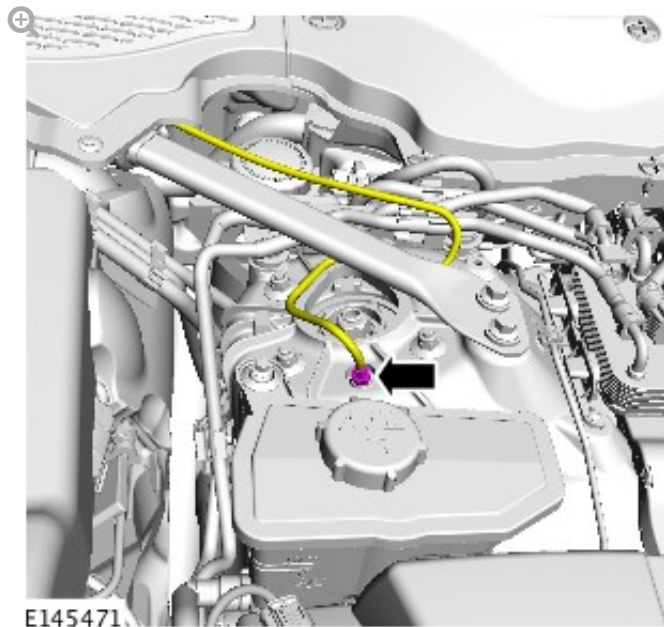


Refer to: [Air Line Connector](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

6.

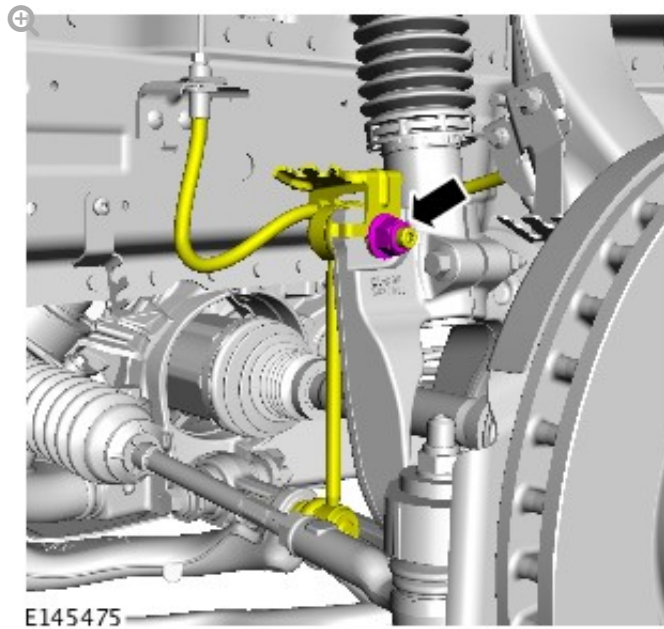


7.

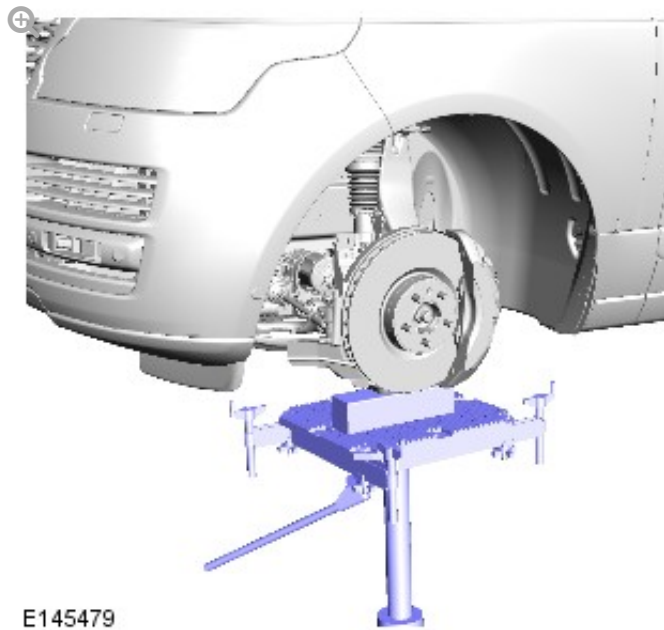


8.

CAUTION:


Discard the nut and bolt.

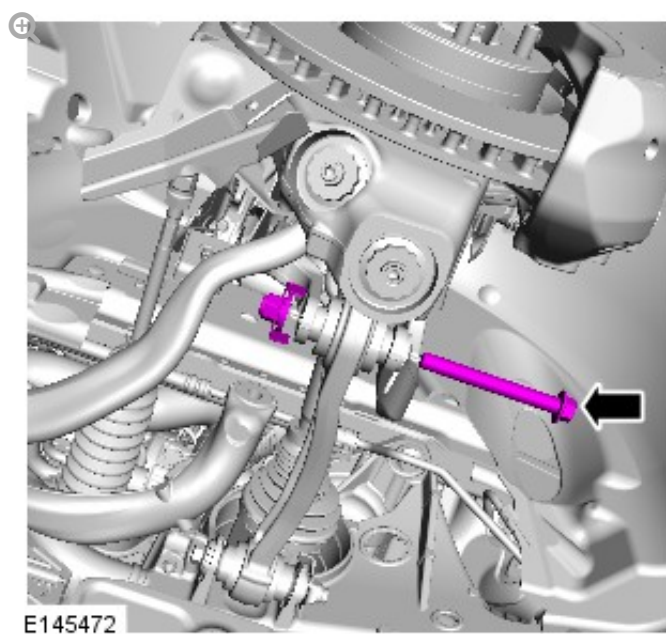

9.

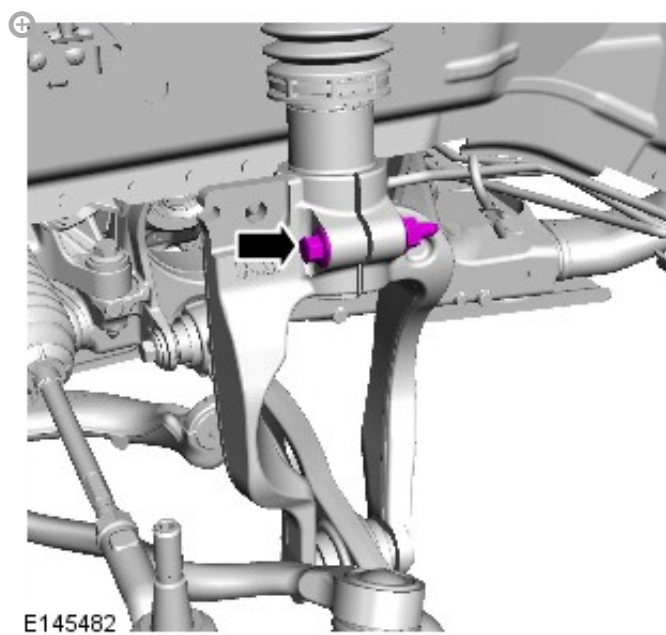


10.

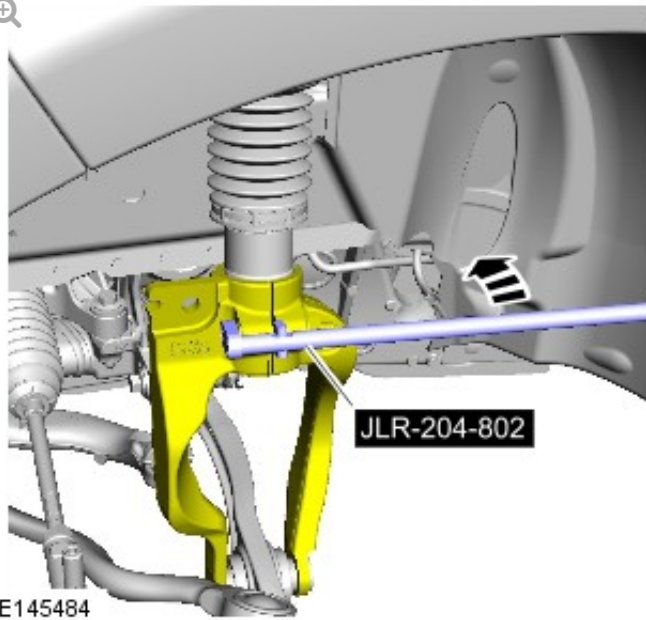


Special Tool(s): [JLR-204-802](#)

11.

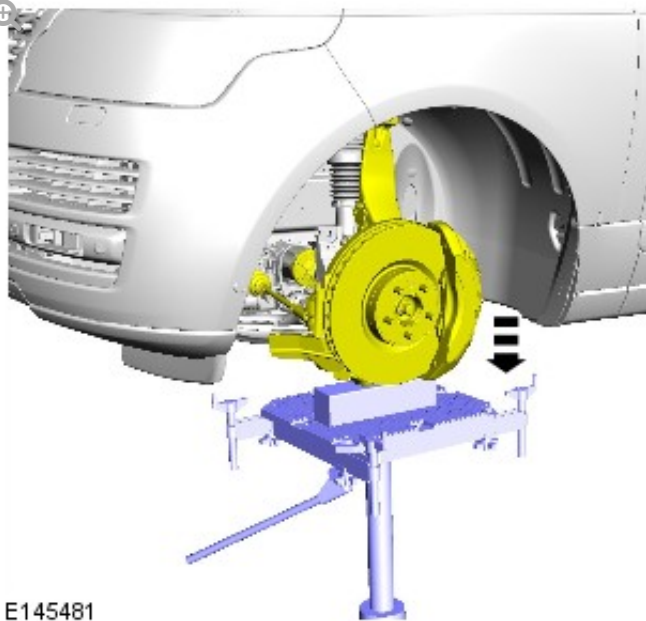


General Equipment: [Transmission jack](#)

12.

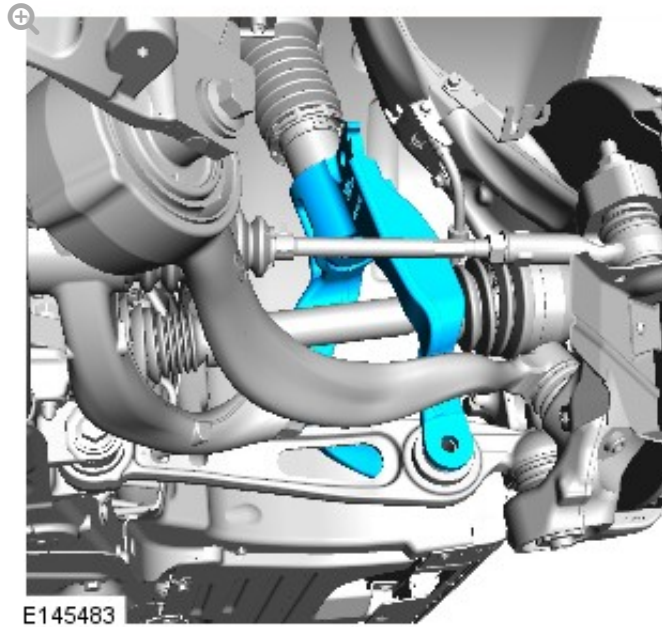

13.

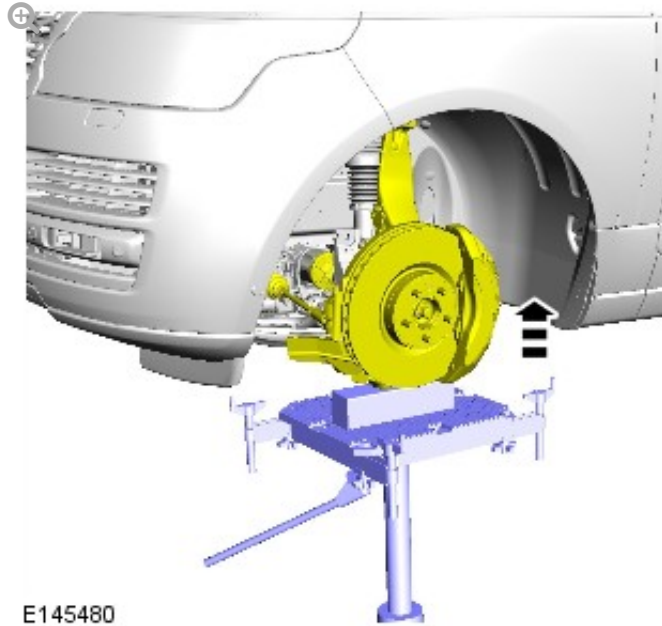

General Equipment: [Transmission jack](#)



14.

CAUTION:

Do not handle the air spring and damper assembly by the gaiter. Always handle it by the metallic parts of the component. Failure to follow this instruction may result in damage to the component.

NOTE:

Note the orientation of the component prior to removal.

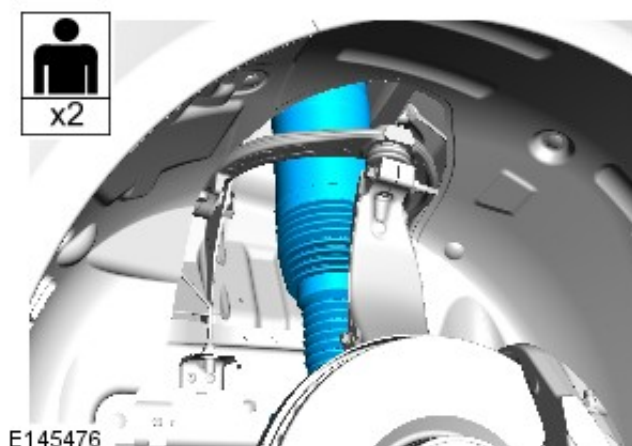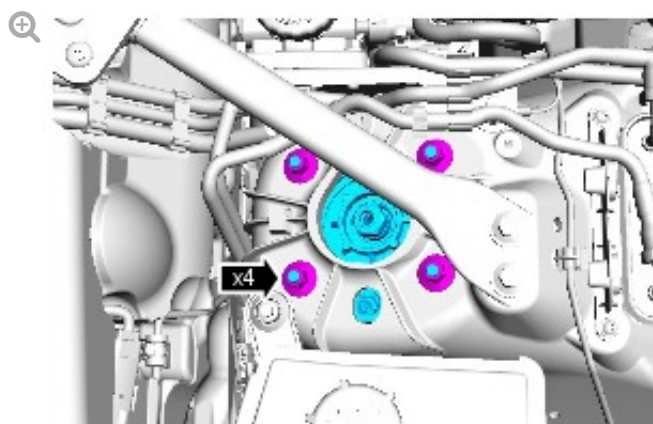

INSTALLATION



1.

CAUTION:

Do not handle the air spring and damper assembly by the gaiter. Always handle it by the metallic parts of the component. Failure to follow this instruction may result in damage to the component.

NOTE:

Install in the orientation noted in the removal.

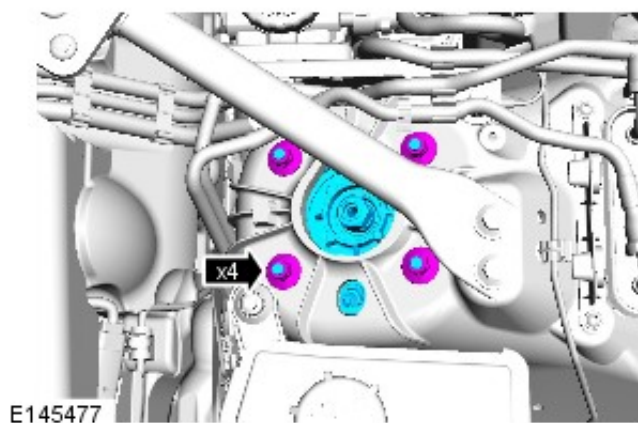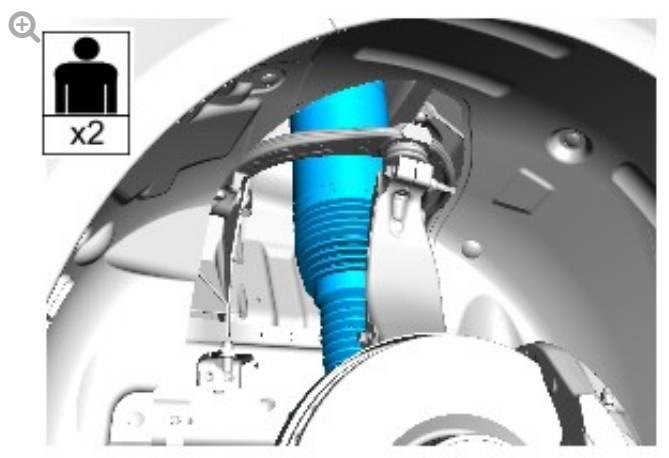


Torque: 40 Nm

2.

CAUTION:

Make sure that the area around the component is clean and free of foreign material.

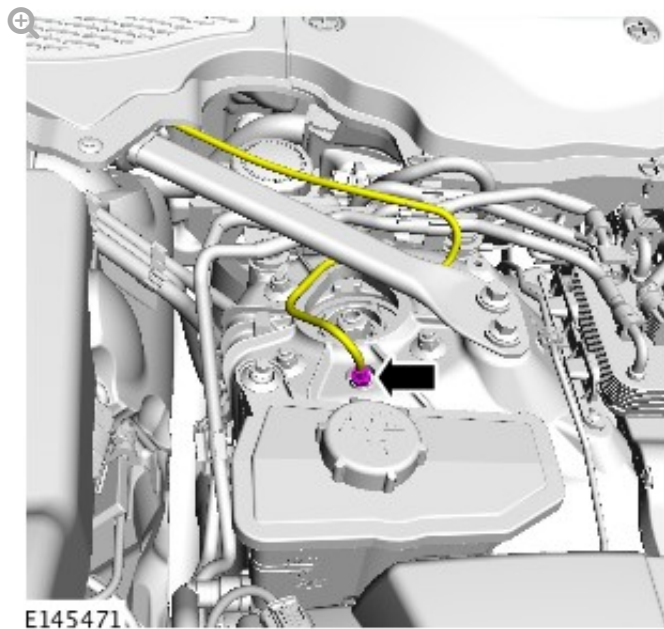


Refer to: [Air Line Connector](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

Renew Part: [Air line connector](#).


Torque: 3.5 Nm

3.

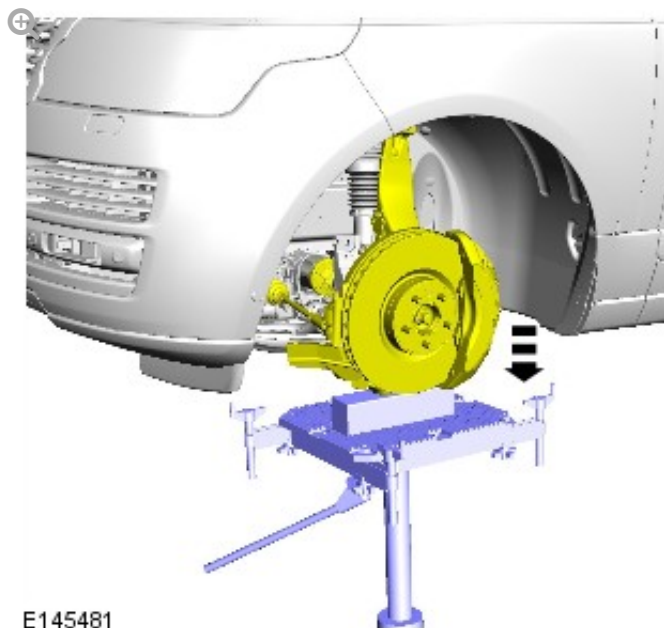


General Equipment: [Transmission jack](#)


4.

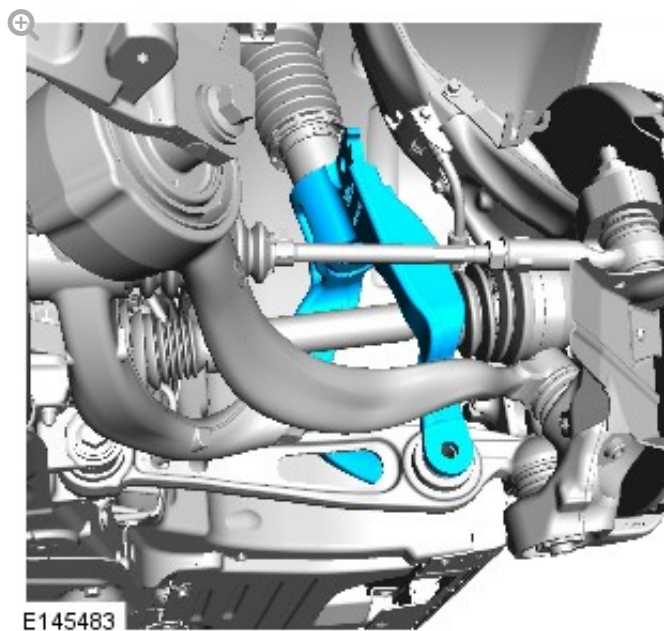

5.

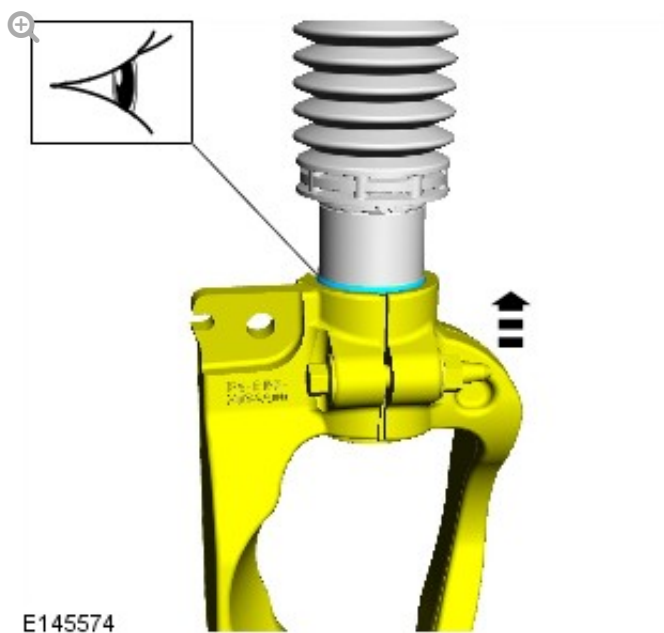


6.

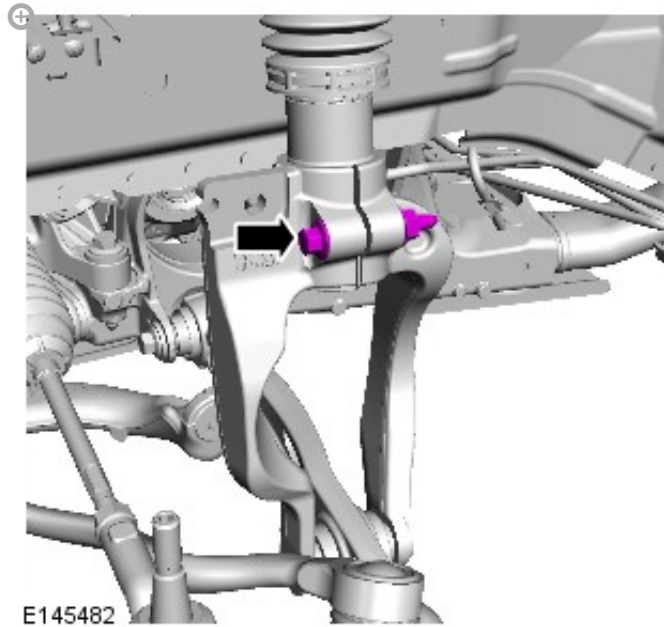

Torque: 95 Nm


7.

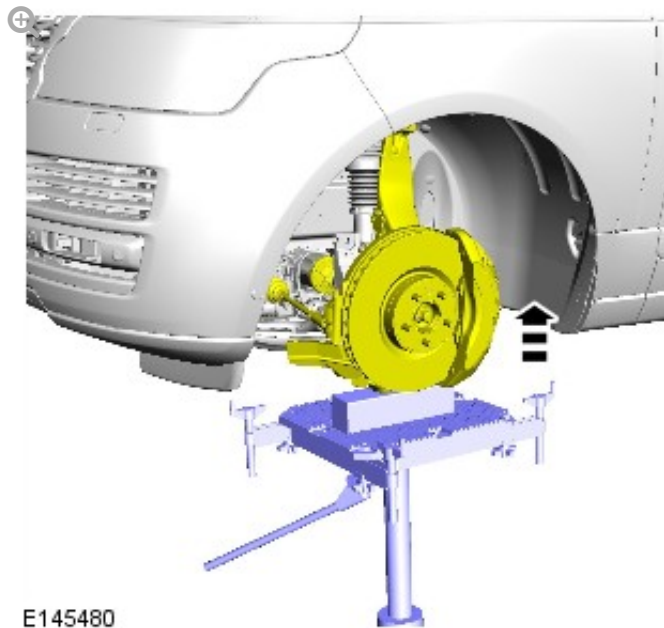

General Equipment: [Transmission jack](#)

CAUTIONS:

- Make sure that a new nut and bolt is installed.
- Nuts and bolts must be tightened with vehicle at normal ride height.

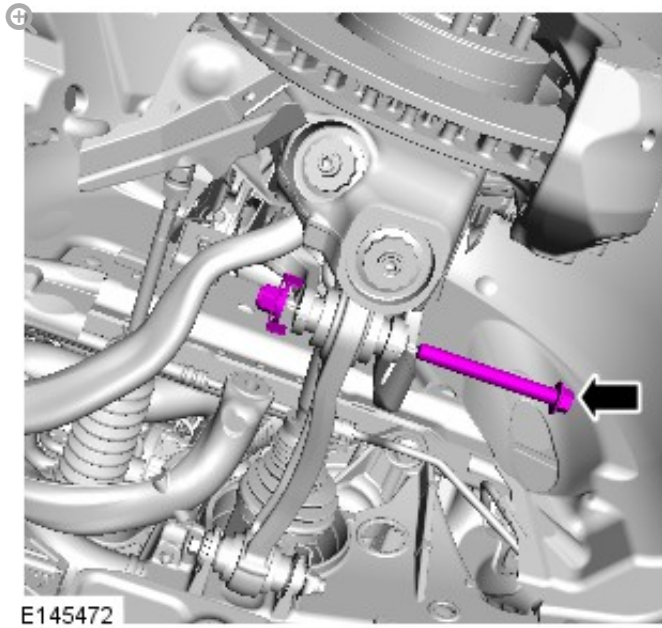


Renew Part: *Shock absorber to wheel knuckle mounting nut and bolt.*

Torque:

Stage 1: 100 Nm

Stage 2: 240°


9.

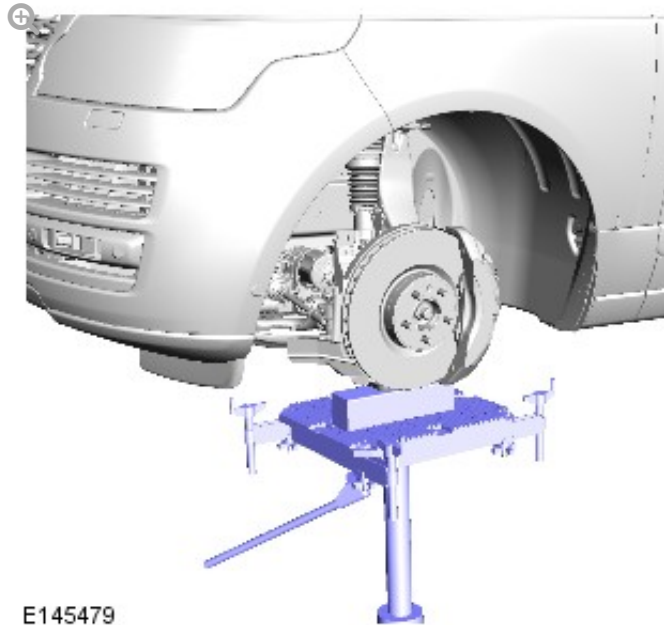

E145479

- Remove the equipment illustrated.
- *General Equipment:* [Transmission jack](#)

10.

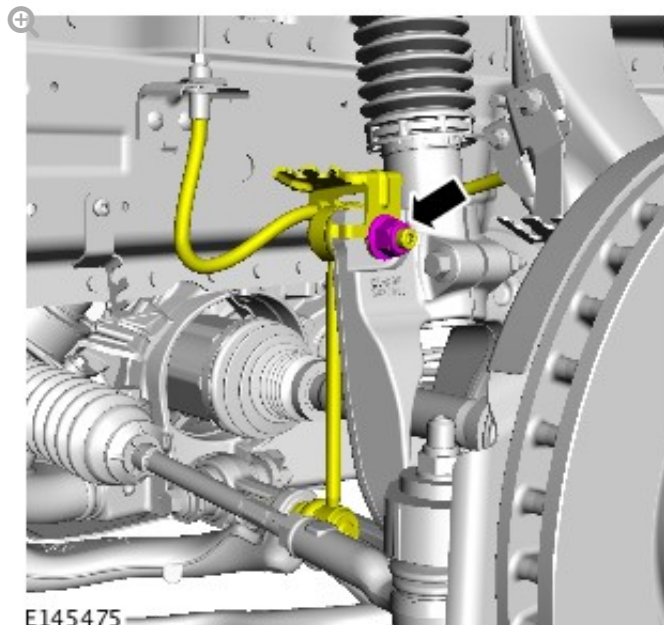


E145475

Renew Part: [Stabilizer bar link upper nut](#).

Torque: 185 Nm

11.

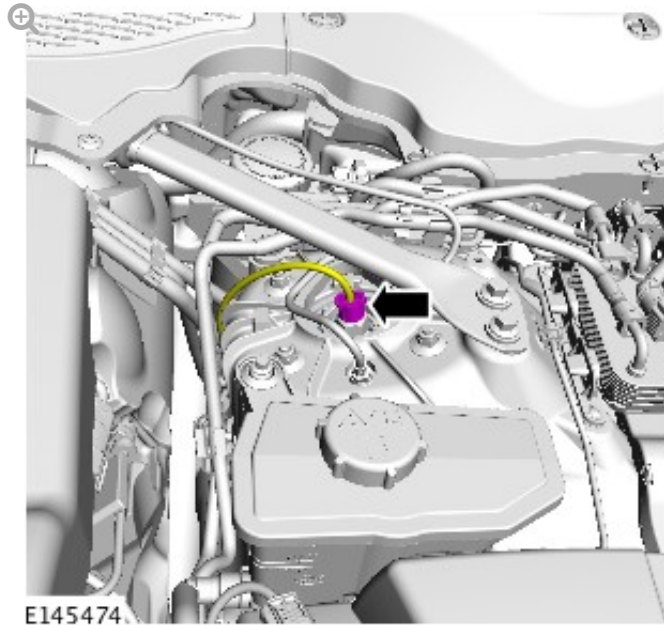

12.

CAUTION:

This step must be carried out in order to maintain the correct air suspension compressor/dryer performance.

Using the approved diagnostic equipment, pressurize the front spring.

Refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

13. Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).