

2016.0 RANGE ROVER (LG), 204-01

FRONT SUSPENSION

WHEEL KNUCKLE (G1509293)

REMOVAL AND INSTALLATION

60.25.01	HUB - EACH - RENEW	ALL DERIVATIVES	1.1	USED WITHINS	+
----------	--------------------------	--------------------	-----	-----------------	---

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 4	Renew Part	Wheel knuckle nut and bolt
Installation Step 14	Renew Part	Front halfshaft nut

REMOVAL

NOTE:

If a new knuckle is installed, a new wheel bearing must be installed.

1. Refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).


2. **WARNING:**

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3. Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).


4.

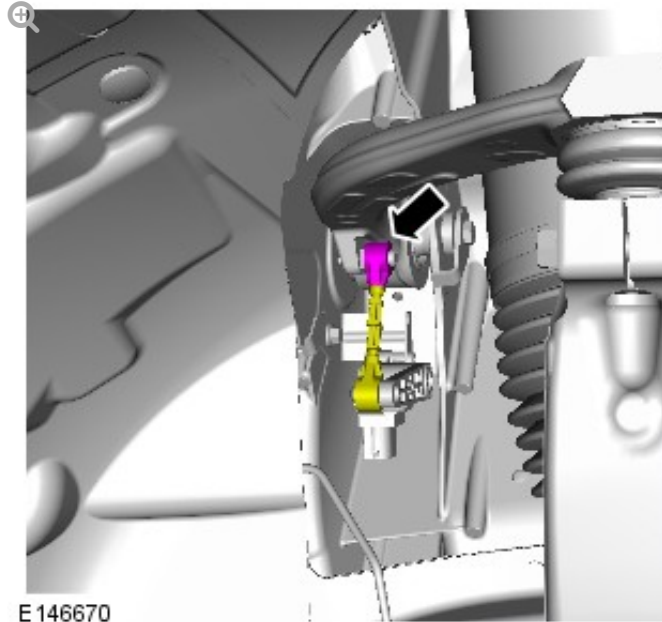

5.


NOTES:

- Apply the brake pedal during the removal and installation of the half shaft retaining nut.
- Retain the nut for use in the installation procedure.

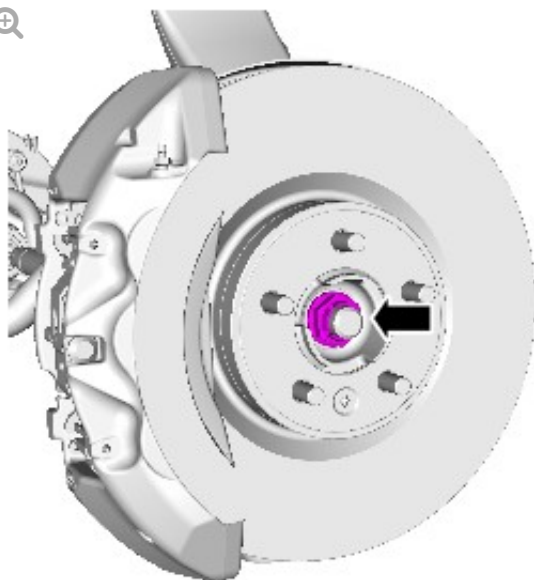


E156602

6.

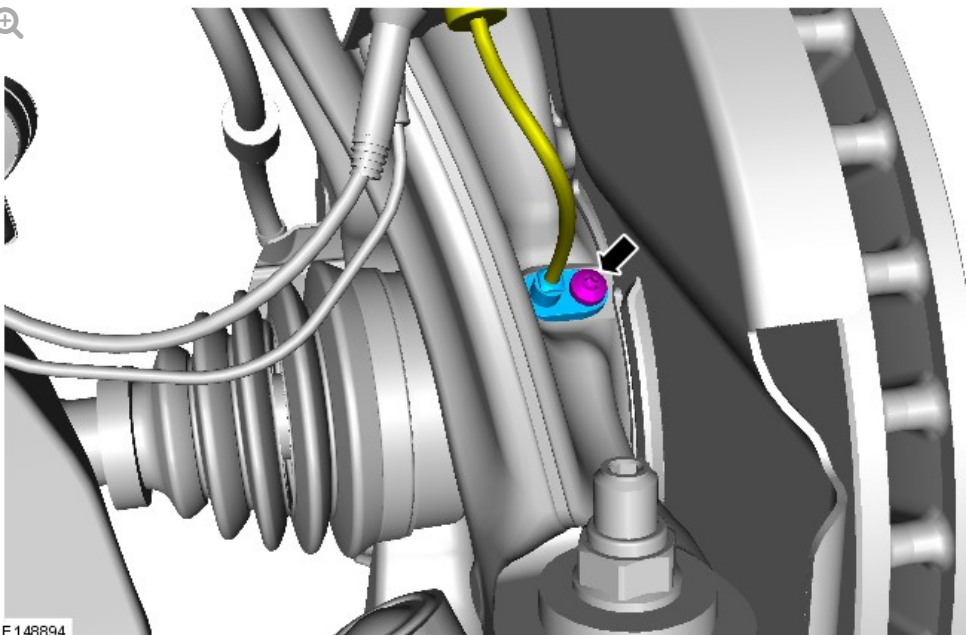


E148894

7.

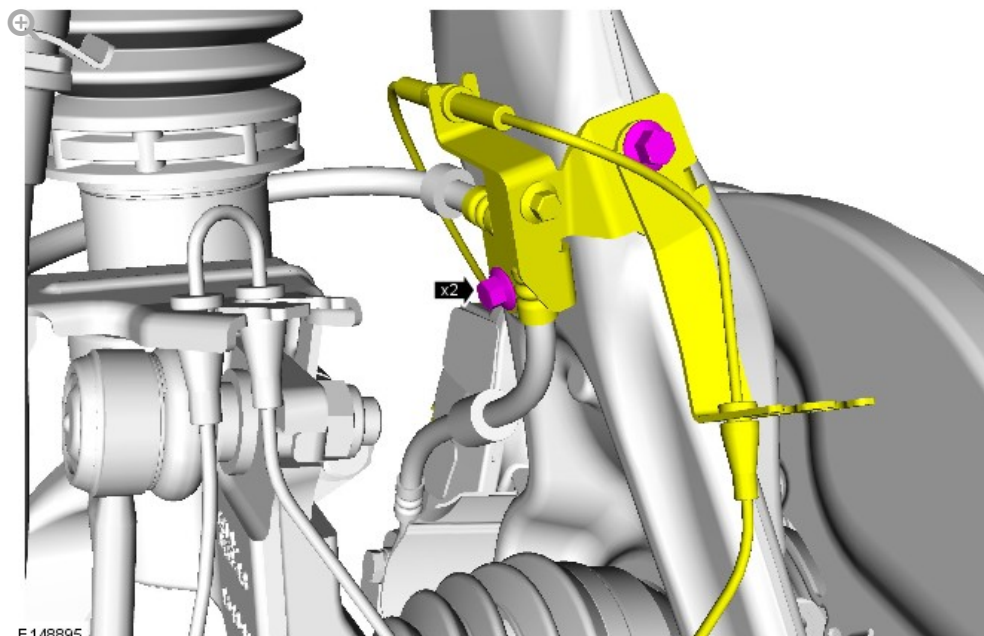


E148895

8.

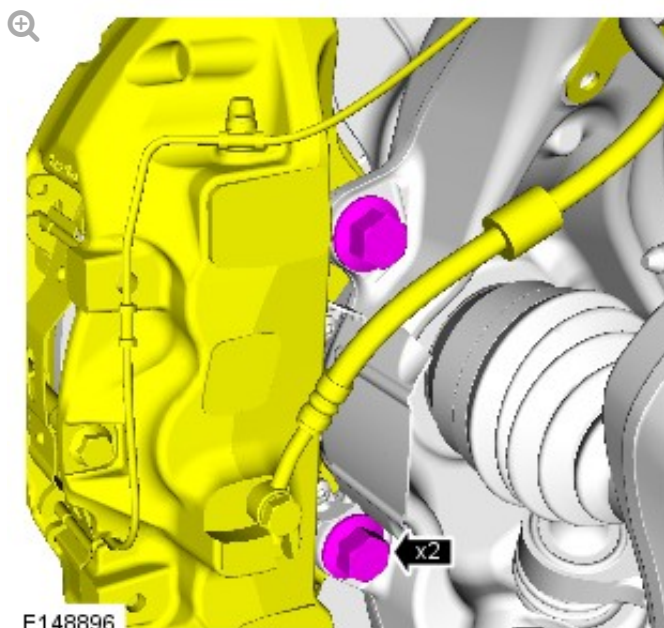


E148896

9.

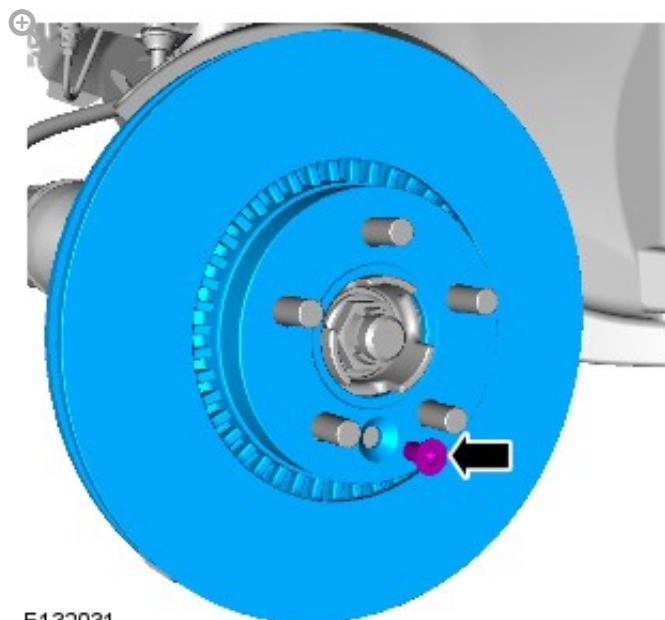


E132031

10.

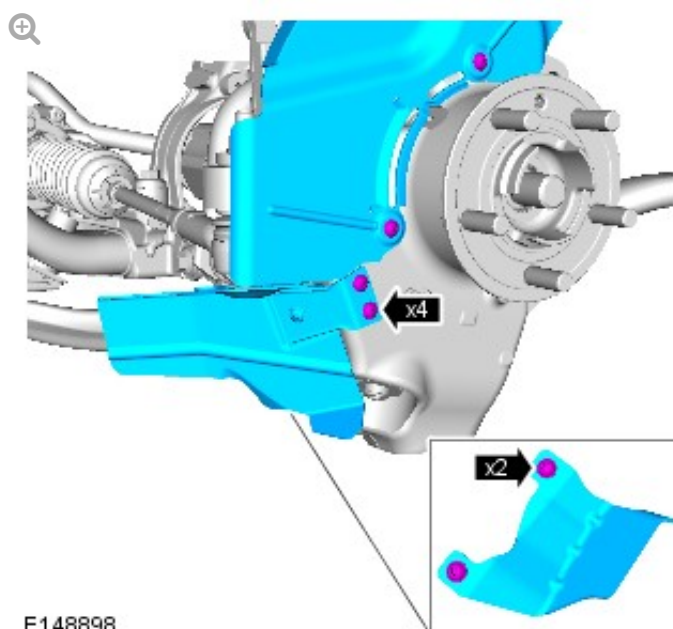


E148898

11.

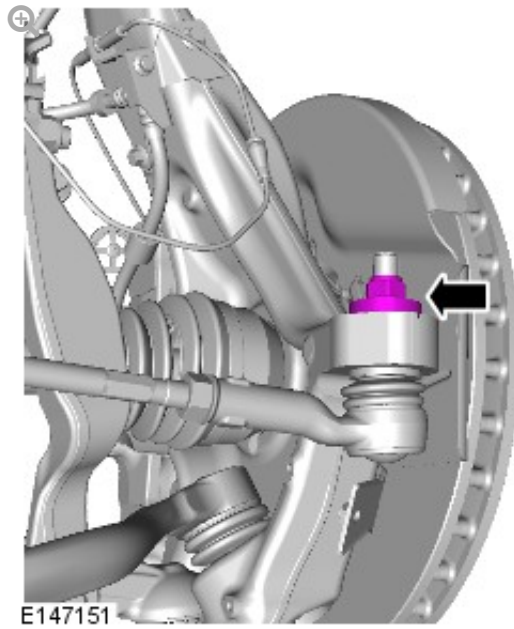


Loosen the tie rod end locking nut.

12.

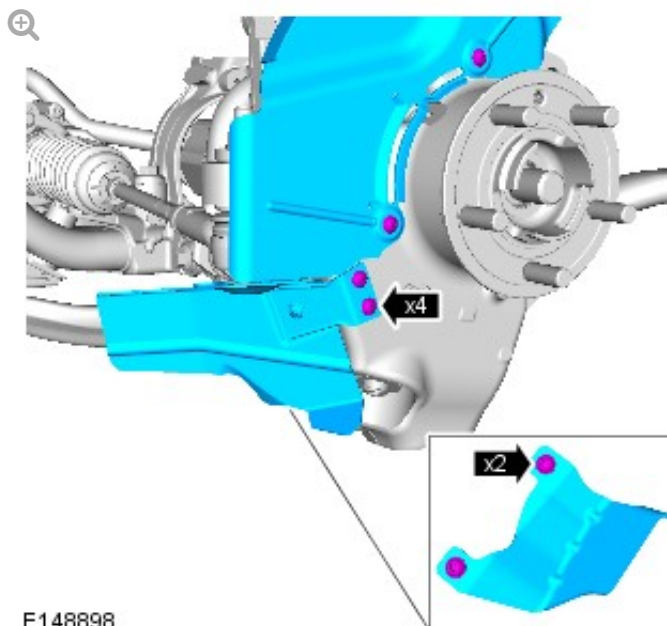


13.

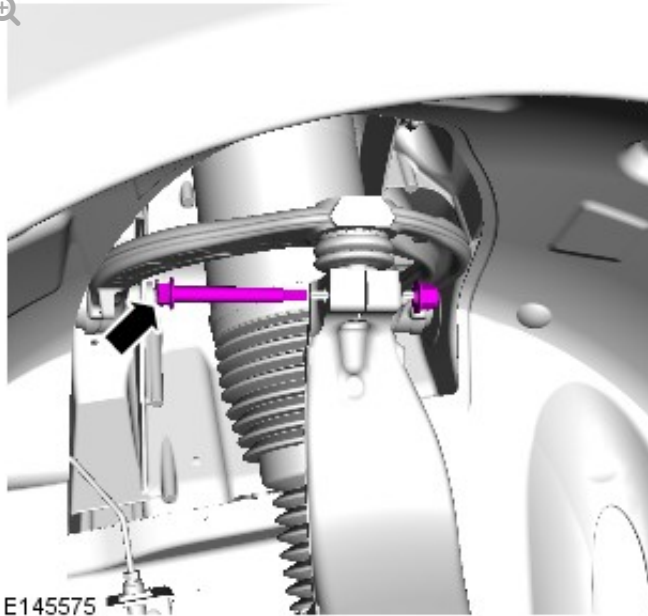

E145575


14.

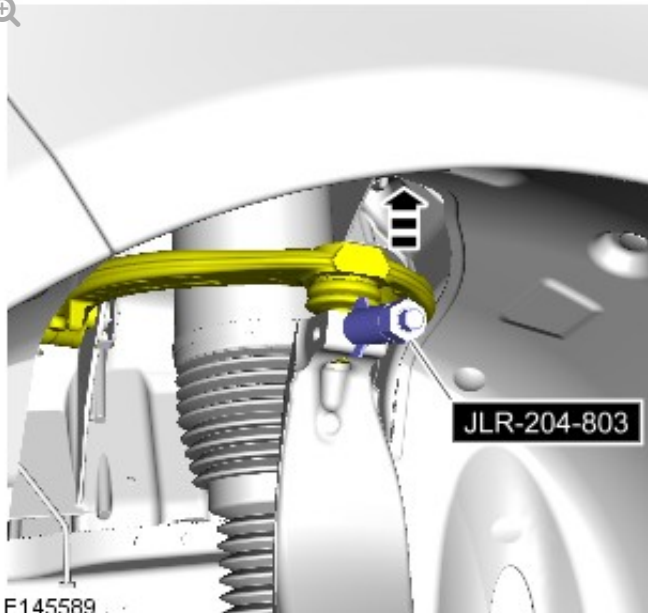

JLR-204-803


E145589

15.

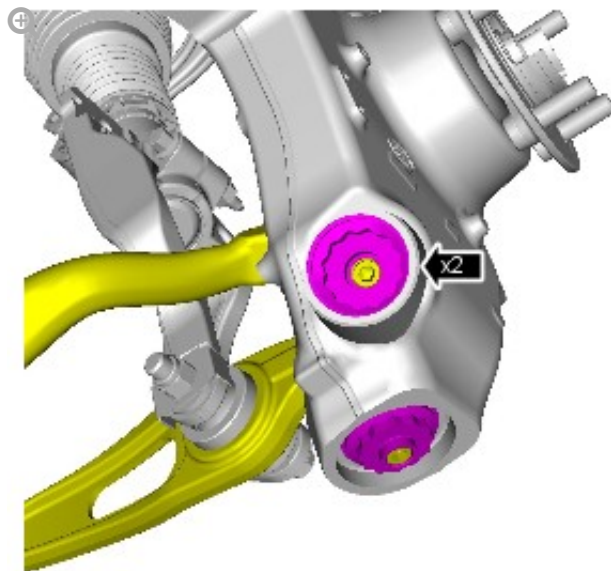


E151410

16.

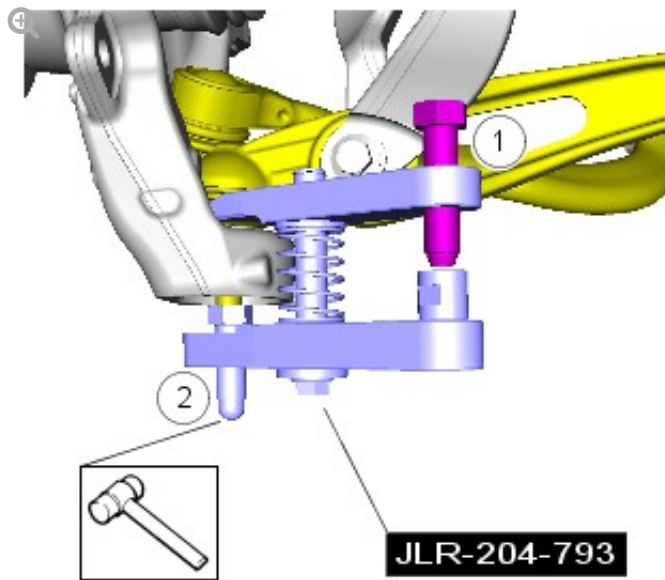

E151411

17.

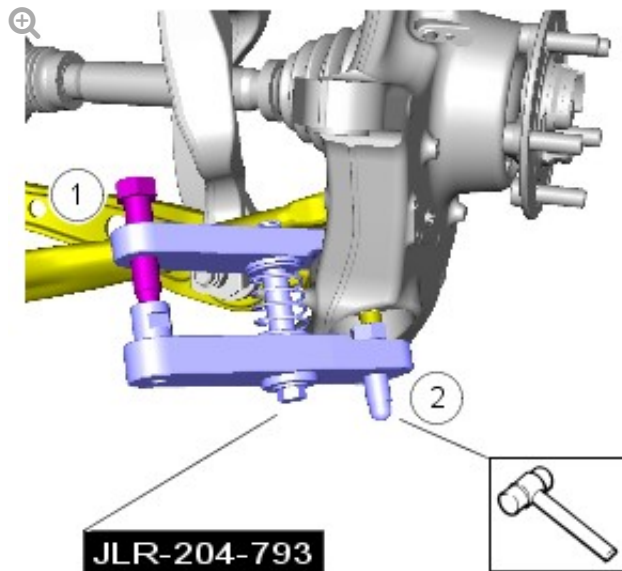


E151412

18.

CAUTION:

Do not use a hammer to detach the halfshaft from the hub assembly, failure to follow this instruction may result in damage to the halfshaft.

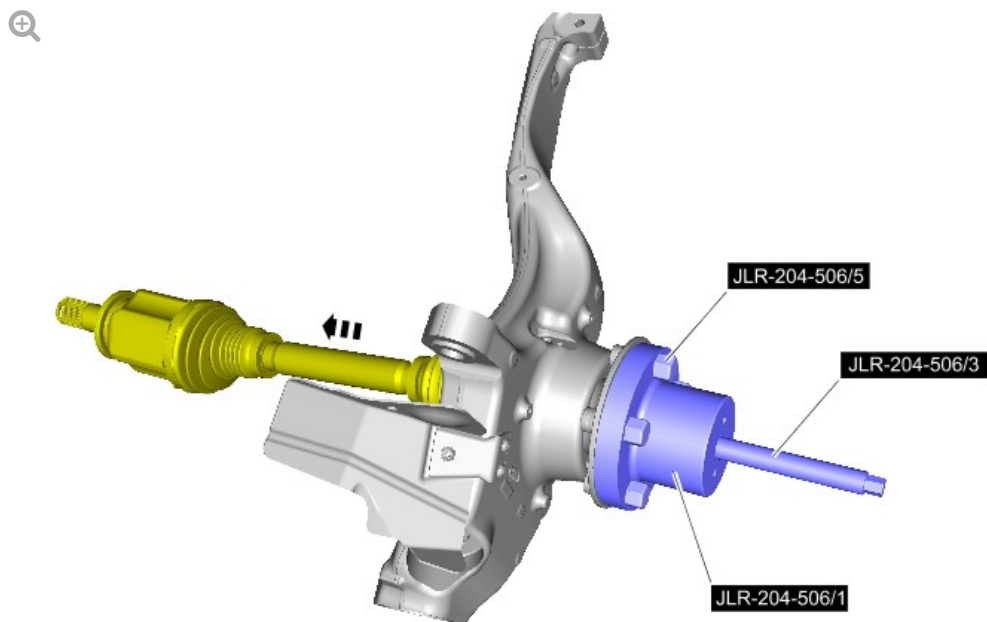


E151124

Using the special tools, release the halfshaft from the drive flange.

INSTALLATION

1.

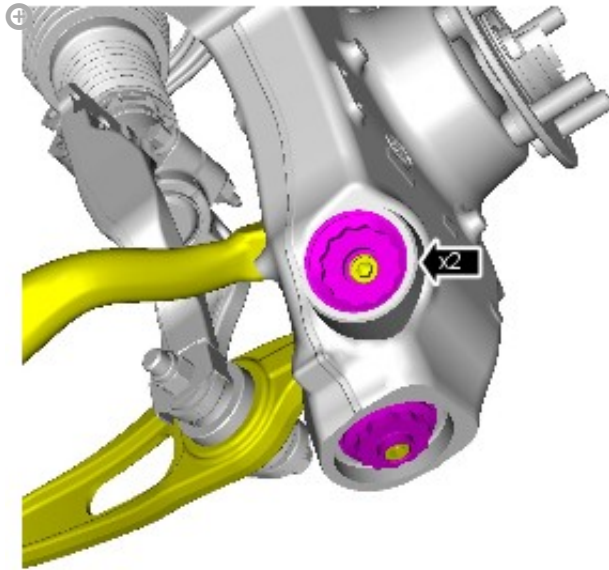


E151410

2.

CAUTION:


The lower arm ball joint can be damaged by excessive articulation. The wheel knuckle must be fully supported at all times. Do not allow the wheel knuckle to hang on the lower arm. Failure to follow this instruction will result in damage to vehicle.

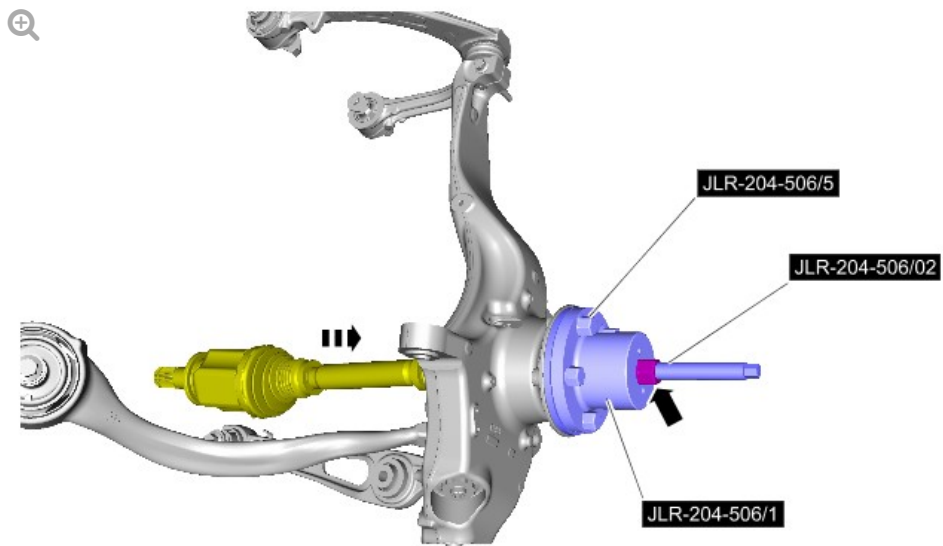

E151125


Using the special tools, pull the halfshaft in to the wheel hub.

3.

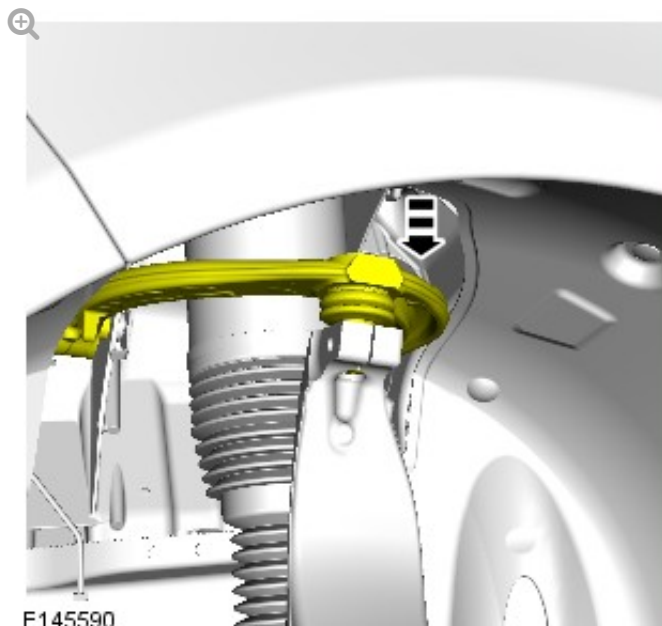

E145590

4.

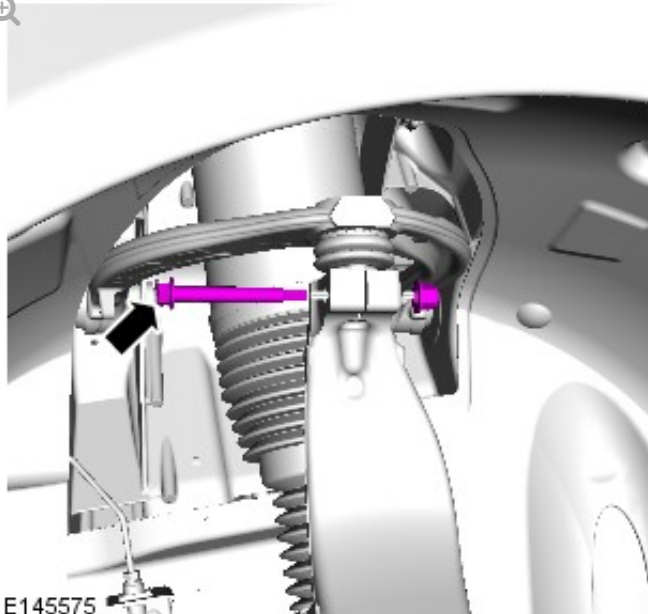


Renew Part: *Wheel knuckle nut and bolt.*

Torque: 60 Nm

5.


CAUTION:

Install a new locknut.

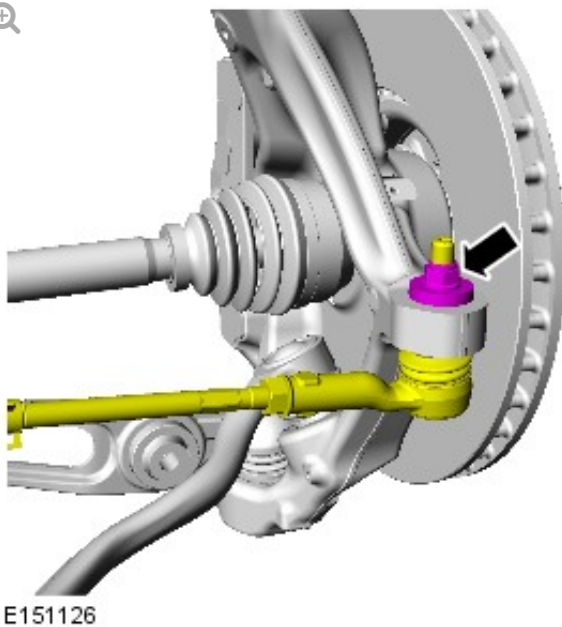

Torque: 140 Nm


6.

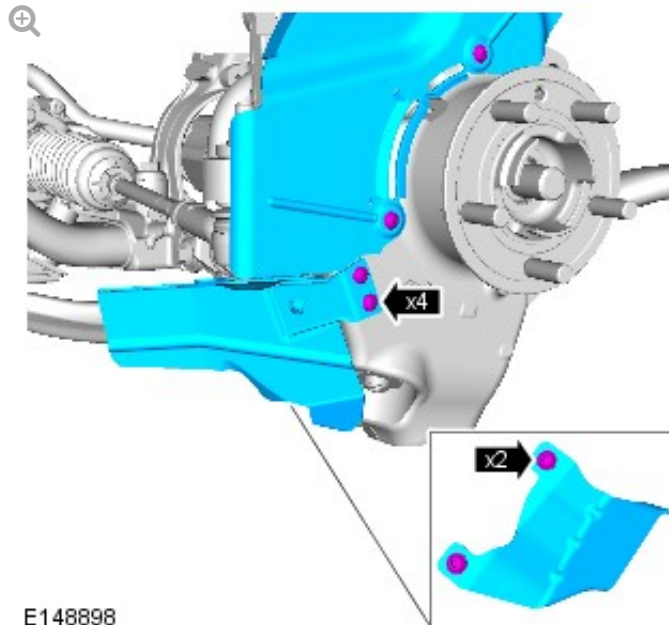

E148898

Torque: 10 Nm

7.

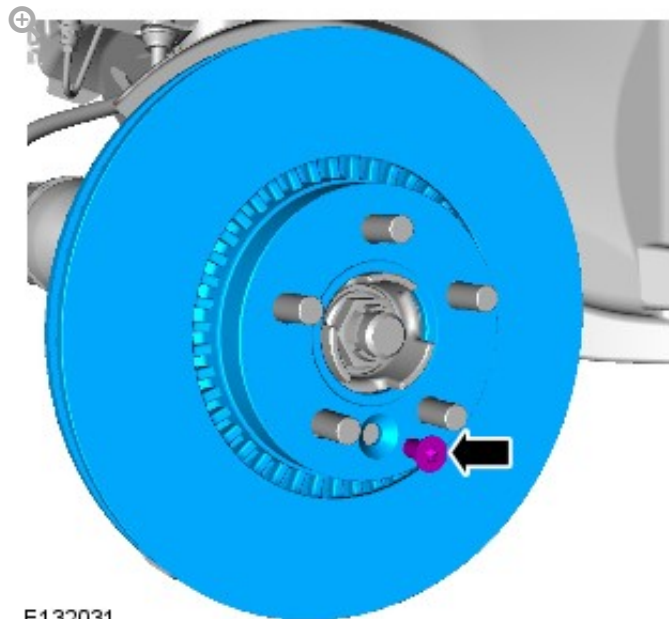

E132031


Torque: 35 Nm

CAUTIONS:

- Make sure that the brake hose does not support the full weight of the brake caliper assembly.
- LH side: Do not allow the brake caliper to hang on the brake pad wear warning sensor lead.

NOTE:


Make sure that new bolts are installed.

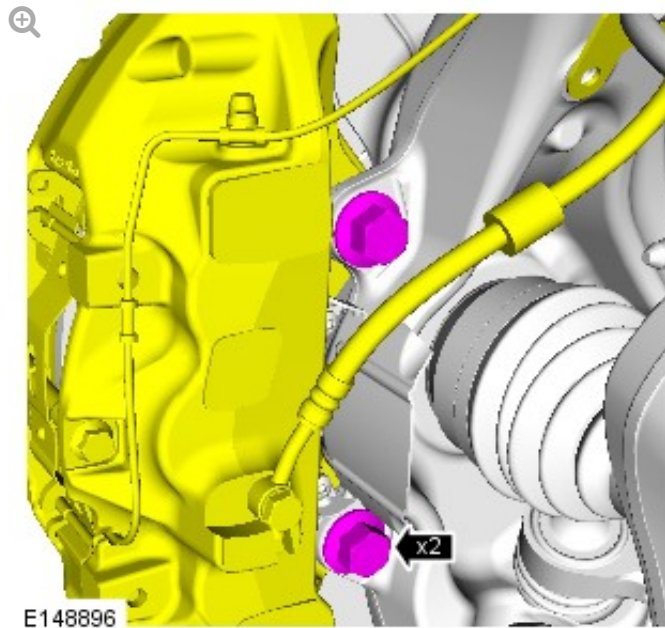*Torque:*


Stage 1: **133 Nm**

Stage 2: **60°**


9.

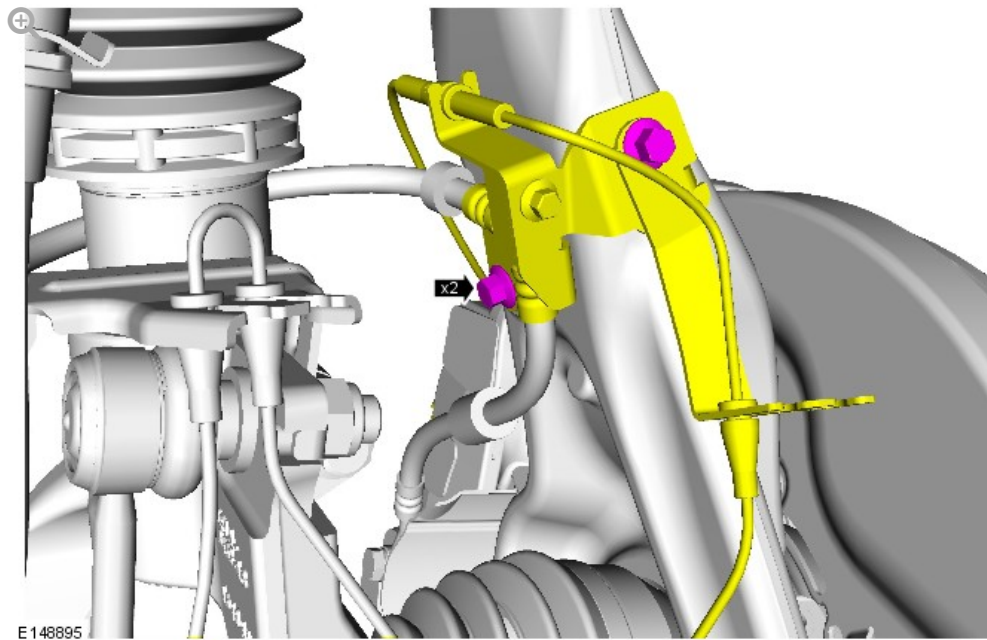

10.

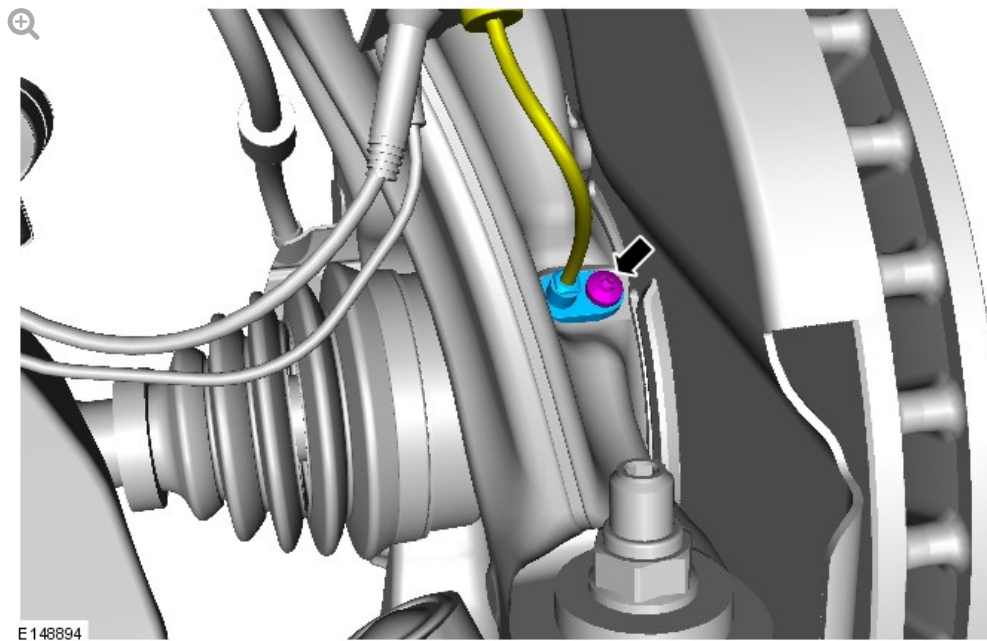

11.

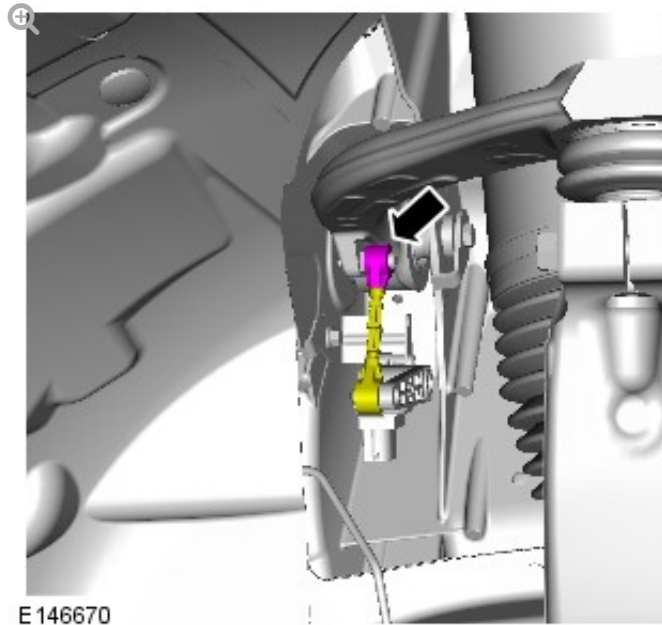


12.

CAUTION:

Do not use air tools to install the halfshaft nut.

NOTE:

Apply the brake pedal during the removal and installation of the half shaft retaining nut.

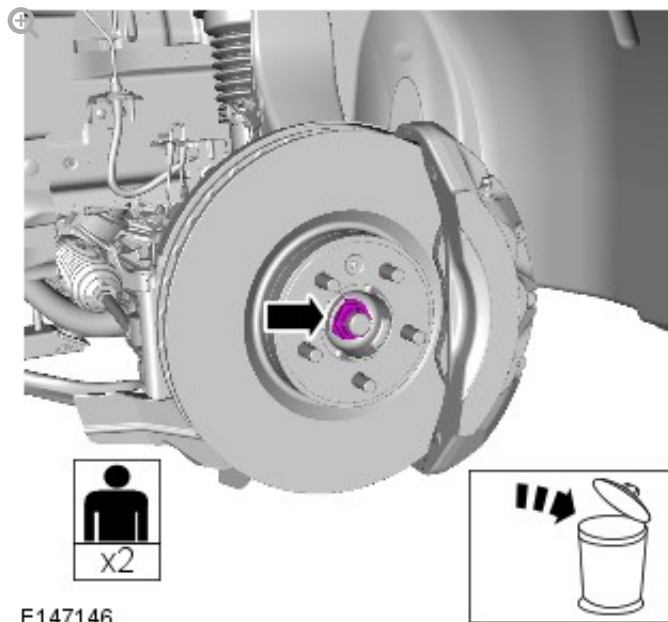

Torque: 290 Nm


13.

CAUTION:

Do not use air tools to install the halfshaft nut.


NOTE:

Apply the brake pedal during the removal and installation of the half shaft retaining nut.

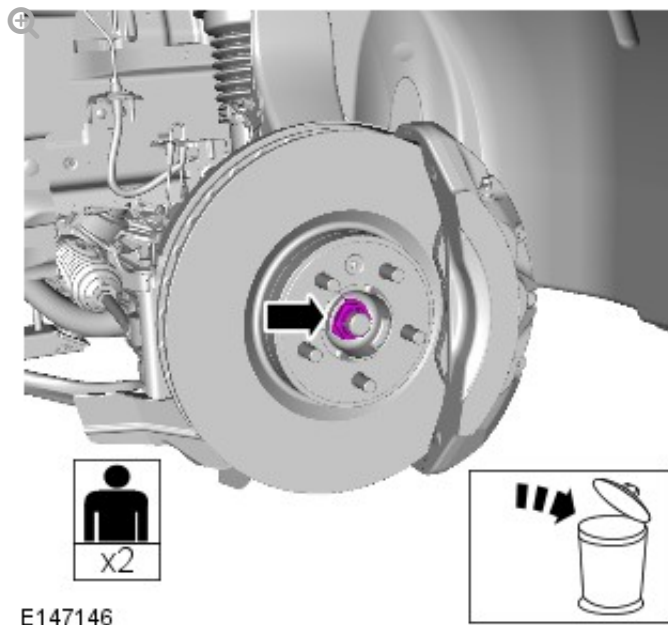

Remove and discard the halfshaft retaining nut.

14.

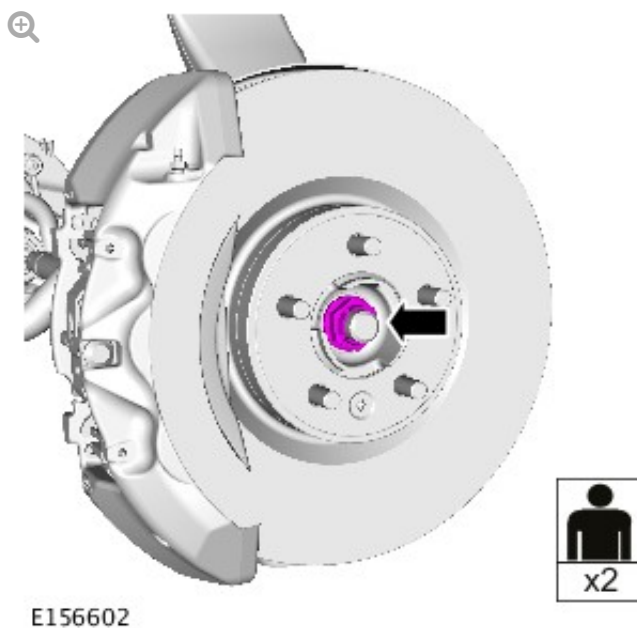

Install a new halfshaft retaining nut.

Renew Part: [Front halfshaft nut](#).

Torque:

Stage 1: **120 Nm**

Stage 2: **60°**

15. Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L](#)

[Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

16. Refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).