

2016.0 RANGE ROVER (LG), 204-00

SUSPENSION SYSTEM - GENERAL INFORMATION

FRONT BRAKE DISC AND WHEEL HUB RUNOUT CHECK - WITH WHEEL ON [G1965488]

GENERAL PROCEDURES

ACTIVATION

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- LH illustration shown, RH is similar.

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise the front of the vehicle.

2. Remove the road wheel.

Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L](#)

[Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

Refer to: [Wheel and Tire - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (204-04 Wheels and Tires, Removal and Installation).


3.

CAUTION:

Do not allow the brake caliper to hang on the brake hose.

NOTE:

Vehicles without high performance brakes.

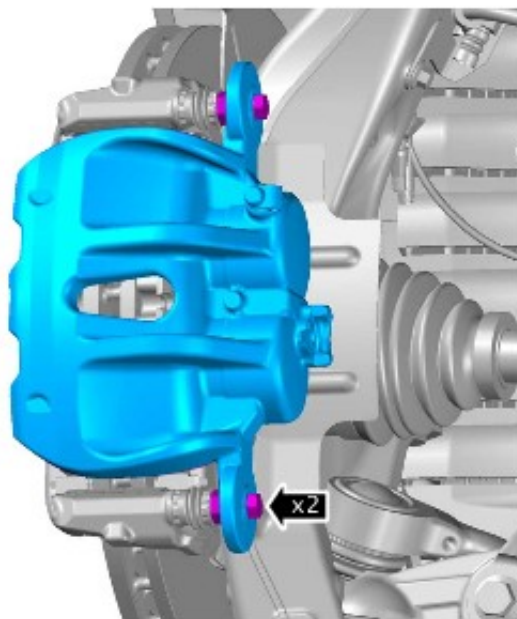

E156228

Release the brake caliper and tie aside.


4.

CAUTION:

Do not allow the brake caliper to hang on the brake hose.

NOTE:

Vehicles with high performance brakes.

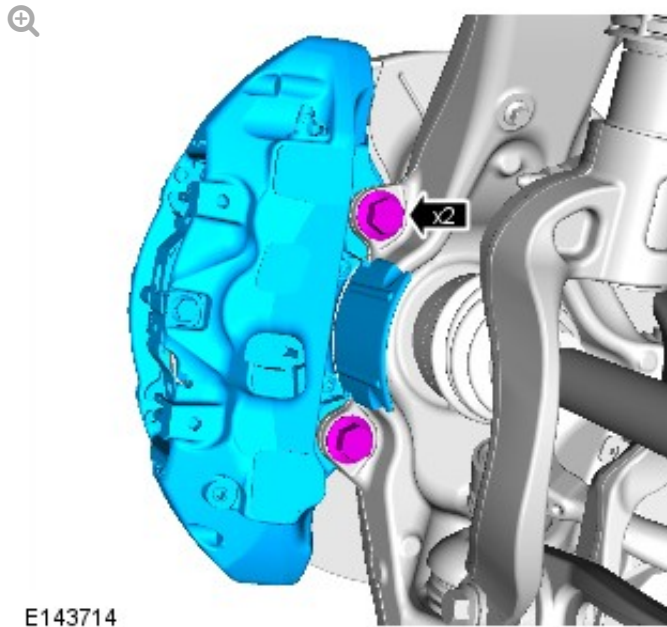


Release the brake caliper and tie aside.


5.

CAUTION:

Brake discs must be renewed in pairs, unless one disc requires changing before 1000 miles (1600 kilometers) from new.

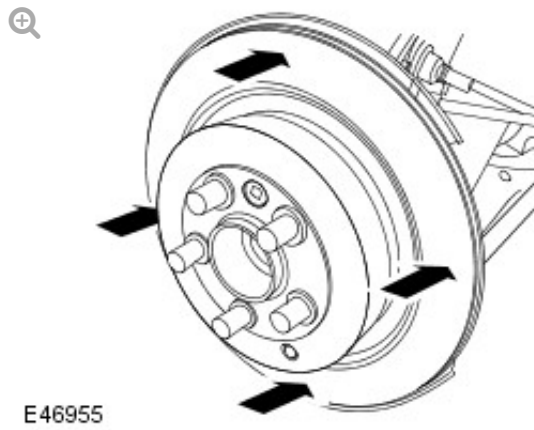

At 4 points around disc, measure disc thickness using a micrometer; renew disc if less than service limit or if variation is exceeded: Disc thickness, NEW 30 mm, Service limit = 27 mm. Thickness variation maximum = 0.01.

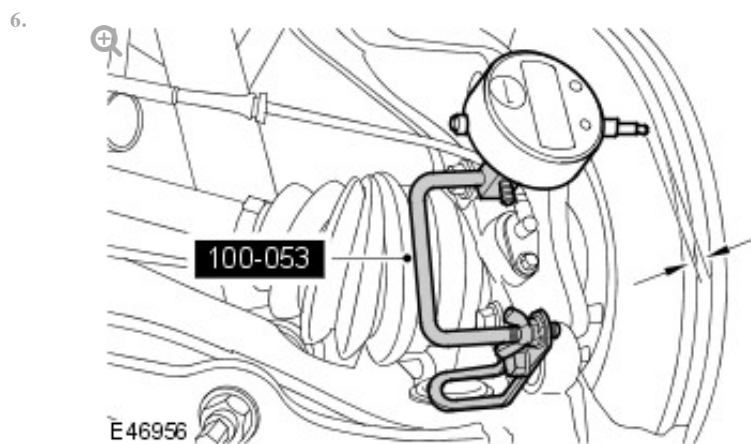

Mount a Dial Test Indicator (DTI) to and secure to inboard side of hub using caliper assembly upper bolt hole.

7. Position DTI probe 5 mm in from outer edge of disc.

8. Install the road wheel.

Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

Refer to: [Wheel and Tire - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (204-04 Wheels and Tires, Removal and Installation).

9. Zero DTI and rotate road wheel one complete revolution to measure disc runout. Disc runout must not exceed 0.05 mm (0.002 in).
10. If disc runout is outside limits:
11. Remove the road wheel.
Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).
Refer to: [Wheel and Tire - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (204-04 Wheels and Tires, Removal and Installation).
12. Remove Allen screw securing brake disc to drive flange.
13. Remove the brake disc.
14. Make sure the mating surfaces of disc and drive flange are clean.
15. Fit disc to flange, fit Allen screw and tighten to 16 Nm (12 lbf.ft.).

16.

NOTE:

Make sure the mating surfaces of disc and wheel are clean and free from paint and grease.

Install the road wheel.


Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

Refer to: [Wheel and Tire - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (204-04 Wheels and Tires, Removal and Installation).

17. Check disc runout as detailed above.

18. If runout is still outside limits, remove the road wheel.
Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).
Refer to: [Wheel and Tire - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (204-04 Wheels and Tires, Removal and Installation).
19. Remove Allen screw securing brake disc to drive flange.
20. Remove the brake disc.

21.

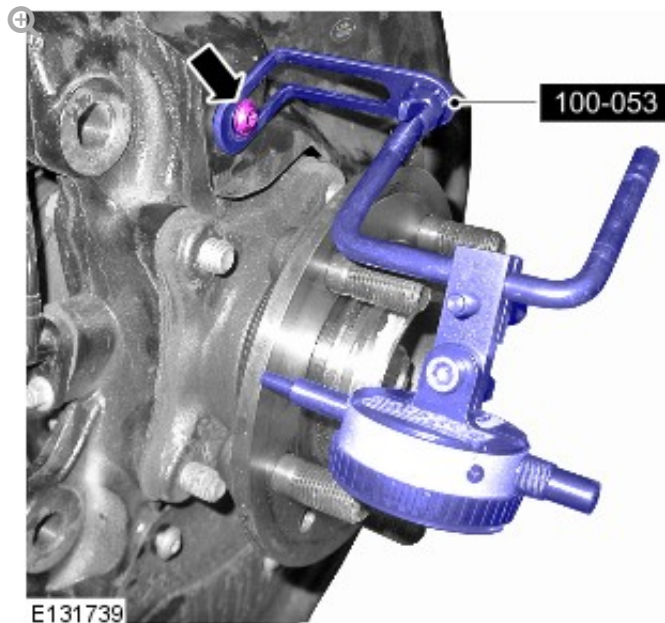

Using special tool (100-053) mount a Dial Test Indicator (DTI) to and secure to the backplate using the upper backplate fixing.

22.

CAUTION:

Make sure the DTI is positioned clear of the wheel studs.

Position the DTI probe on the outer edge of the hub face.

23. If the hub runout exceeds the limit replace the hub
Refer to: [Specifications](#) (204-01 Front Suspension, Specifications).
24. Remove the DTI.
25. Fit disc to flange, fit Allen screw and tighten to 16 Nm (12 lbf.ft.).

26. **NOTE:**

Vehicles without high performance brakes.

Install the brake caliper and tighten the bolts. TORQUE: 35 Nm

27. **NOTE:**

Vehicles with high performance brakes.

Install the brake caliper and tighten the bolts to 282 Nm.

28. Install the road wheel(s).
Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).
Refer to: [Wheel and Tire - SDV6 3.0L Diesel - Hybrid Electric Vehicle](#) (204-04 Wheels and Tires, Removal and Installation).
29. Depress brake pedal several times to set brake pads.
30. Lower the vehicle.