

SUSPENSION SYSTEM - GENERAL INFORMATION

(G 1 5 6 1 3 5 8)

57.65.02	STEERING GEOMETRY - CHECK (INCLUDES CASTER, CAMBER, KING PIN INCLINATION, TOE-IN/TOE- OUT ON TURNS AND REAR WHEEL ALIGNMENT)	ALL DERIVATIVES	0.9	USED WITHINS
57.65.04	STEERING GEOMETRY - CHECK +ADJUST (INC CASTOR, CAMBER, KING PIN INCLINATION, TOE IN/TOE OUT ON TURNS, REAR WHEEL ALIGNMENT)	ALL DERIVATIVES	0.9	USED WITHINS

PRELIMINARY

NOTES:

- **The vehicle must be set to tight tolerance mode before taking any geometry readings or making any geometry adjustments.**
- Only use calibrated equipment recommended by Land Rover.
- A change in camber means a change in toe, therefore camber must always be adjusted first (only where adjustable).

1. Note the correct geometry values before carrying out this procedure. For additional information, refer to: [Specifications](#) (204-04 Wheels and Tires, Specifications).


2. Check the tie rod ends, suspension joints, wheel bearings and wheels and tires for damage, wear and free play. Check and adjust the tire pressures.

3. Roll the vehicle backwards and forwards to settle the steering and suspension.

4. Set the vehicle into tight tolerance mode.
For additional information, refer to: [Air Suspension Manual Tight Tolerance Setting Mode](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

REAR ALIGNMENT

1.

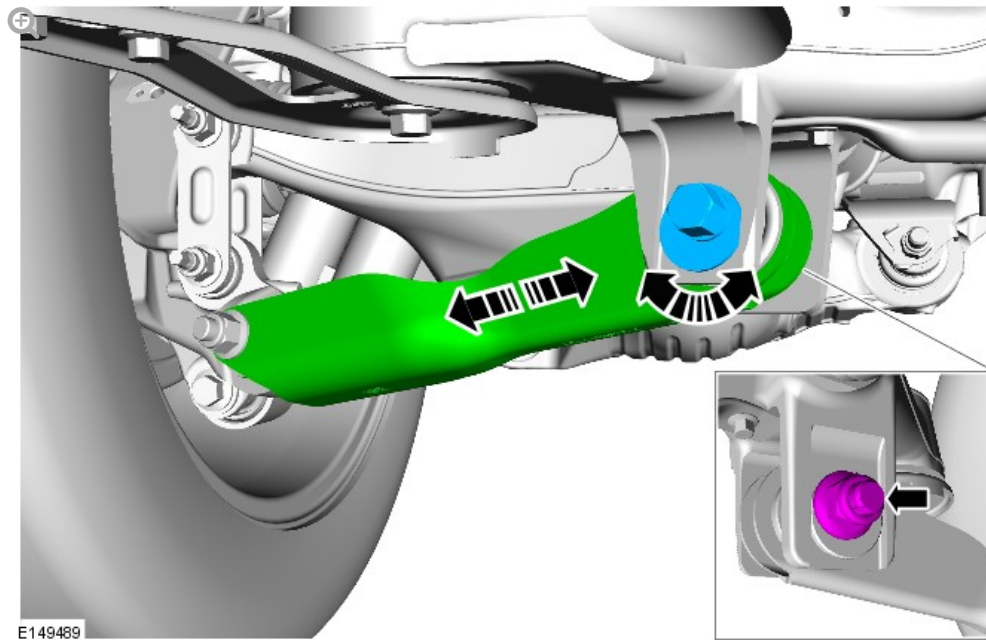

Adjust the rear wheel toe alignment. Note the readings from the steering geometry test equipment and adjust the geometry as required.

- Loosen the tie-rod end lock nut.
- Turn the eccentric bolt and adjust the toe to the specified value.
- Tighten the nut to 40 Nm + 60 degrees.
- Repeat the procedure for the other side.

FRONT ALIGNMENT

NOTE:

Make sure that the front camber is set within the correct tolerance before checking or adjusting the front toe alignment.

1.

NOTES:

- To adjust the front camber the upper wishbone arms must be replaced.
- Changing the upper wishbone arm will generate a $\pm 0.5^\circ$ change in front camber depending on the component installed.

If necessary adjust the front wheel camber. Note the readings from the steering geometry test equipment and adjust the geometry as required.

For additional information, refer to: [Left Upper Arm - GTDi 2.0L Petrol](#) (204-01 Front Suspension, Removal and Installation) / [Right Upper Arm - GTDi 2.0L Petrol](#) (204-01 Front Suspension, Removal and Installation).

-
2. Roll the vehicle backwards and forwards to settle the steering and suspension.


-
3. Set the vehicle into tight tolerance mode.

For additional information, refer to: [Air Suspension Manual Tight Tolerance Setting Mode](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

4.

CAUTION:

To prevent damage to the tie rods, use an additional wrench when loosening or tightening the components.

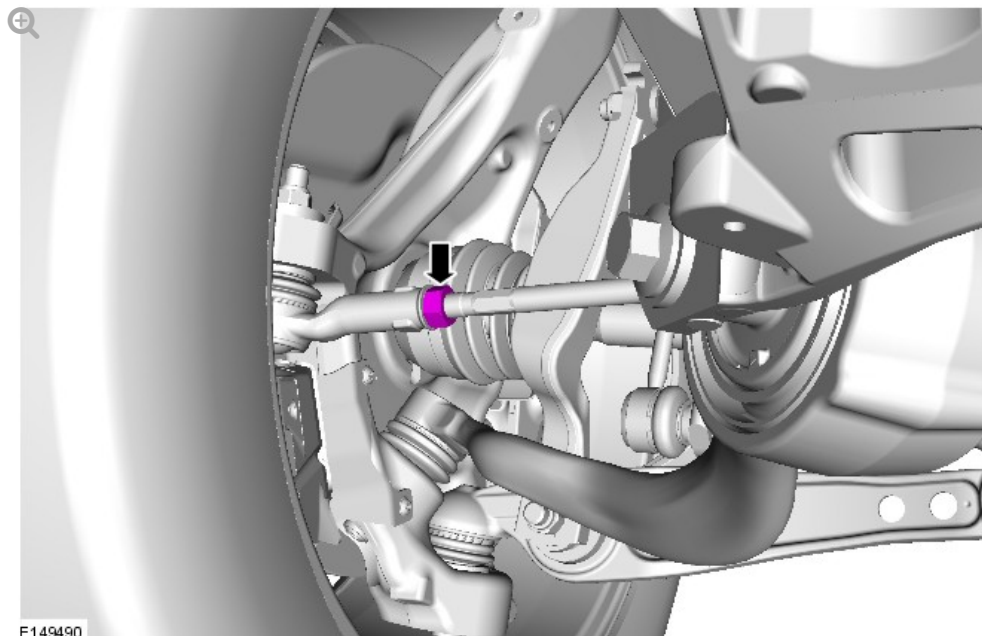

Loosen the tie-rod end lock nut.


5.

CAUTION:

Do not allow the gaiter to twist.

NOTE:

Both tie rods must be rotated by an equal amount.

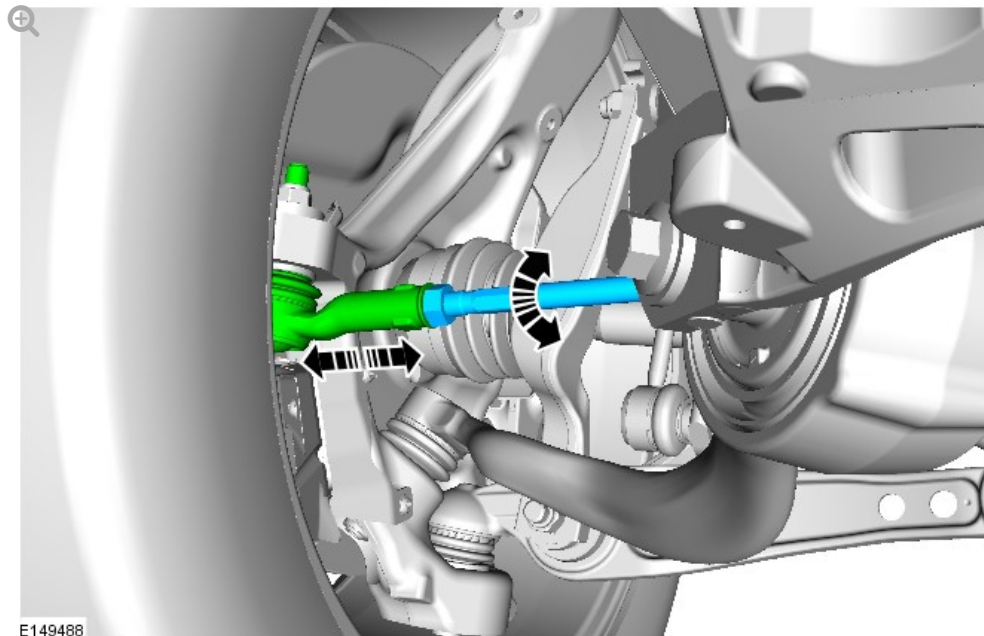

Adjust the front toe alignment. Note the readings from the steering geometry test equipment and adjust the geometry as required.

- Align the steering to straight ahead.
- Adjust the steering gear tie rod, rotate using the hexagon on the tie rod.
- Check, and if necessary, repeat the wheel alignment procedure until the correct values are obtained.
- Tighten the tie rod end lock nut to 77 Nm.
- Repeat the procedure for the other side.