

2016.0 RANGE ROVER (LG), 204-02

REAR SUSPENSION

LOWER ARM (G1761169)

REMOVAL AND INSTALLATION						
	SUSPENSION ARM					
60.35.07	ASSEMBLY - UPPER - RIGHT - RENEW	3000 CC, TDV6	0.8	USED WITHINS	+	
	ARM ASSEMBLY	3000 CC, TDV6,				
64.35.54	- LOWER - ONE SIDE - RENEW	DIESEL, WITH PARTICULATE FILTER	4.2	USED WITHINS	+	
	ARM ASSEMBLY	3000 CC, TDV6,				
64.35.54	- LOWER - ONE SIDE - RENEW	DIESEL, WITH PARTICULATE FILTER, WITH DIESEL EXHAUST FLUID	4.6	USED WITHINS	+	

REMOVAL

NOTES:

- Removal steps in this procedure may contain installation details.
- LH illustration shown, RH is similar.

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2.

CAUTION:

This step must be carried out in order to maintain the correct air suspension compressor/dryer performance.

Using Land Rover approved diagnostic equipment depressurize the rear spring.


For additional information, refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

-
3. For additional information, refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

-
4. For additional information, refer to: [Fuel Tank](#) (310-01A Fuel Tank and Lines - TDV6 3.0L Diesel, Removal and Installation) / [Fuel Tank](#) (310-01B Fuel Tank and Lines - V6 S/C 3.0L Petrol, Removal and Installation) / [Fuel Tank](#) (310-01B Fuel Tank and Lines - V6 S/C 3.0L

Petrol, Removal and Installation) / [Fuel Tank](#) (310-01A Fuel Tank and Lines - TDV6 3.0L Diesel, Removal and Installation) / [Fuel Tank](#) (310-01E Fuel Tank and Lines - SDV6 3.0L Diesel - Hybrid Electric Vehicle, Removal and Installation) / Fuel Tank (310-01F, Removal and Installation).


5.

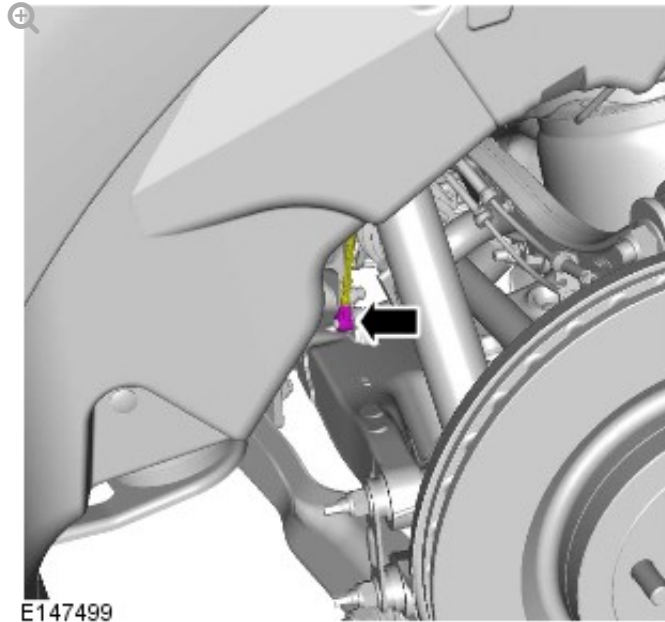

6.

CAUTION:


Use a wrench on the hexagon provided to prevent the ball joint rotating.

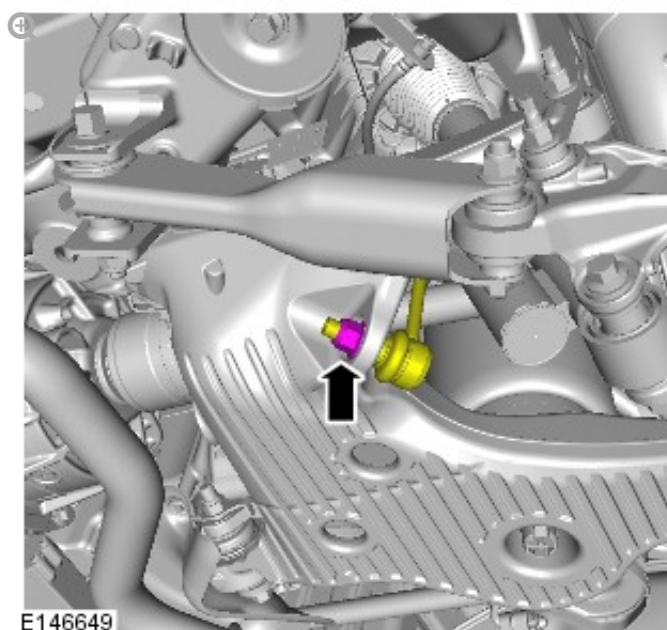

7.

NOTE:


Discard the bolt.

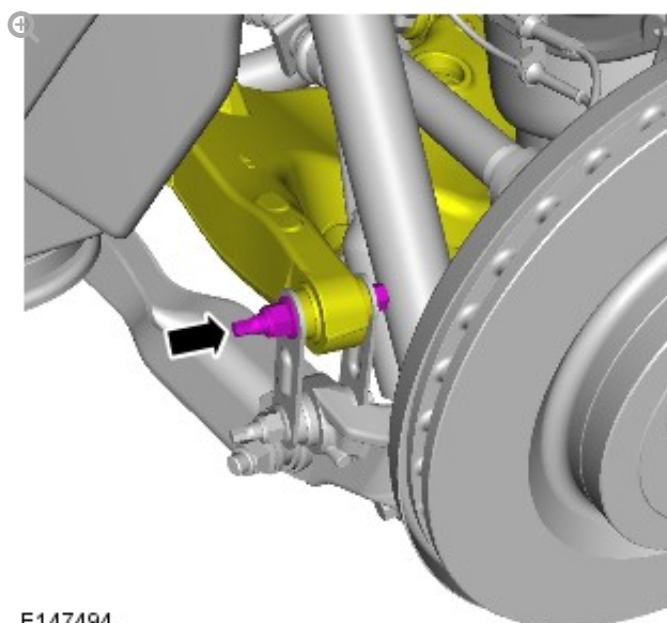


8.

NOTE:

Discard the bolt.

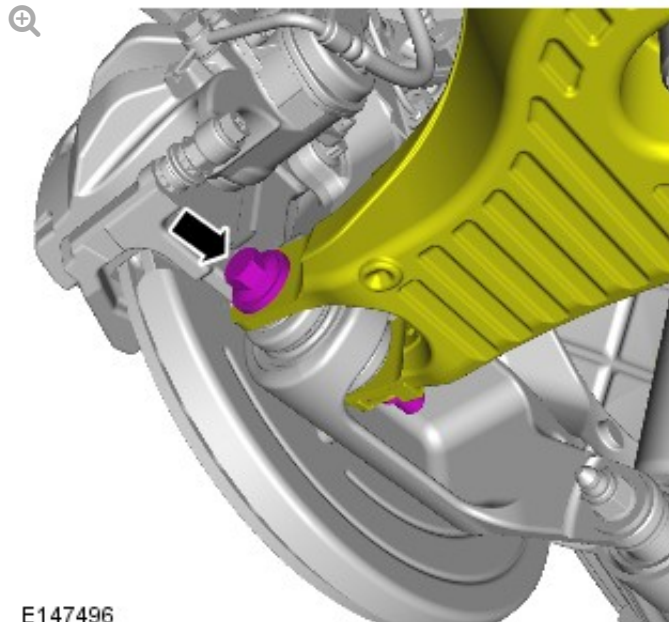


9.

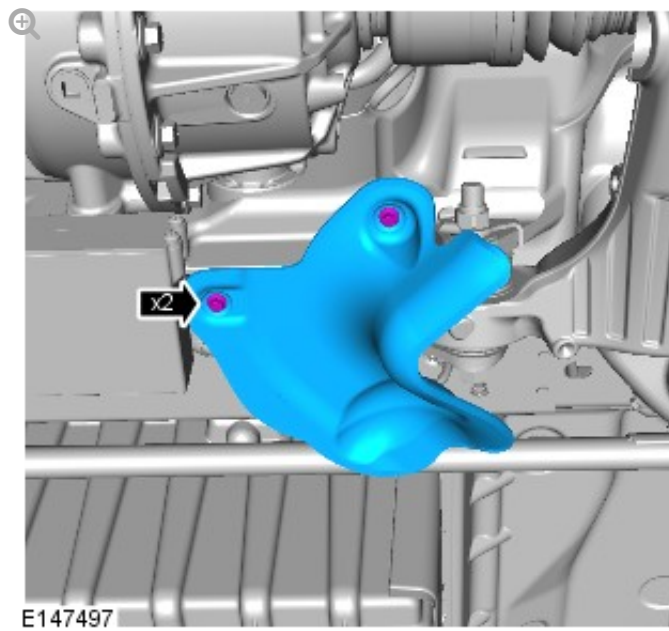

10.

NOTE:


Discard the bolt.

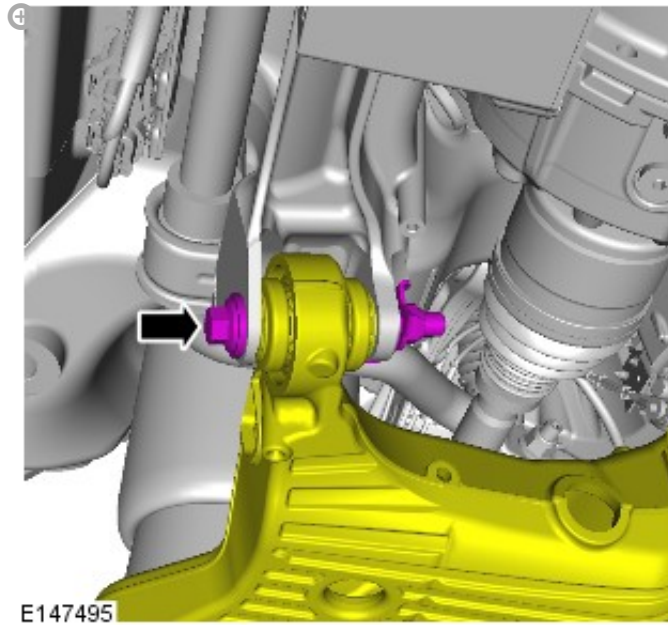

11.

NOTE:

Discard the bolt.

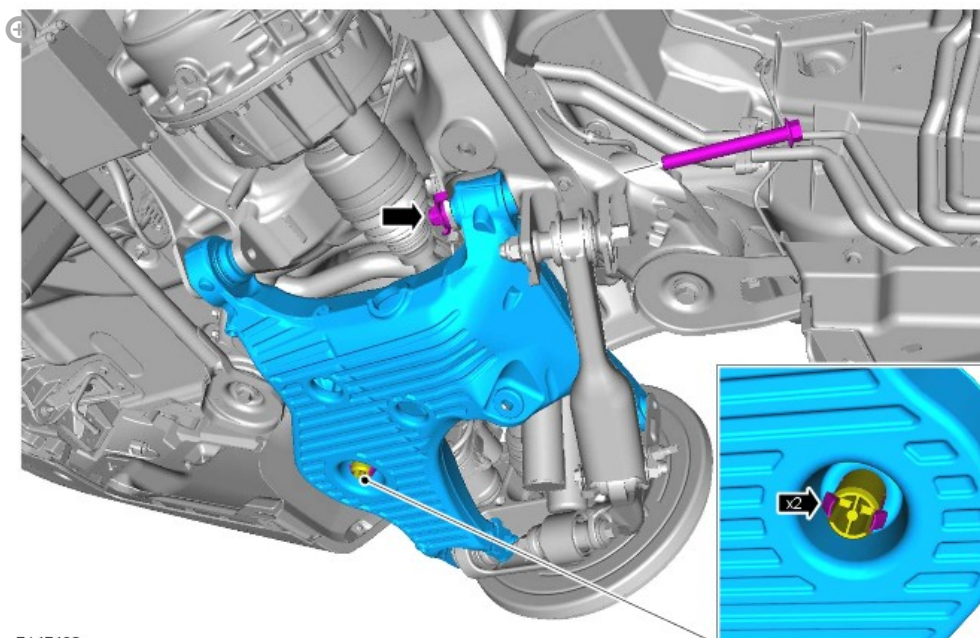


E147498

INSTALLATION

1.

CAUTIONS:

- Make sure that a new bolt is installed.
- Nuts and bolts must be tightened with vehicle at normal ride height.

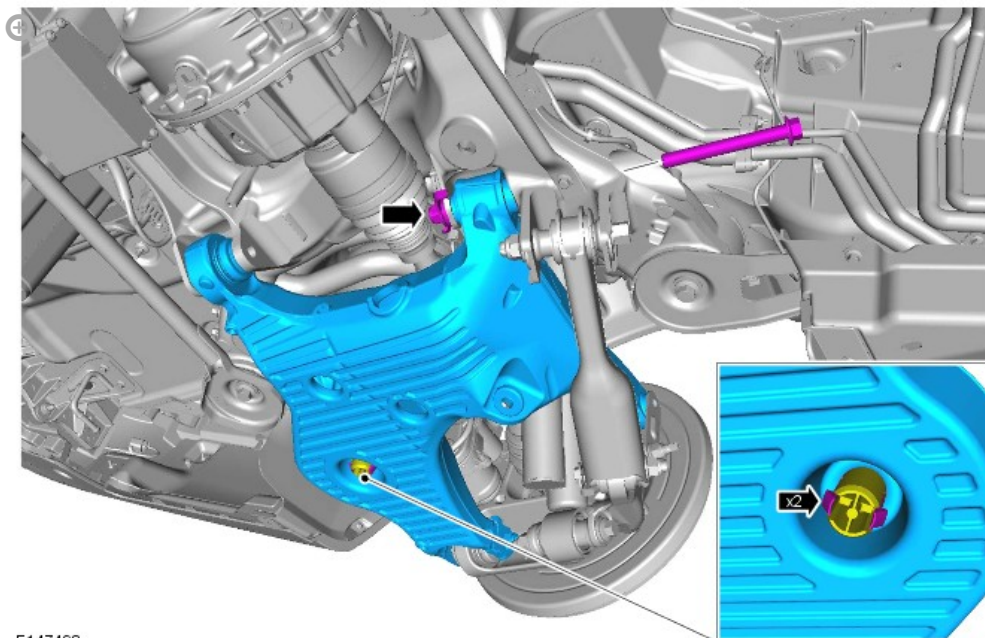


E147498

TORQUE: 100 Nm + 240 degrees

2.

CAUTIONS:


- Make sure that a new bolt is installed.
- Nuts and bolts must be tightened with vehicle at normal ride height.

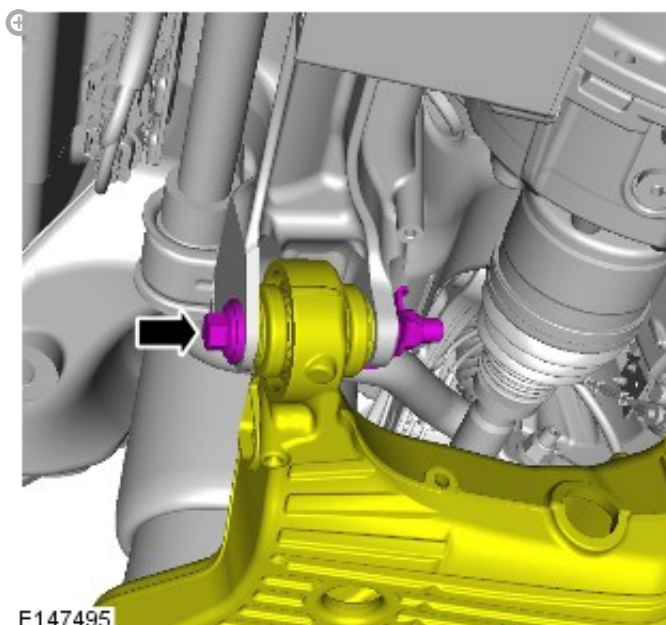

E147495

TORQUE: 100 Nm + 240 degrees

3.

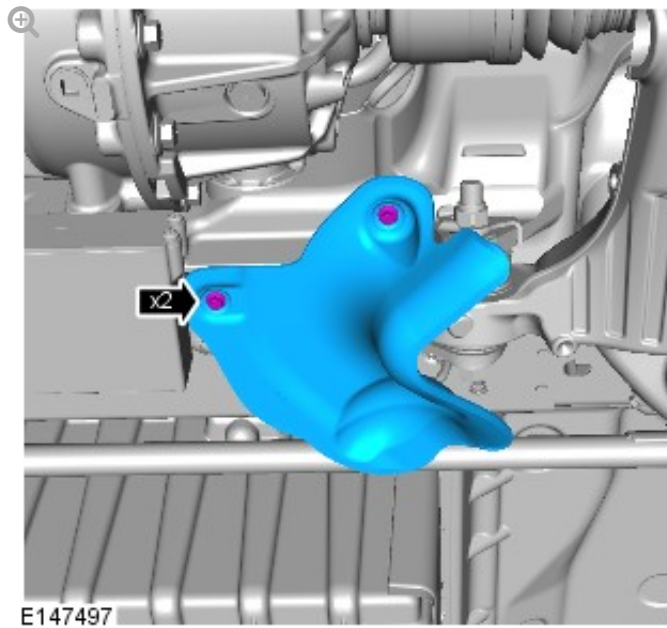


TORQUE: 10 Nm

4.

CAUTIONS:

- Make sure that a new bolt is installed.
- Nuts and bolts must be tightened with vehicle at normal ride height.

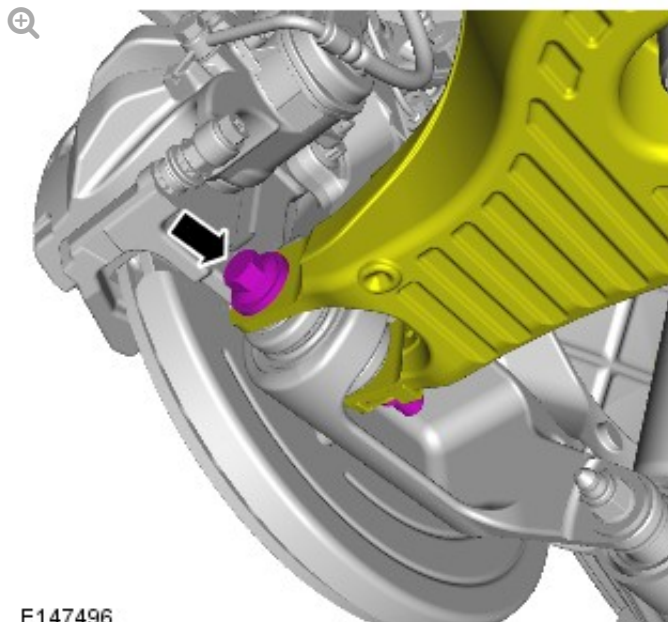


E147496

TORQUE: 70 Nm + 240 degrees

5.

CAUTIONS:

- Make sure that a new bolt is installed.
- Nuts and bolts must be tightened with vehicle at normal ride height.

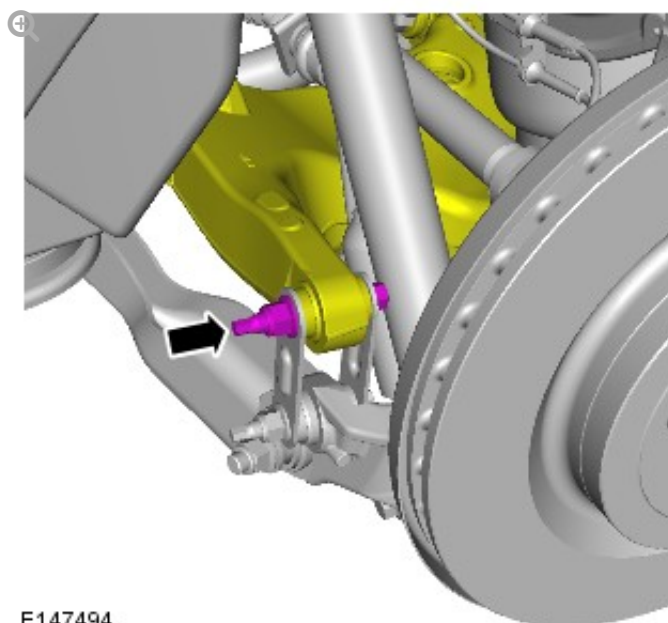

E147494

TORQUE: 50 Nm + 180 degrees

6.

CAUTION:

This step must be carried out to prevent damage to the air spring.

For additional information, refer to: [Air Suspension - Manual Control Procedure](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

-
7. Using a suitable [Transmission jack](#), support the component while tightening the nuts and bolts at normal ride height.


For additional information, refer to: [Specifications](#) (204-00 Suspension System - General Information, Specifications).

-
8. Remove the transmission jack.

9.


CAUTION:

Use a wrench on the hexagon provided to prevent the ball joint rotating.

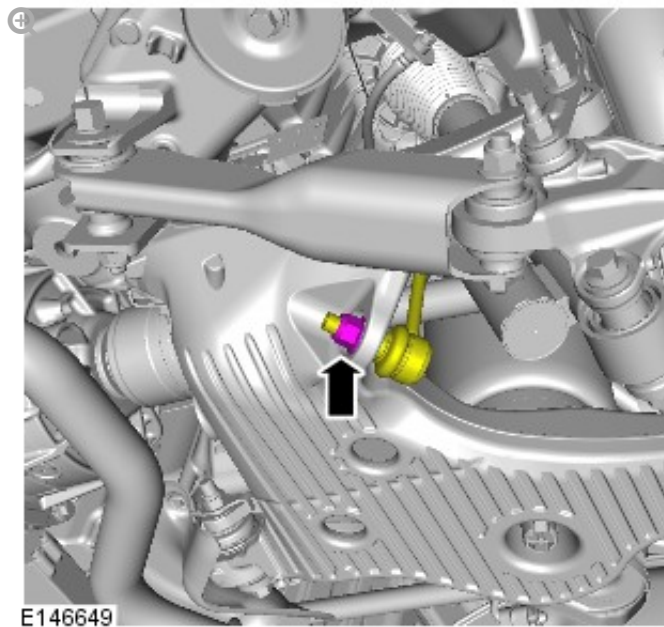

TORQUE: 185 Nm

10.

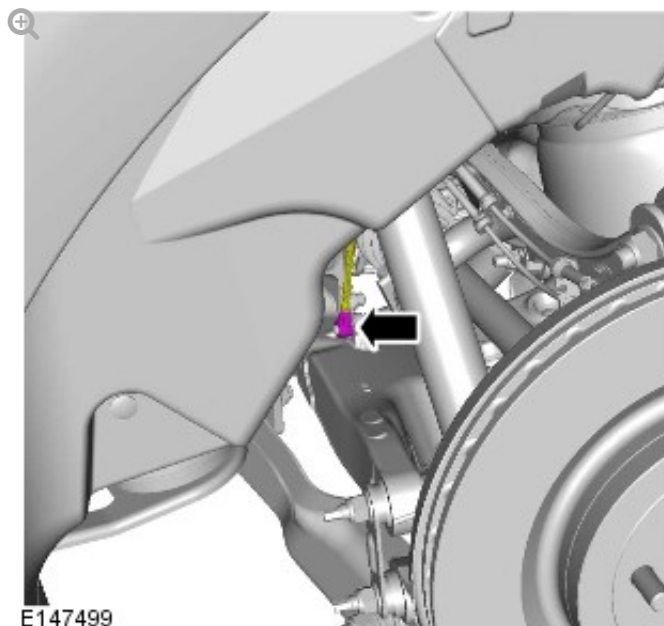

11. For additional information, refer to: [Fuel Tank](#) (310-01A Fuel Tank and Lines - TDV6 3.0L Diesel, Removal and Installation) / [Fuel Tank](#) (310-01B Fuel Tank and Lines - V6 S/C 3.0L Petrol, Removal and Installation) / [Fuel Tank](#) (310-01B Fuel Tank and Lines - V6 S/C 3.0L Petrol, Removal and Installation) / [Fuel Tank](#) (310-01A Fuel Tank and Lines - TDV6 3.0L Diesel, Removal and Installation) / [Fuel Tank](#) (310-01E Fuel Tank and Lines - SDV6 3.0L Diesel - Hybrid Electric Vehicle,

Removal and Installation) / Fuel Tank (310-01F, Removal and Installation).

-
12. For additional information, refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

-
13. **CAUTION:**

This step must be carried out in order to maintain the correct air suspension compressor/dryer performance.

Using Land Rover approved diagnostic equipment pressurize the rear spring.

For additional information, refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).