

2016.0 RANGE ROVER (LG), 204-02

REAR SUSPENSION

REAR STABILIZER BAR (G1761170)

REMOVAL AND INSTALLATION

64.35.08	STABILIZER BAR - RENEW	3000 CC, TDV6	1.3	USED WITHINS	+
----------	------------------------------	------------------	-----	-----------------	---

REMOVAL

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.
- Removal steps in this procedure may contain installation details.



All vehicles

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2. Remove rear left air spring. For additional information, refer to: [Rear Air Spring](#) (204-05 Vehicle Dynamic Suspension, Removal and Installation).




Vehicles with diesel engine

3. For additional information, refer to: Rear Muffler (309-00 Exhaust System - TDV6 3.0L Diesel, Removal and Installation) / [Rear Muffler](#) (309-00D Exhaust System - TDV8 4.4L Diesel, Removal and Installation).



Vehicles with 2.0L engine

4.

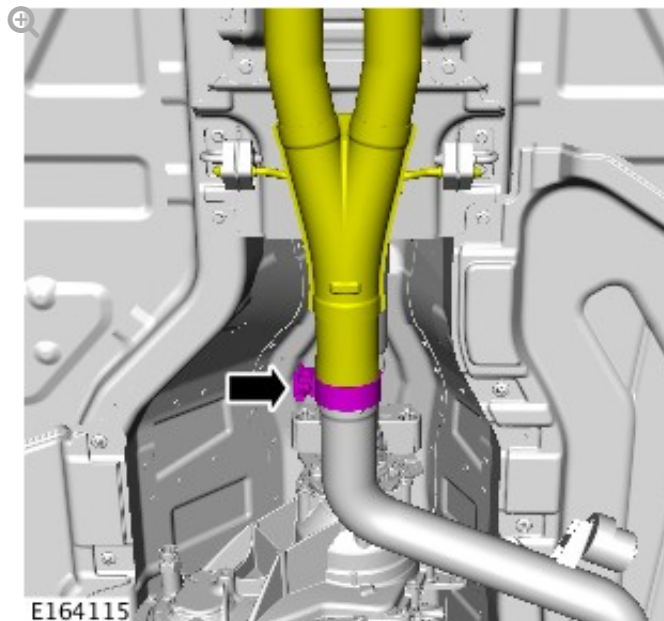


TORQUE: 55 Nm



Vehicles with 5.0L or 3.0L petrol engine

5.

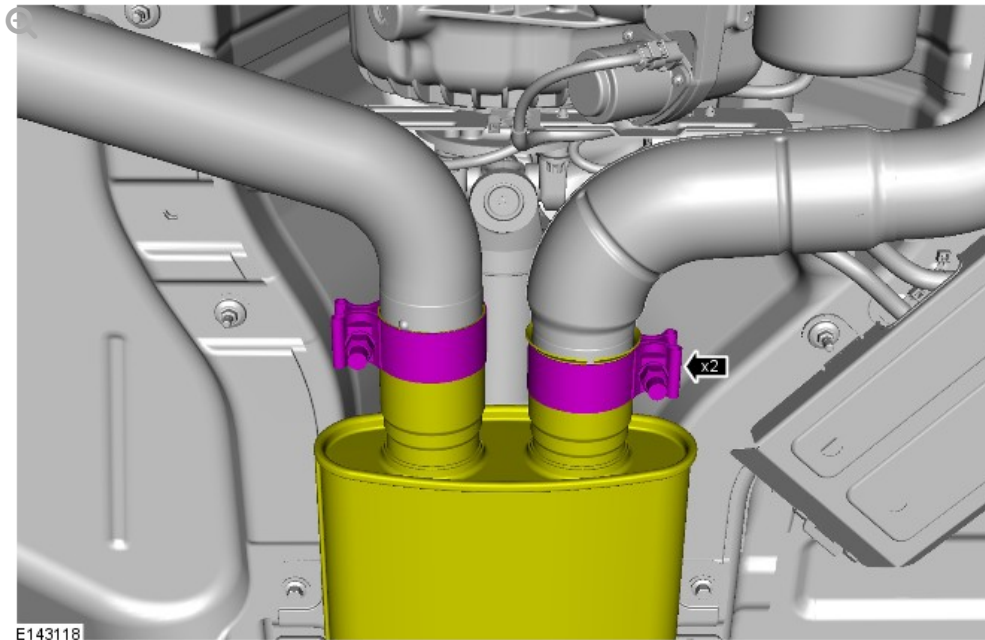

■ TORQUE: 55 Nm




Vehicles with petrol engine

6.


CAUTION:

Make sure that the exhaust system is supported with suitable retaining straps.

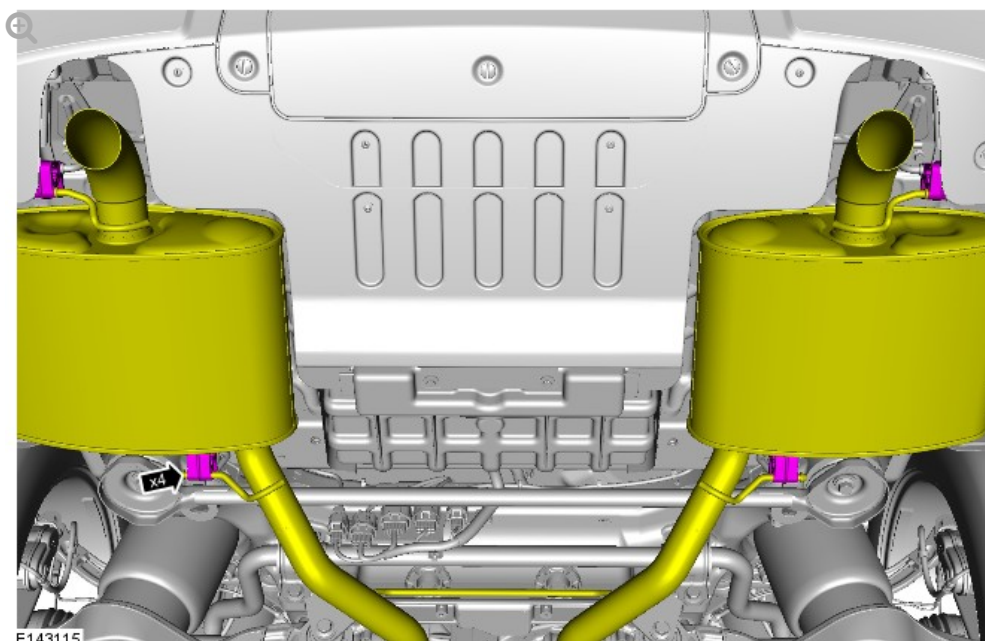

E143115

7.

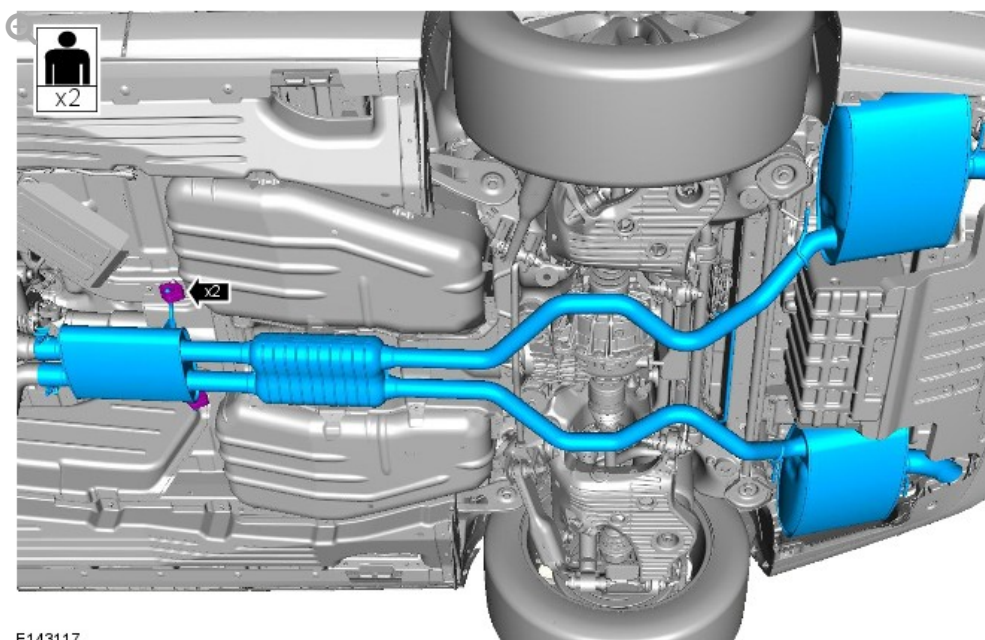

E143117



All vehicles


8.

CAUTION:

Use a wrench on the hexagon provided to prevent the ball joint rotating.


NOTES:

- LH illustration shown, RH is similar.
- The step must be carried out on both sides.

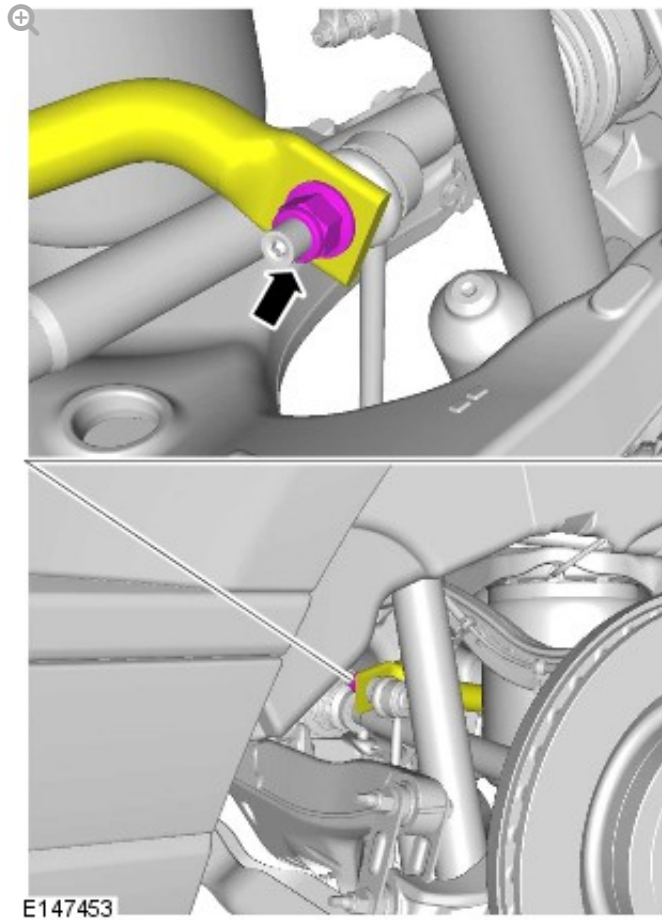


TORQUE: 185 Nm

9.

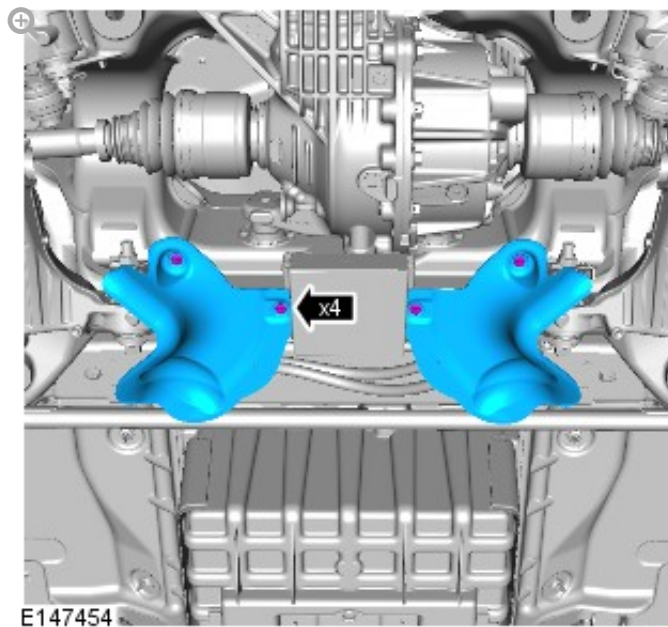

TORQUE: 10 Nm

10.

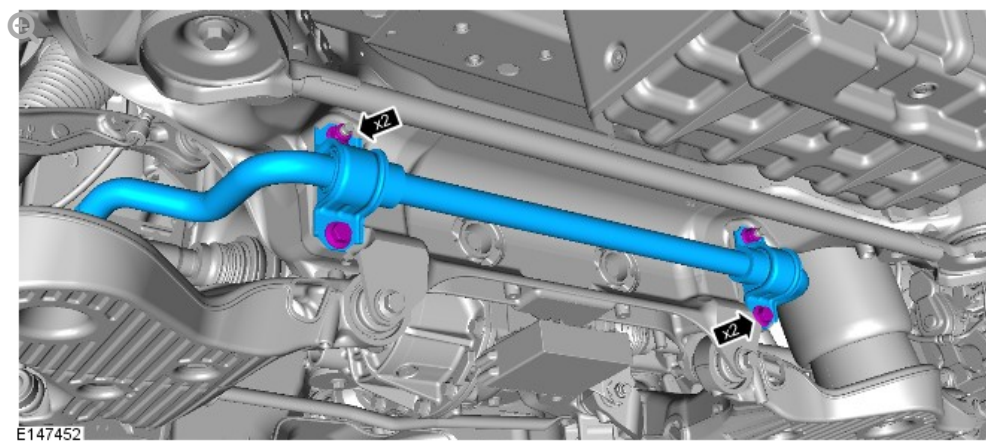

TORQUE: 110 Nm

INSTALLATION

1. To install, reverse the removal procedure.