

2016.0 RANGE ROVER (LG), 204-02

REAR SUSPENSION

UPPER ARM (G1508947)

REMOVAL AND INSTALLATION

64.35.60	ARM ASSEMBLY - UPPER - ONE SIDE - RENEW	ALL DERIVATIVES	0.5	USED WITHINS	+
----------	---	--------------------	-----	-----------------	---

REMOVAL

NOTES:

- Removal steps in this procedure may contain installation details.
- LH illustration shown, RH is similar.

1.

WARNING:


Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


-
2. For additional information, refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8](#)

N/A 5.0L Petrol/V8 S/C 5.0L Petrol (204-04 Wheels and Tires,
Removal and Installation).

3.

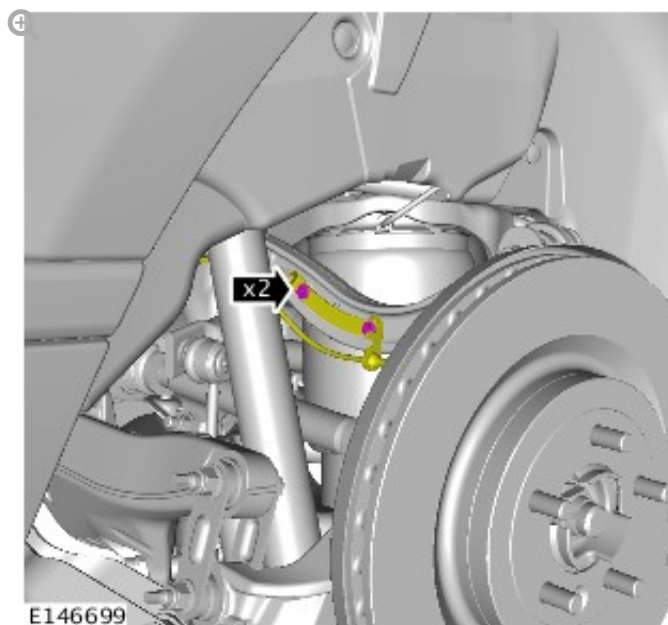


4.

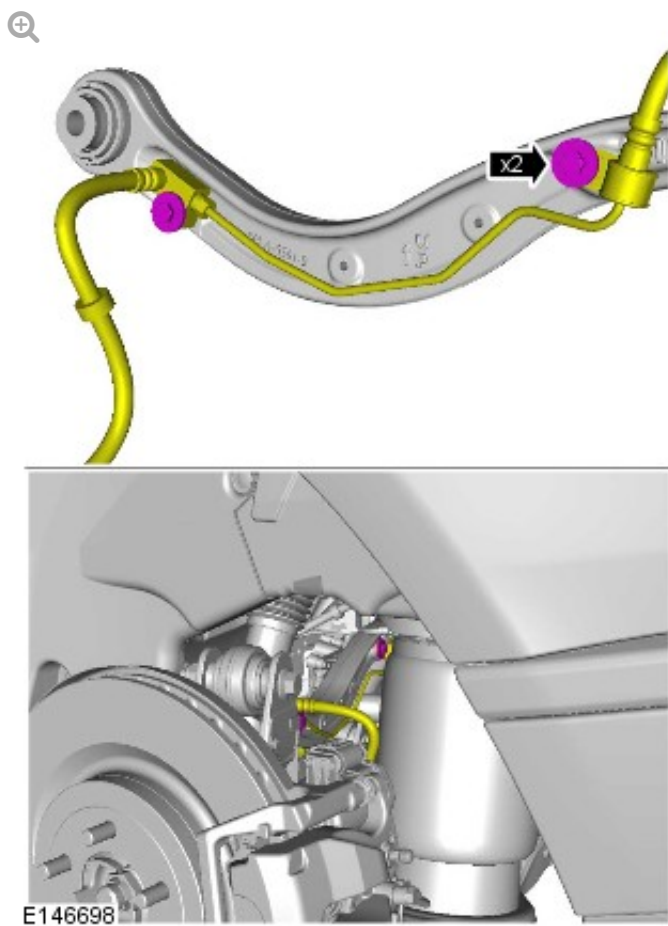

5.


CAUTIONS:

- Nuts and bolts must be tightened with vehicle at normal ride height.
- To prevent the wheel knuckle falling outwards and disconnection of the halfshaft inner joint, support the wheel knuckle.

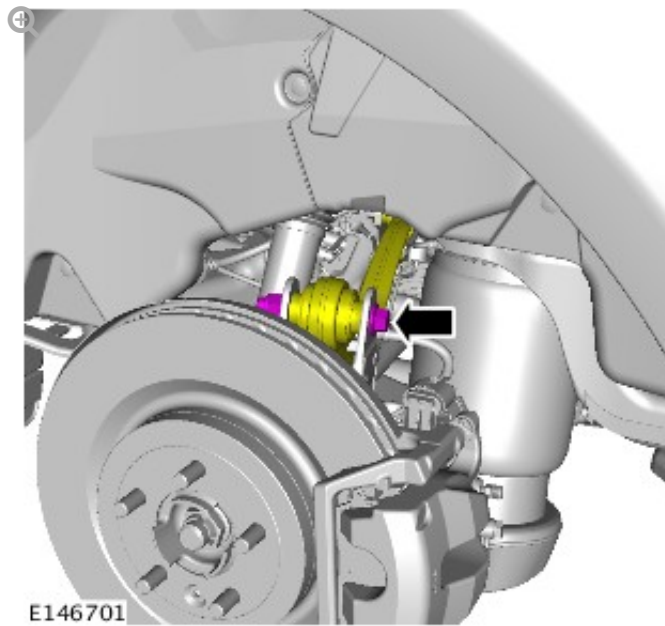

Using a [Transmission jack](#), support the wheel knuckle.

6.

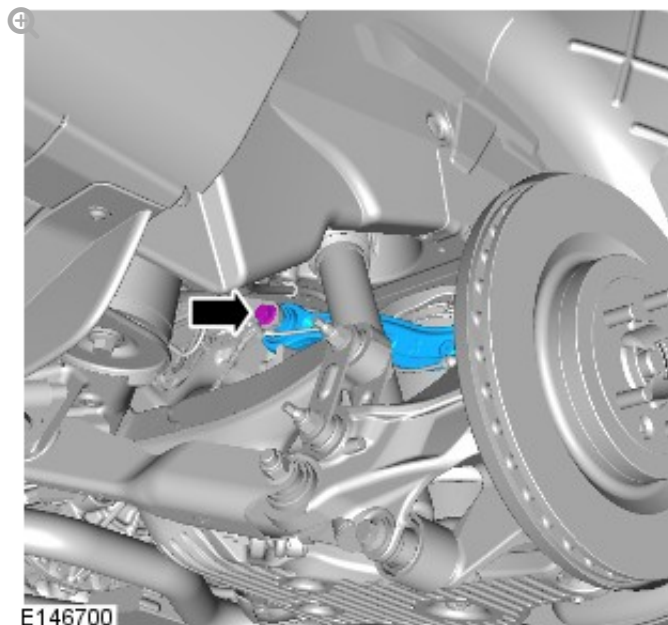


INSTALLATION

1.

CAUTION:

Nuts and bolts must be tightened with vehicle at normal ride height.

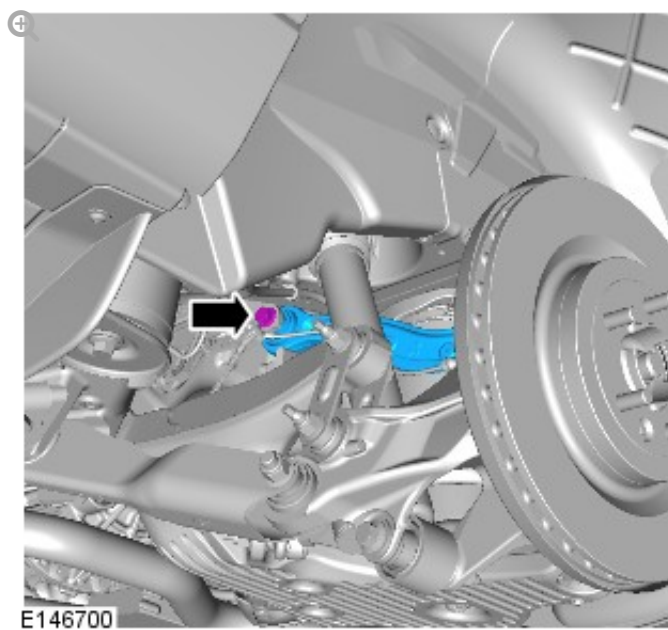


TORQUE: 50 Nm + 60 degrees

2.

CAUTIONS:

- Nuts and bolts must be tightened with vehicle at normal ride height.
- To prevent the wheel knuckle falling outwards and disconnection of the halfshaft inner joint, support the wheel knuckle.

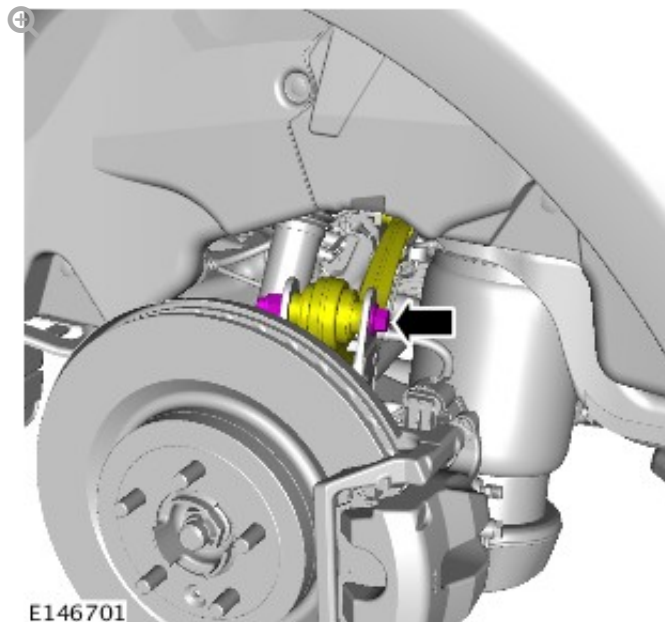



TORQUE: 50 Nm + 60 degrees

3. Tighten the nuts and bolts at normal ride height.

For additional information, refer to: [Specifications](#) (204-00 Suspension System - General Information, Specifications).


4. Remove the [Transmission jack](#).

5.

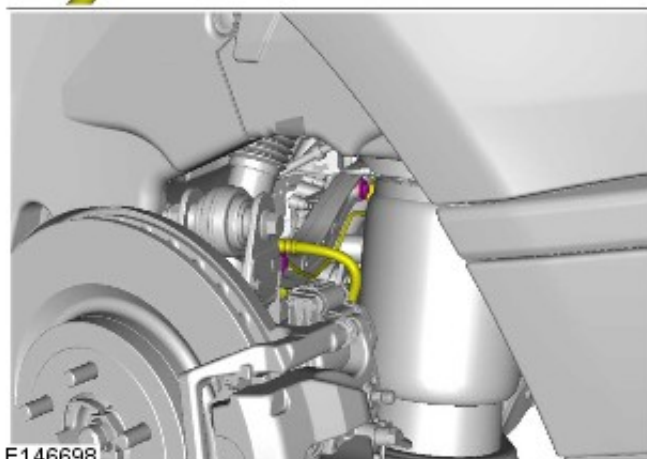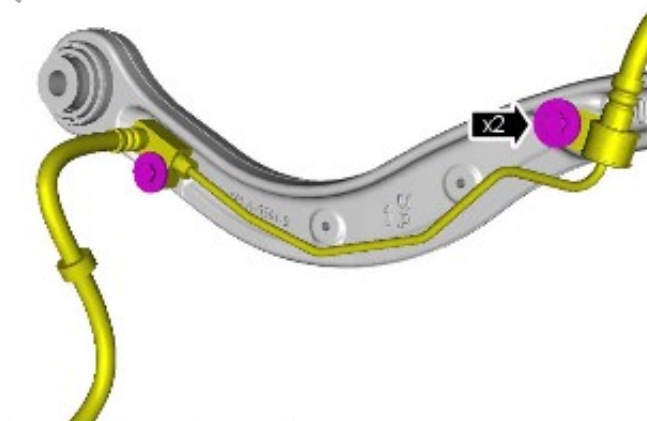

TORQUE: 10 Nm

6.

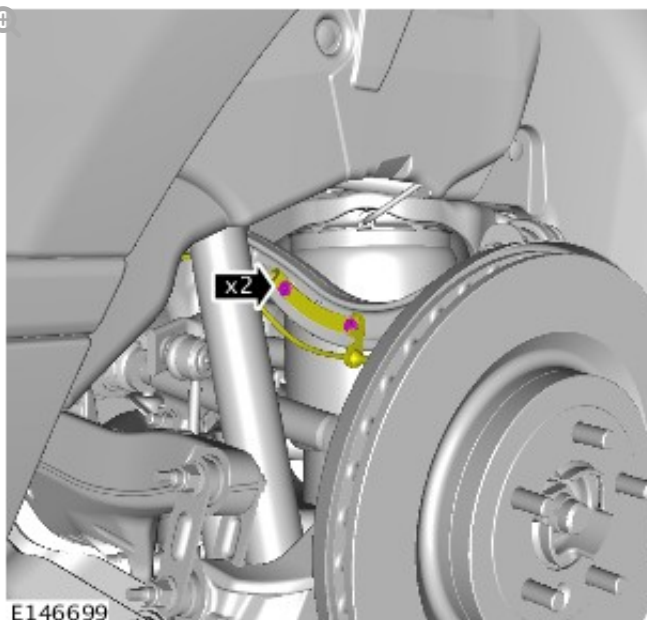

TORQUE: 10 Nm

7. For additional information, refer to: [Wheel and Tire - GTDi 2.0L](#)

Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8
N/A 5.0L Petrol/V8 S/C 5.0L Petrol (204-04 Wheels and Tires,
Removal and Installation).