

2016.0 RANGE ROVER (LG), 204-02

REAR SUSPENSION

WHEEL BEARING AND WHEEL HUB

[G1561227]

REMOVAL AND INSTALLATION

	BEARING(S)				
64.15.14	- HUB -	ALL	1.3	USED	+
	ONE SIDE -	DERIVATIVES		WITHINS	
	RENEW				


SPECIAL TOOL(S)



204-250

204-250

Wheel bearing
install and removal
tool

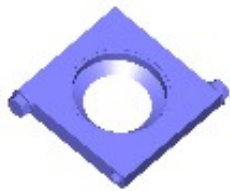

E117832

204-305

Remover, Wheel
Bearing



E101990

204-726

Remover/Installer,
Wheel Bearing



E136160

JLR-204- 726

Remover/Installer,
Front and Rear
Wheel Hub



E136166

JLR-204- 807

Installer, Front
Wheel Bearing



JLR-204-811

Support, Hub



JLR-204-812

Installer, Hub
Bearing

GENERAL EQUIPMENT

EQUIPMENT NAME

Copper Hammer

Hydraulic press

Punch

Vise

REMOVAL

1.


WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2. Refer to: [Wheel Knuckle](#) (204-02 Rear Suspension, Removal and Installation).


3.

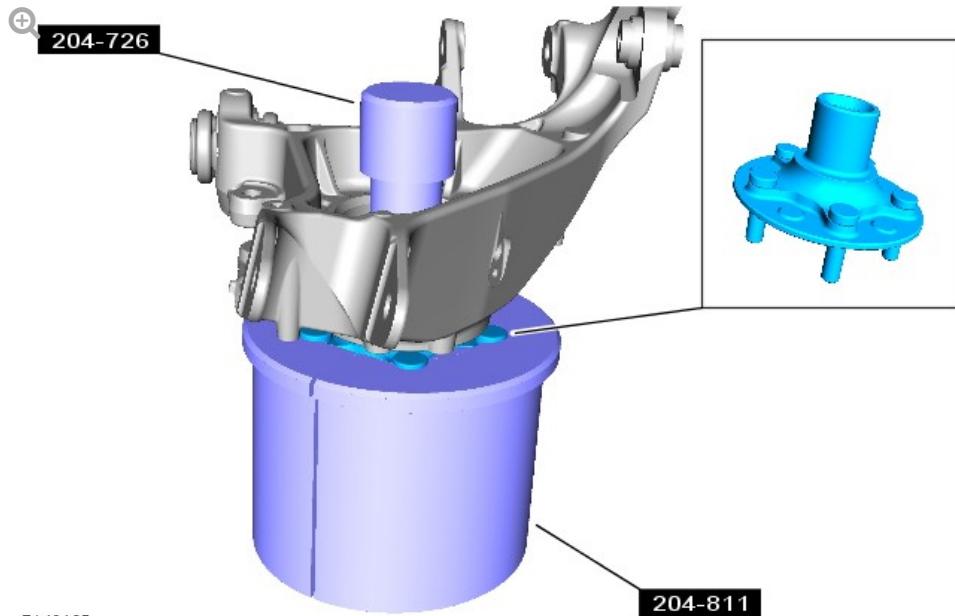

Special Tool(s): [JLR-204-726](#), [JLR-204-811](#)

General Equipment: [Hydraulic press](#)

4.

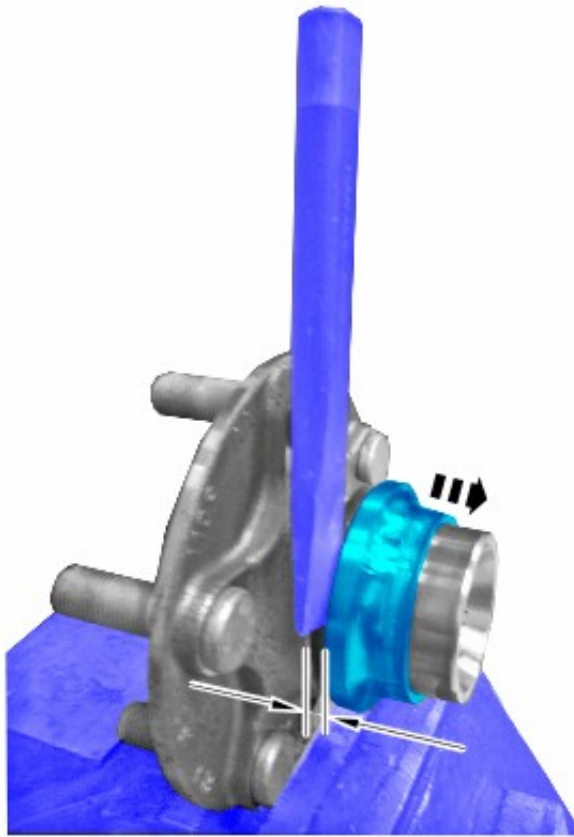


E136316

General Equipment: [Vise](#)

General Equipment: [Copper Hammer](#)

General Equipment: [Punch](#)



5.

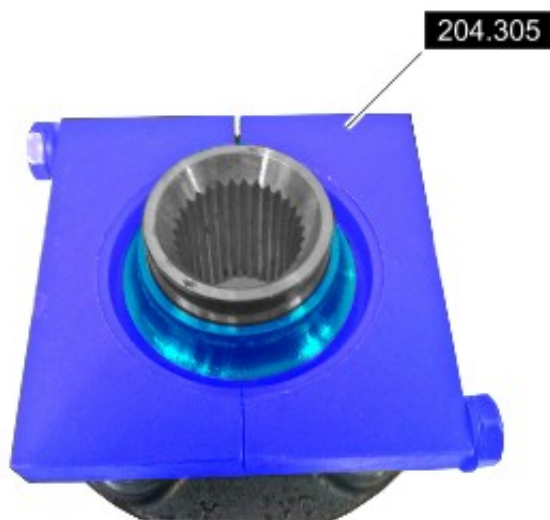

E136317

Special Tool(s): [204-305](#)

6.

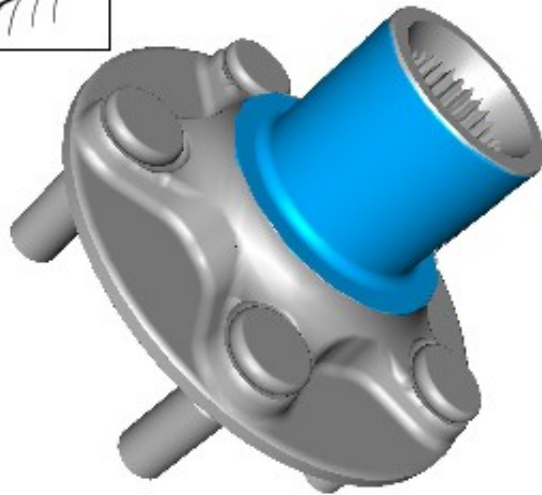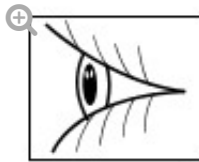


E136320

Clean all the mating faces and reusable parts thoroughly and check for damage

7.

NOTE:

Note the orientation of the clip prior to removal.

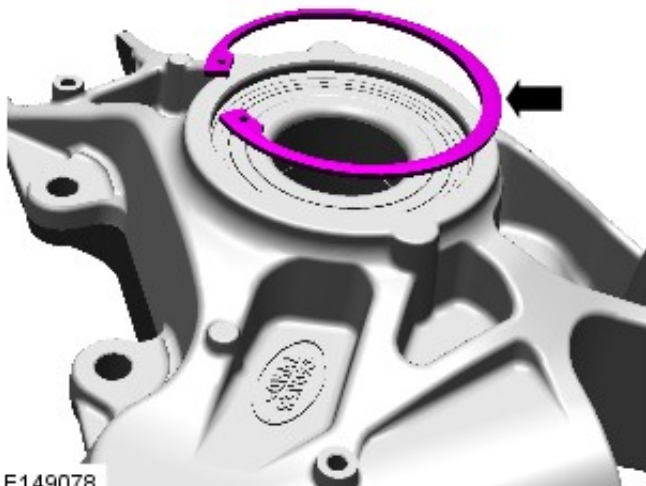


E149078

8.

NOTE:

Note the orientation (magnetic sensor ring) of the component prior to removal.

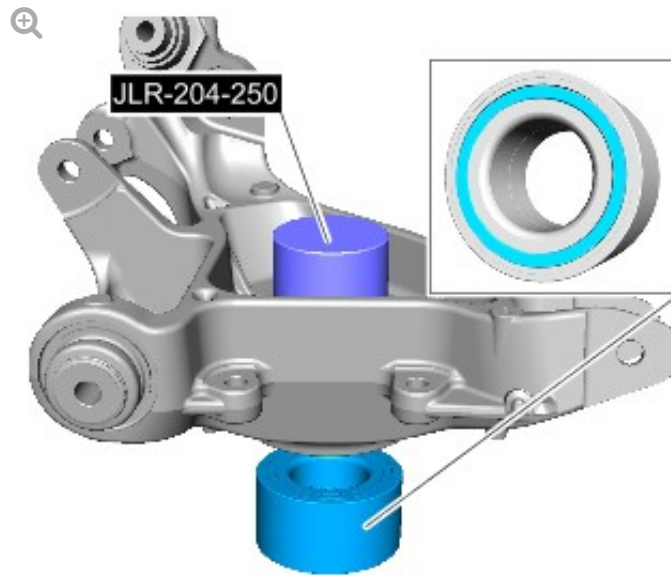

E149079

Special Tool(s): [204-250](#)

General Equipment: [Hydraulic press](#)

INSTALLATION


1.

CAUTION:

Make sure that the area around the component is clean and free of foreign material.

NOTE:

Make sure that the component is installed to the noted removal position.

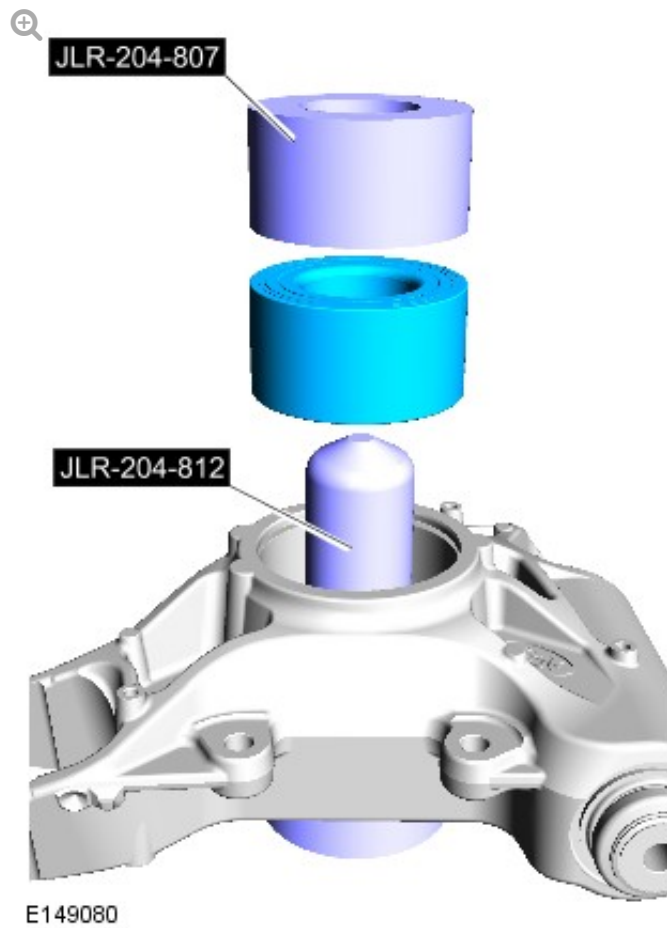


Special Tool(s): [JLR-204-807](#), [JLR-204-812](#)

General Equipment: [Hydraulic press](#)

2.


NOTE:

Make sure that the component is installed to the noted removal position.

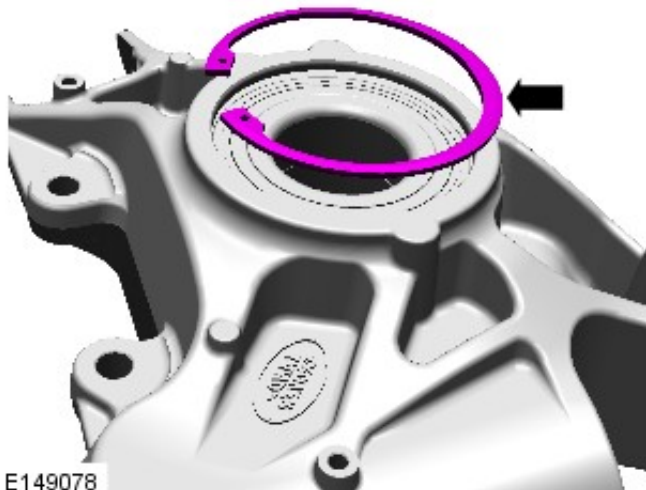

E149078

3.

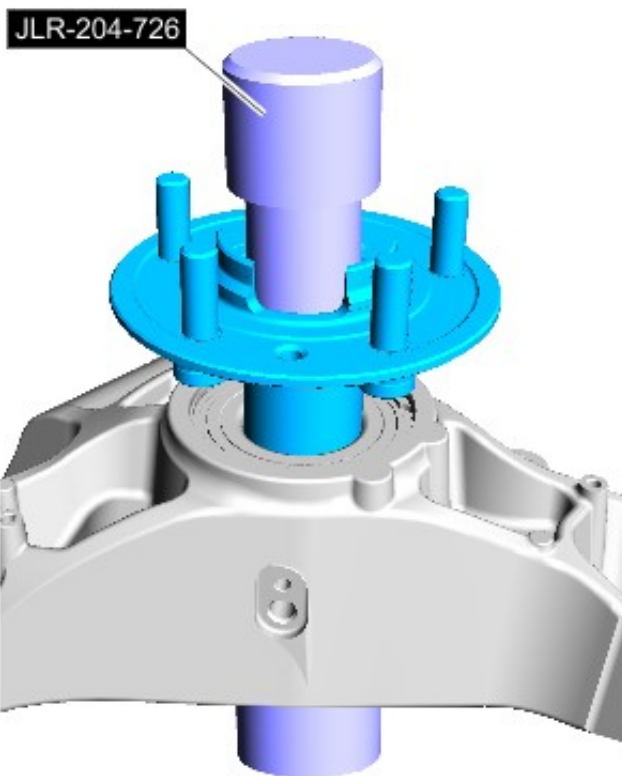

E149022

Special Tool(s): [204-726](#), [204-250](#)

General Equipment: [Hydraulic press](#)

4. Refer to: [Wheel Knuckle](#) (204-02 Rear Suspension, Removal and

Installation).