

2016.0 RANGE ROVER (LG), 204-02

REAR SUSPENSION

WHEEL KNUCKLE (G1561228)

REMOVAL AND INSTALLATION

SPECIAL TOOL(S)



204-506/1

Remover/Installer,
Halfshaft



204-506/2

Remover/Installer,
Halfshaft Spacer



204-506/3

Remover/Installer,
Halfshaft Screw
Thread



204-506/5

Retainers, Halfshaft
tools

GENERAL EQUIPMENT

EQUIPMENT NAME

Transmission jack

REMOVAL

NOTES:

- If a new knuckle is installed a new wheel bearing must be installed.
- Right hand shown, Left hand similar.
- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.

1.

CAUTION:

This step must be carried out in order to maintain the correct air suspension compressor/dryer performance.

Using Land Rover approved diagnostic equipment depressurize the rear spring.

Refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

2.

WARNING:

Make sure to support the vehicle with axle stands.

Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).


3.

CAUTION:

Do not use air tool to remove the halfshaft nut.

NOTE:


Retain the nut for the installation procedure.

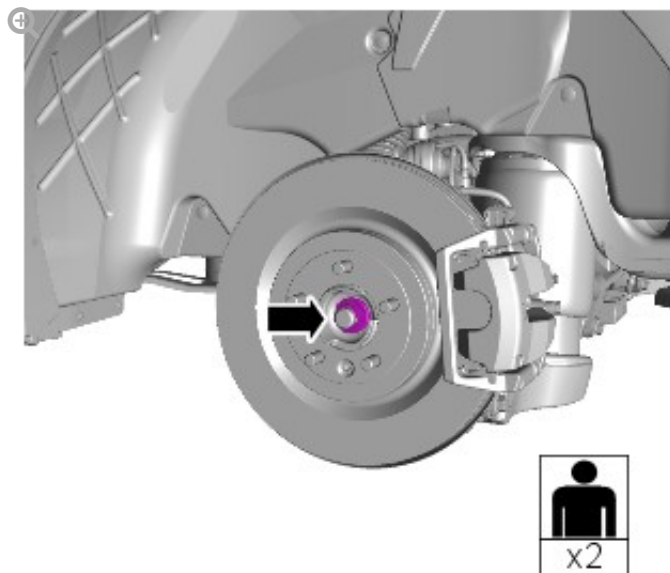

E147102

Apply the footbrake to aid the halfshaft nut removal.

4.

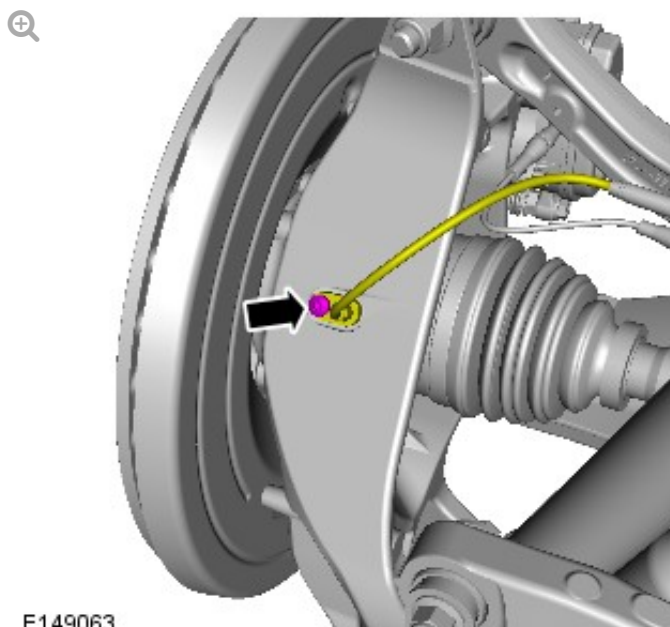


E149063


5.

NOTE:


Discard the bolts.

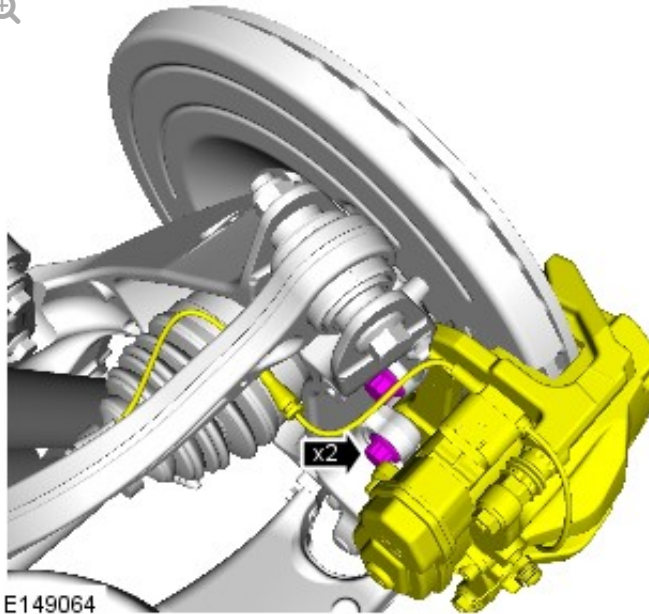

6.

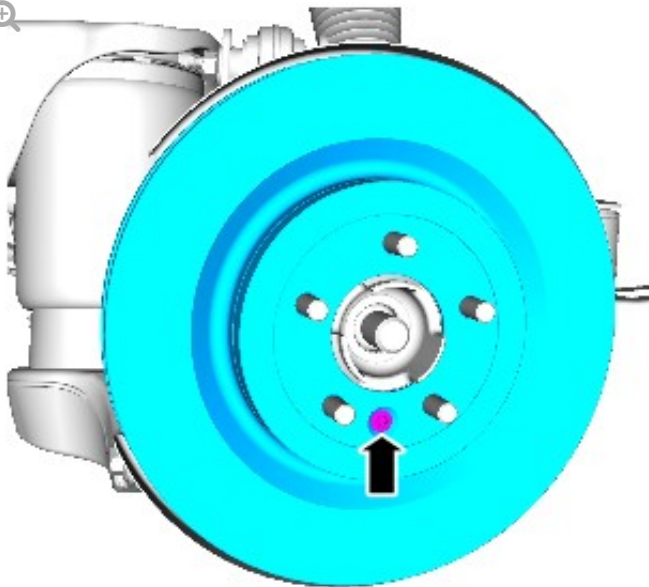

7.

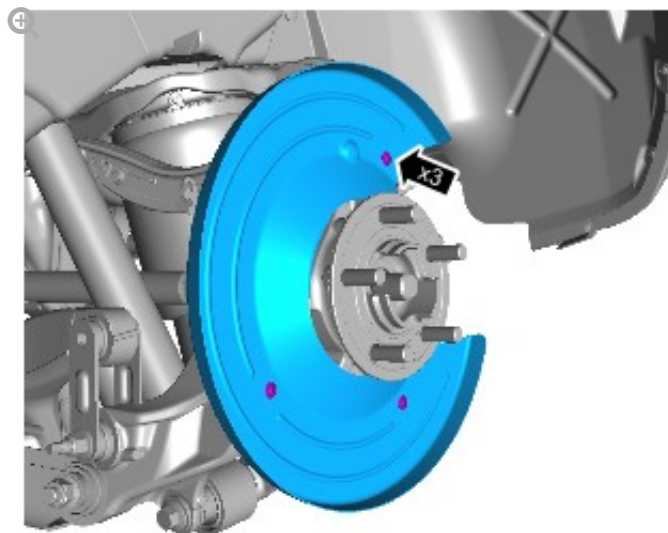


E148378

8.

NOTE:

Discard the nut and bolt.

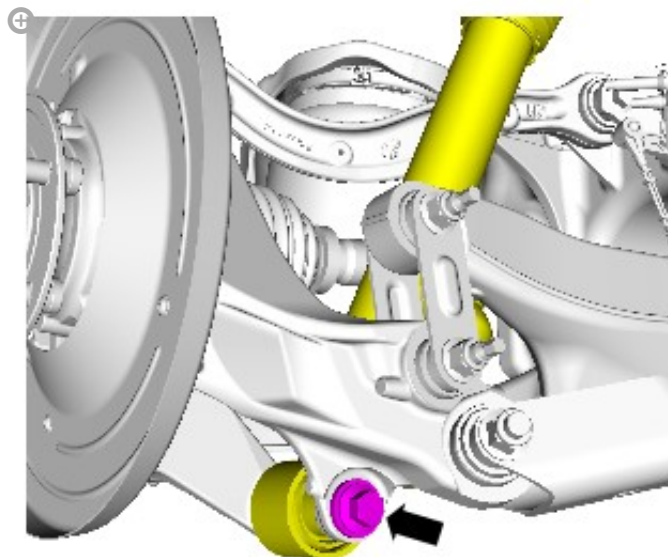


E149066

9.

NOTE:

Discard the bolt

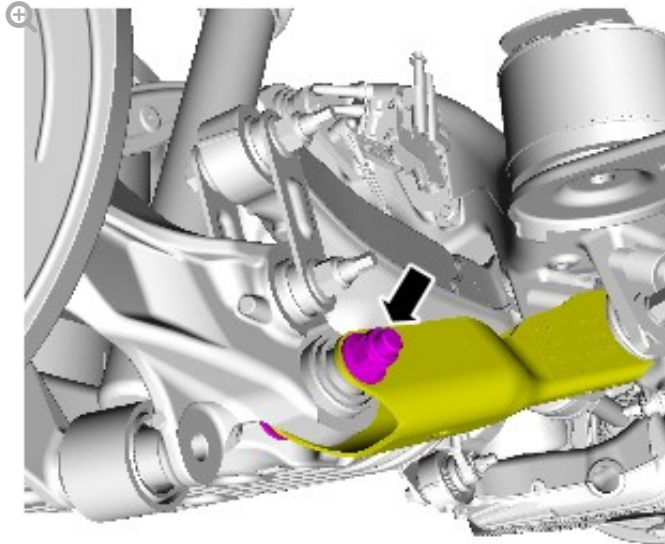


E149067

10.


NOTE:

Discard the bolt

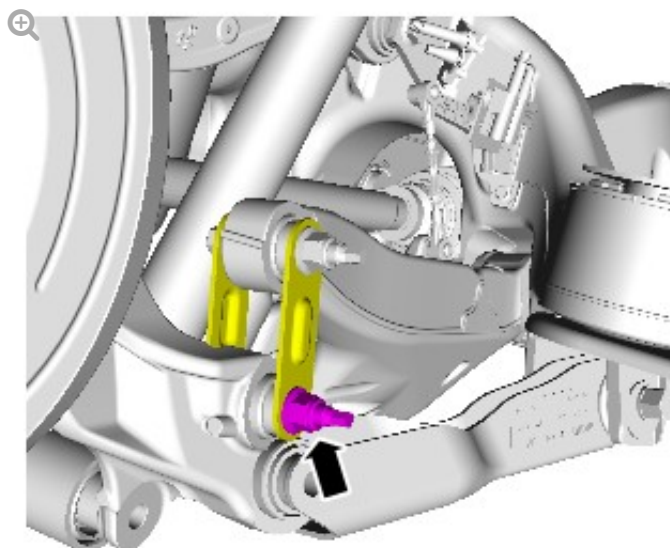

E149068

11.

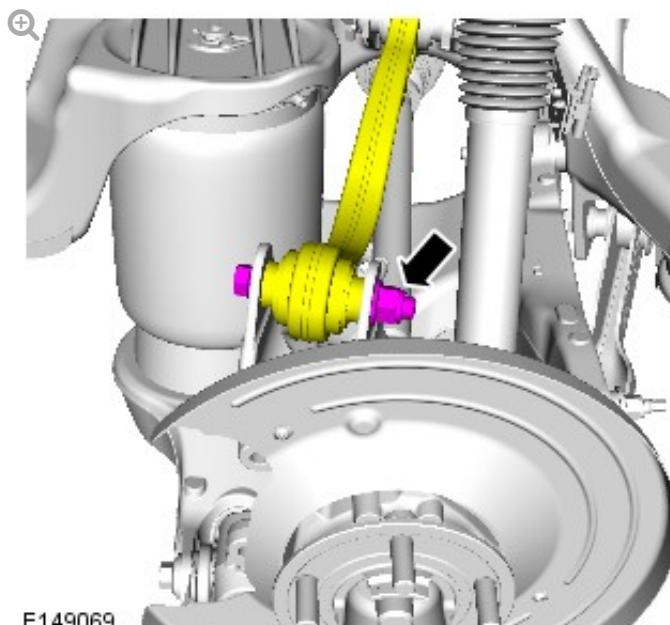


E149069

12.

NOTE:

Discard the bolt

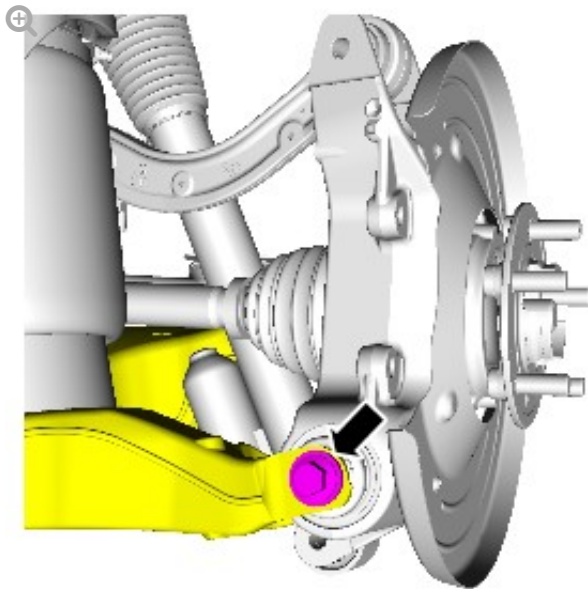


E149070

13.

CAUTION:

Do not use a hammer to detach the halfshaft from the hub assembly, failure to follow this instruction may result in damage to the halfshaft.

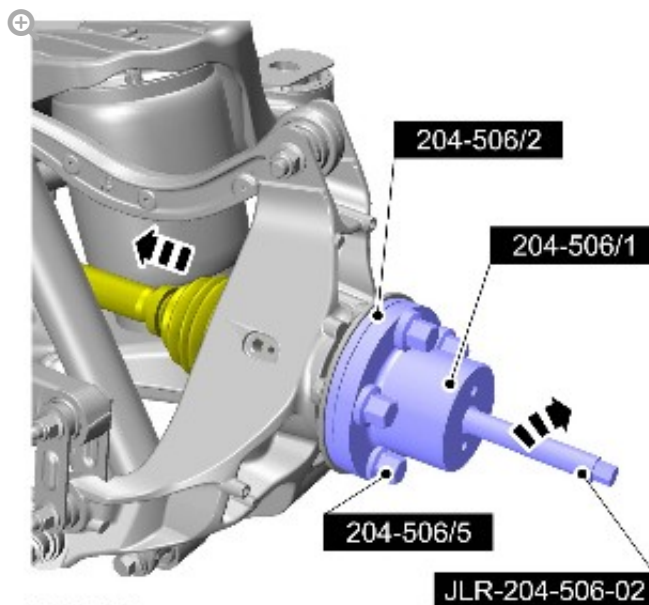


E147106

Using the special tools, release the halfshaft from the wheel hub.

Special Tool(s): [204-506/1](#), [204-506/2](#), [204-506/3](#), [204-506/5](#)

INSTALLATION

1.

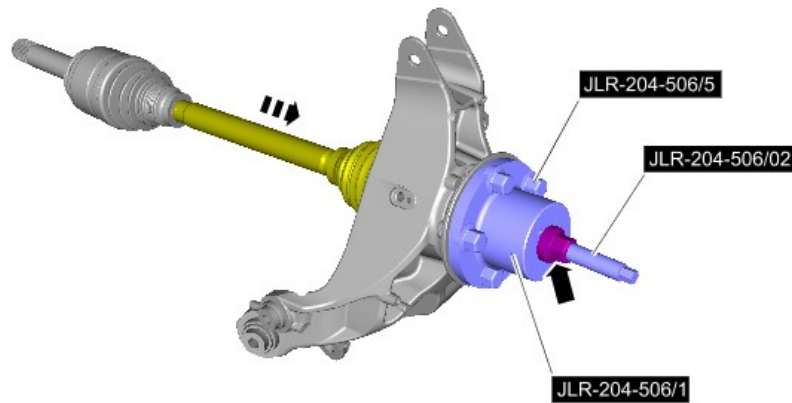


E151380

Special Tool(s): [204-506/1](#), [204-506/2](#), [204-506/5](#)

2.

CAUTIONS:

- To prevent the wheel knuckle falling outwards and disconnection of the halfshaft inner joint, support the wheel knuckle.
- Nuts and bolts must be tightened with vehicle at normal ride height.
- Make sure that a new bolt is installed.

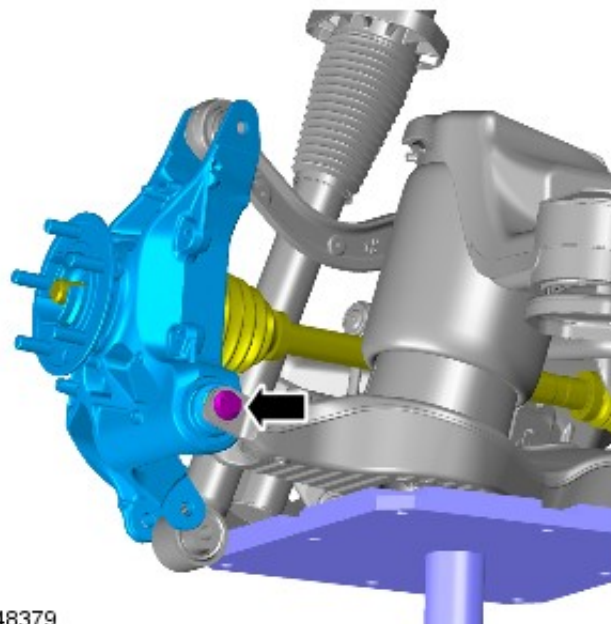

E148379

Torque:


Stage 1: 70 Nm

Stage 2: 240°

3.

CAUTION:

Nuts and bolts must be tightened with vehicle at normal ride height.

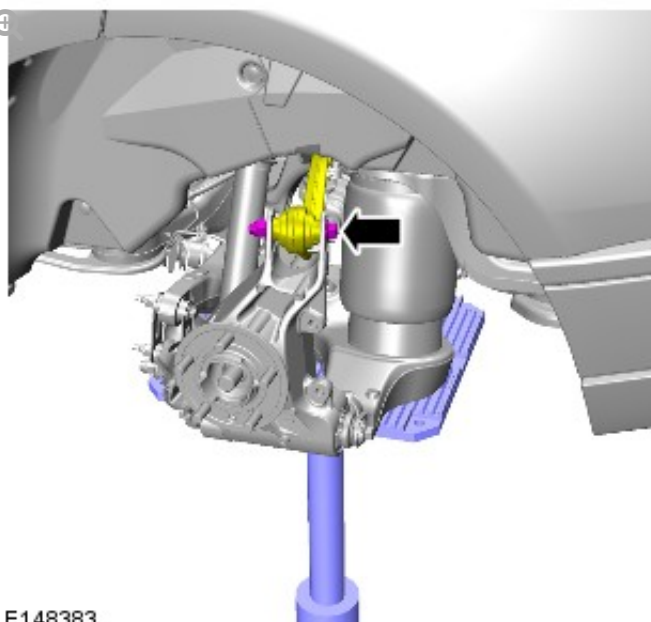

E148383

Torque:


Stage 1: **50 Nm**

Stage 2: **60°**

4.

CAUTIONS:

- Nuts and bolts must be tightened with vehicle at normal ride height.
- Make sure that a new bolt is installed.

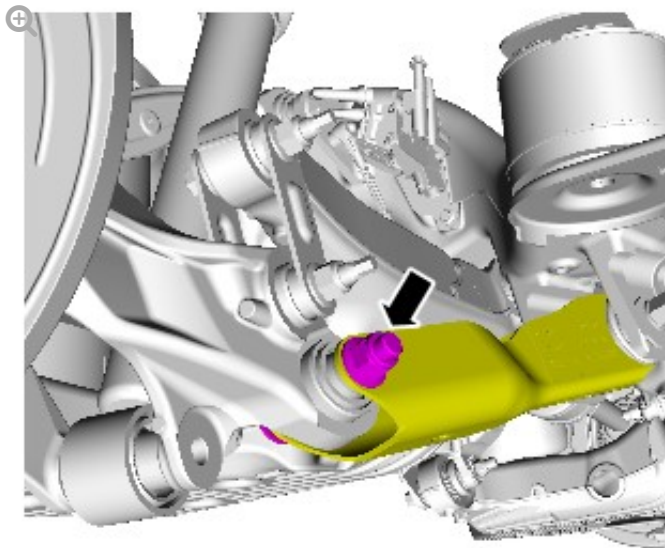

E149067

Torque:


Stage 1: **70 Nm**

Stage 2: **240°**

5.

CAUTIONS:

- Nuts and bolts must be tightened with vehicle at normal ride height.
- Make sure that a new bolt is installed.

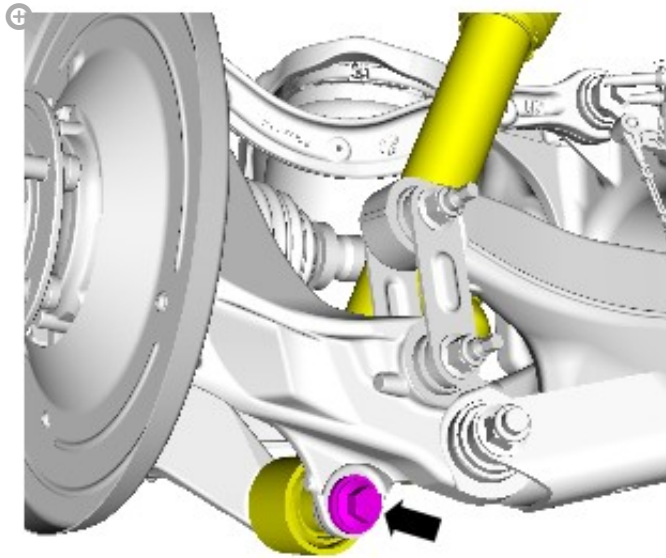

E149066

Torque:

Stage 1: 100 Nm

Stage 2: 240°

6.


CAUTION:

This step must be carried out to prevent damage to the air spring.

Refer to: [Air Suspension - Manual Control Procedure](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

7. Tighten the nuts and bolts at normal ride height.
Refer to: [Specifications](#) (204-00 Suspension System - General Information, Specifications).
8. Remove the transmission jack.


9.

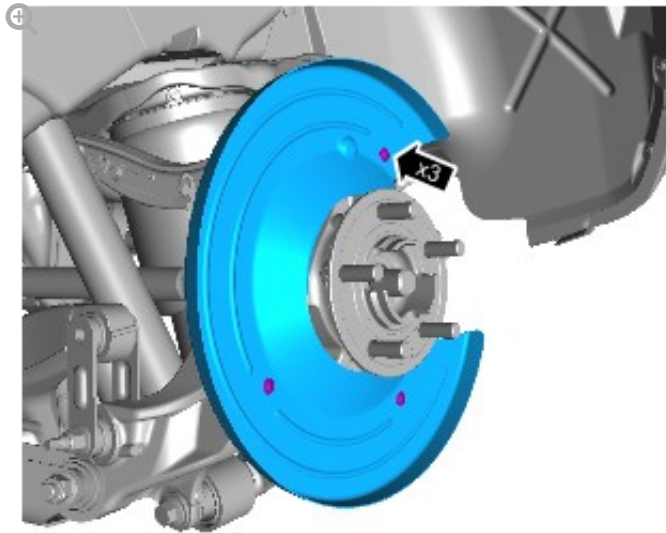

E148378

Torque: 9 Nm

10.

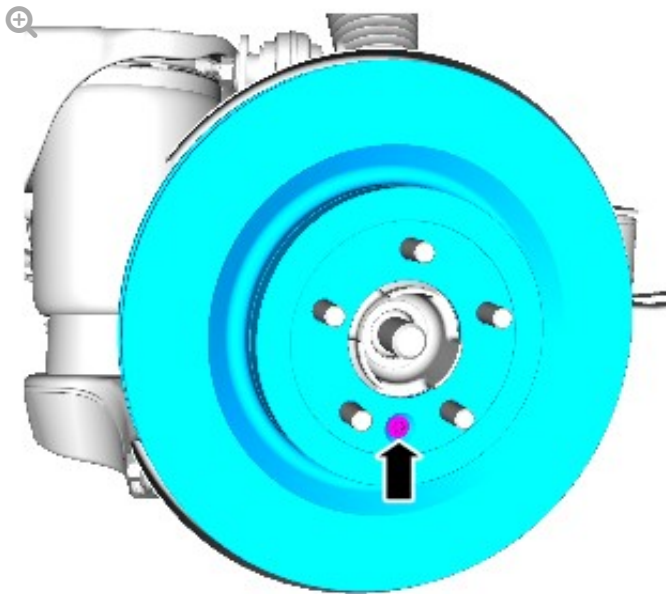


E149065

Torque: 35 Nm

11.

CAUTION:


Make sure that new bolts are installed.

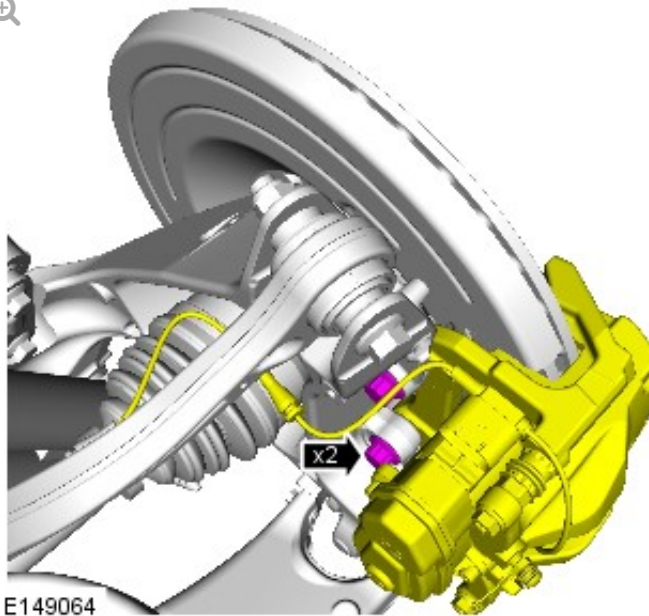

E149064

Torque: 119 Nm

12.

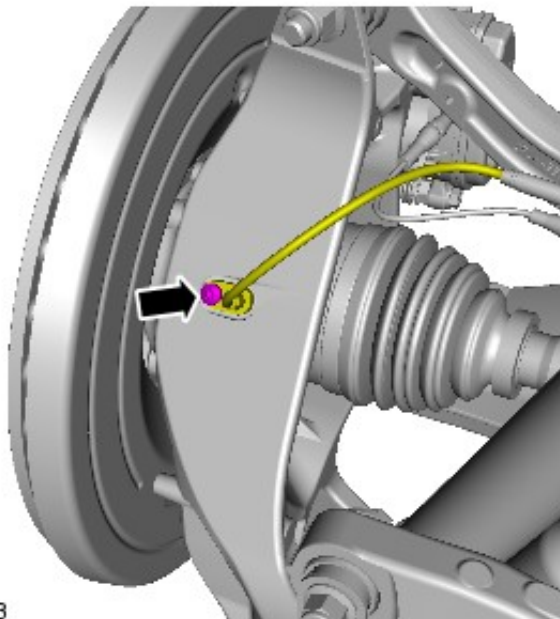


E149063

Torque: 9 Nm

13.

CAUTION:

Do not use air tools to install the nut. Failure to follow this instruction may result in damage to the component.

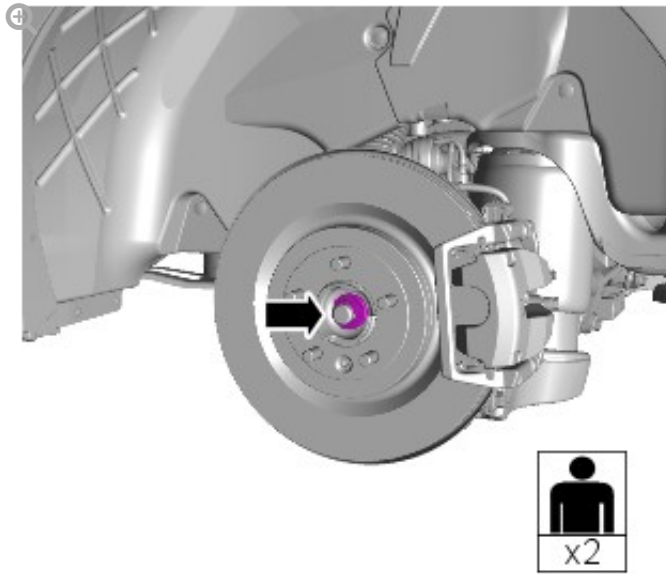

E147102

Apply the footbrake to aid the halfshaft nut installation.

Torque: 290 Nm


14.

CAUTION:

Do not use air tools to remove the halfshaft nut.

NOTE:

Discard the nut.

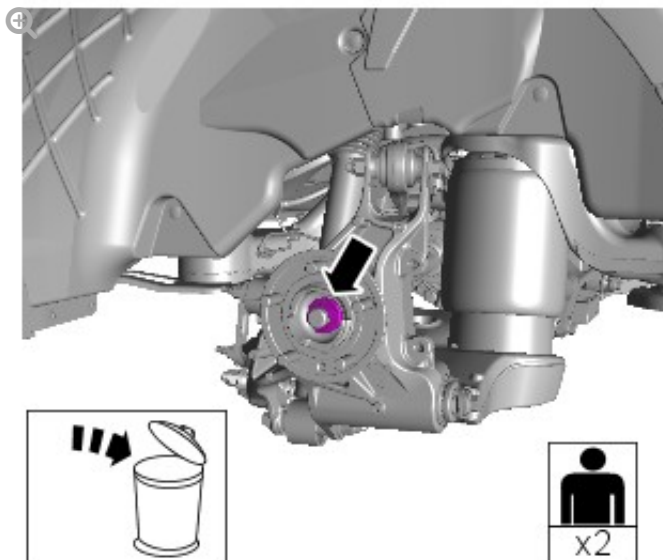

E147105


15.

CAUTION:

Do not use air tools to install the nut. Failure to follow this instruction may result in damage to the component.

NOTE:

Install a new nut.

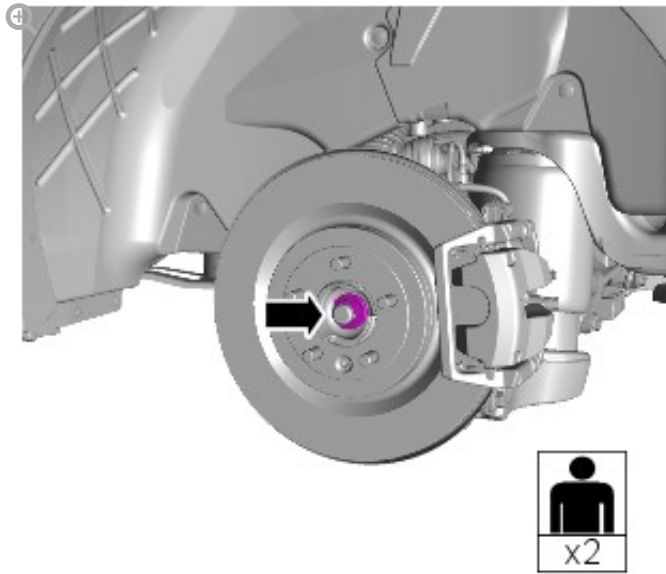

E147102

Apply the footbrake to aid the halfshaft nut installation.

Torque:

Stage 1: **120 Nm**

Stage 2: **60°**

16. Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

17. **CAUTION:**

This step must be carried out in order to maintain the correct air suspension compressor/dryer performance.

Using Land Rover approved diagnostic equipment pressurize the rear spring.

Refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

