

2016.0 RANGE ROVER (LG), 204-05

VEHICLE DYNAMIC SUSPENSION

AIR SUSPENSION COMPRESSOR EXHAUST VALVE

[G1951222]

REMOVAL AND INSTALLATION


64.50.05	VALVE - EXHAUST - COMPRESSOR - RENEW	ALL DERIVATIVES	0.2	USED WITHINS	+
----------	---	--------------------	-----	-----------------	---

REMOVAL

CAUTIONS:


- Removal steps in this procedure contains installation details.
- Before disconnecting or removing the components, make sure the area around the joint faces and connections are clean. Plug open connections to prevent contamination.

1.

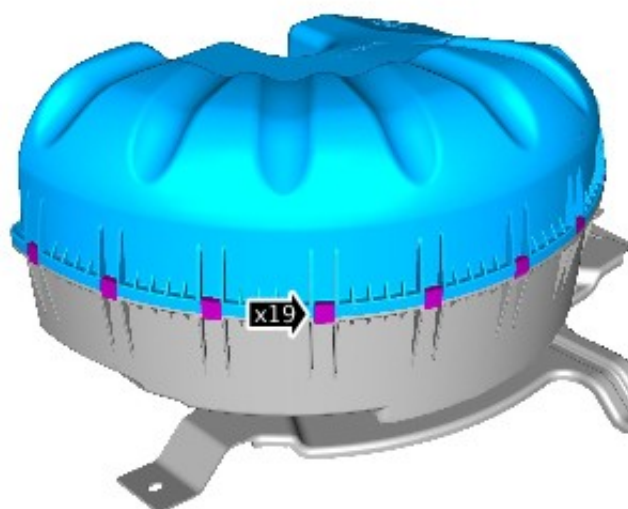

E161582


2.

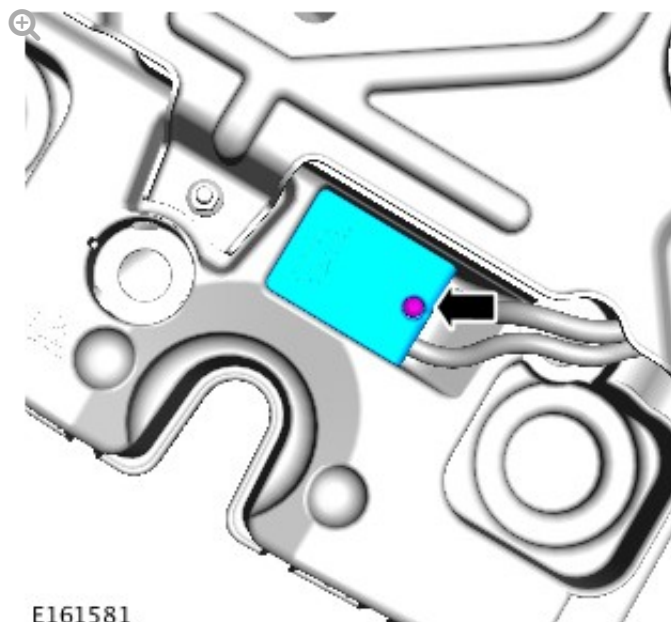

E161581


Torque: 1 Nm

3.

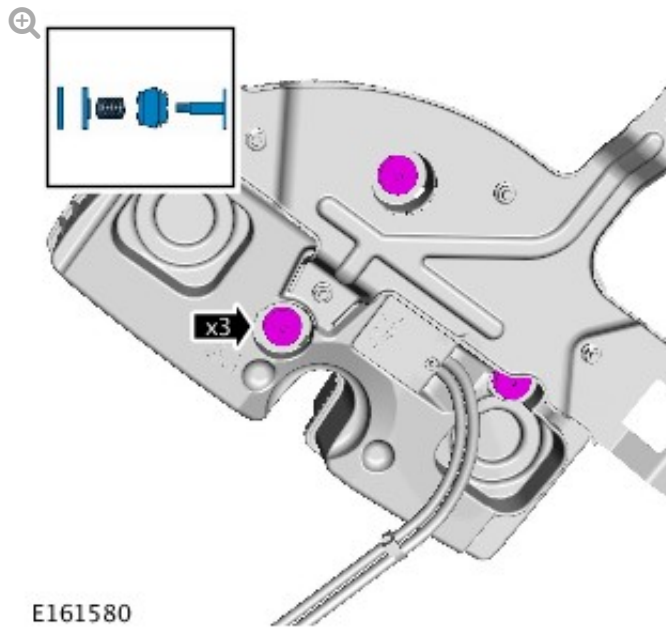


Torque: 10 Nm

4.

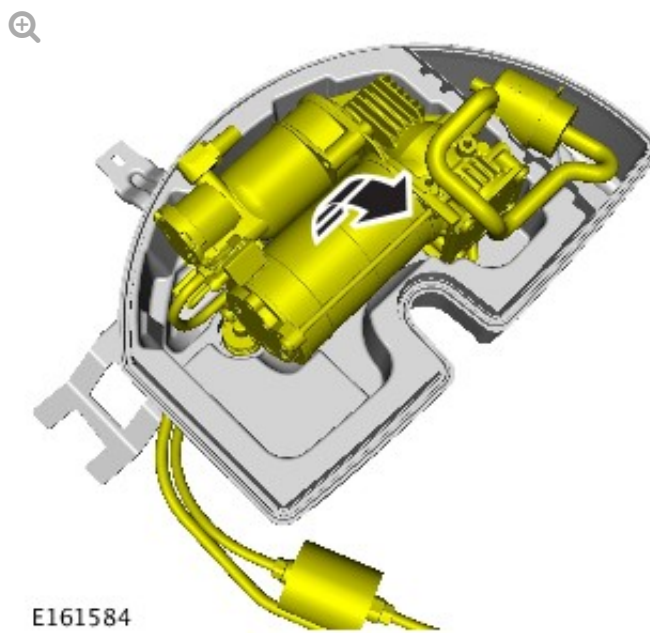

5.

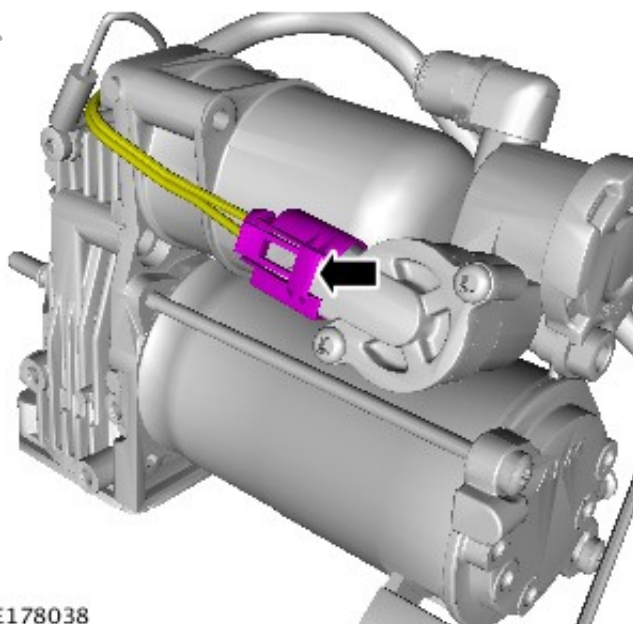


E178038

6.

NOTE:

Note the installed position of the component(s) prior to removal.

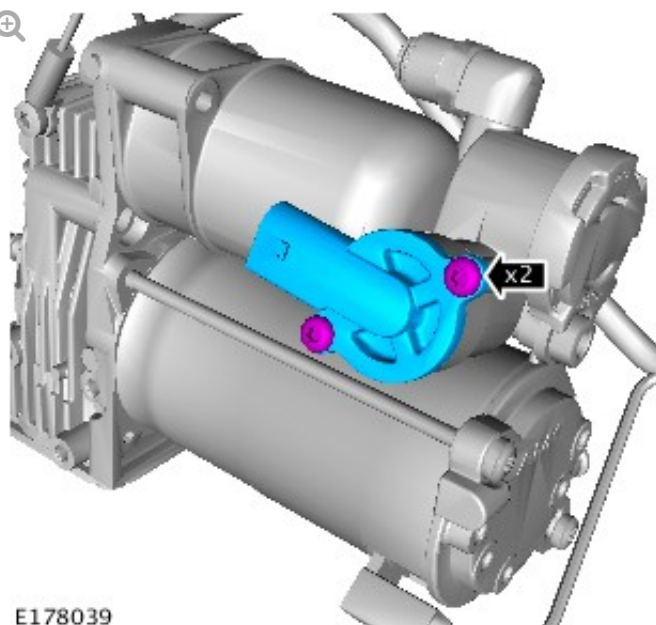


E178039

Torque: 3 Nm

7.

CAUTION:

When removing the air suspension compressor exhaust valve all three o-rings must be removed from the air suspension compressor.

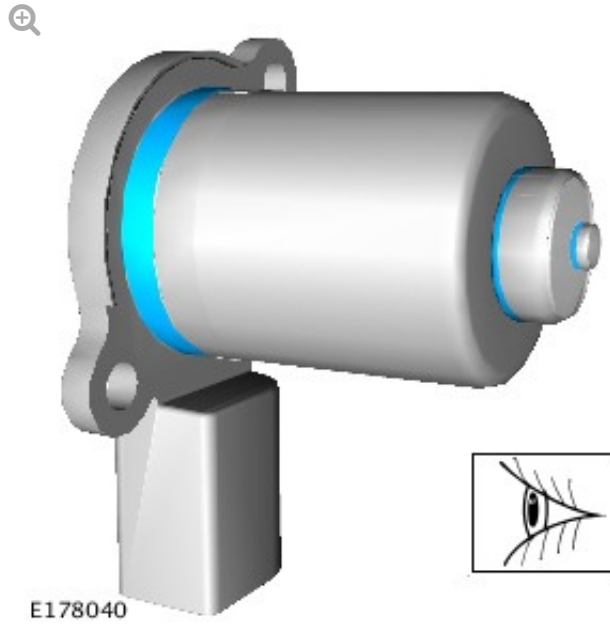

INSTALLATION

1. To install reverse the removal procedure.