

2016.0 RANGE ROVER (LG), 204-05

VEHICLE DYNAMIC SUSPENSION

AIR SUSPENSION COMPRESSOR (G1549341)

REMOVAL AND INSTALLATION

60.50.10	COMPRESSOR - RENEW	ALL DERIVATIVES	0.3	USED WITHINS	+
----------	-----------------------	--------------------	-----	-----------------	---

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Removal Step 9	Renew Part	Air line connector

REMOVAL

WARNING:

A small amount of air maybe released when removing the air line connector.


CAUTIONS:

- Make sure that the component is clean and free from foreign material.
- Make sure that all openings are sealed.


1. Disconnect the battery ground cable

Refer to: [Specifications](#) (414-01 Battery, Mounting and Cables, Specifications).


- 2.

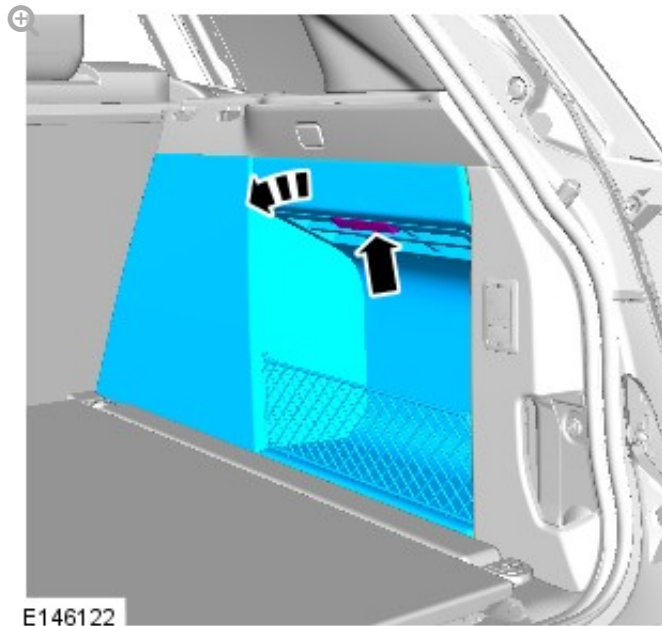


3.

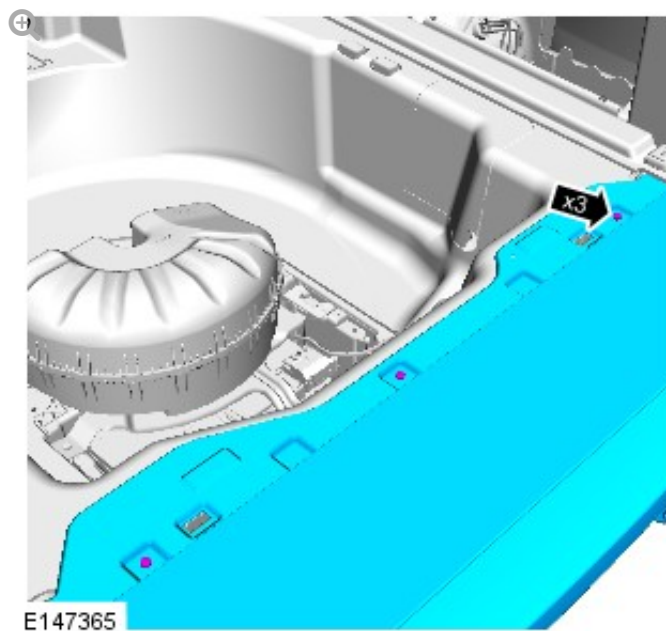


4.

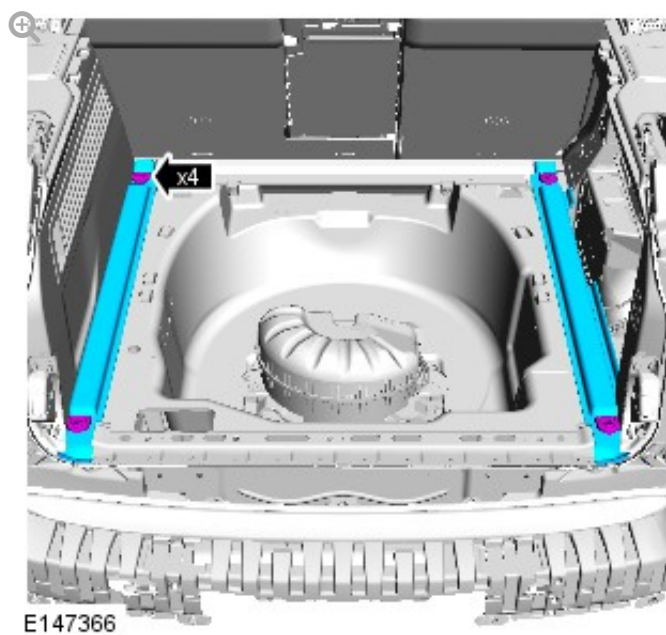

5.

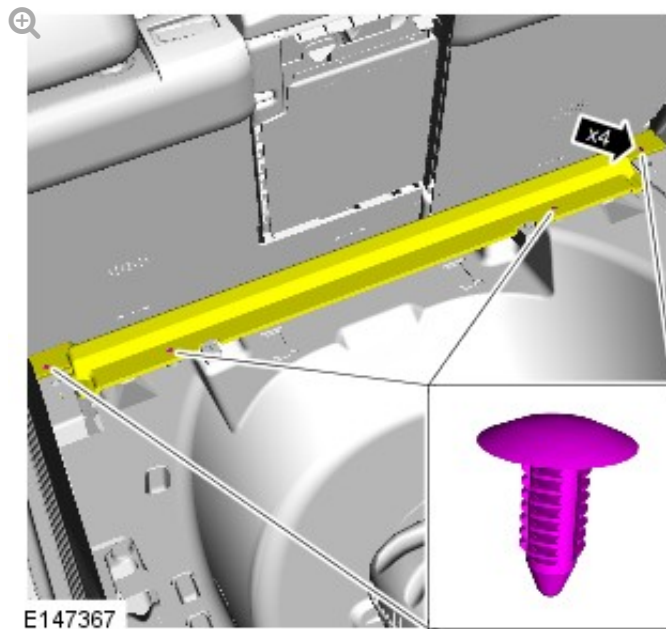


6.

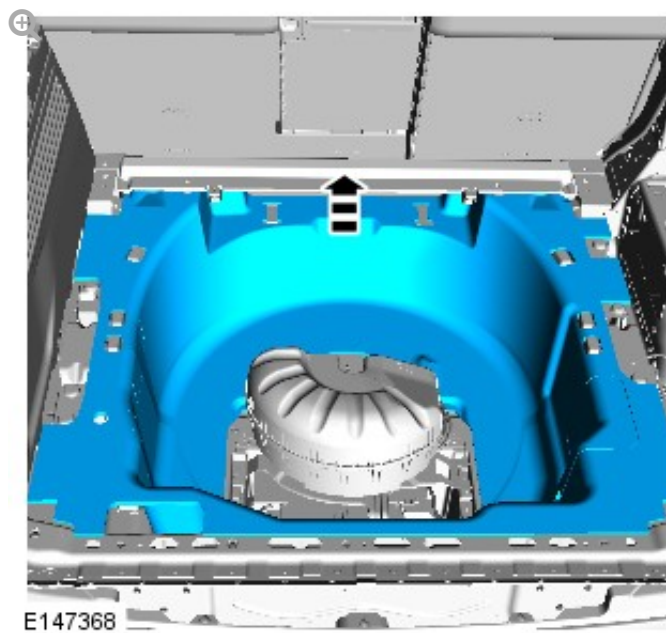

7.




8.

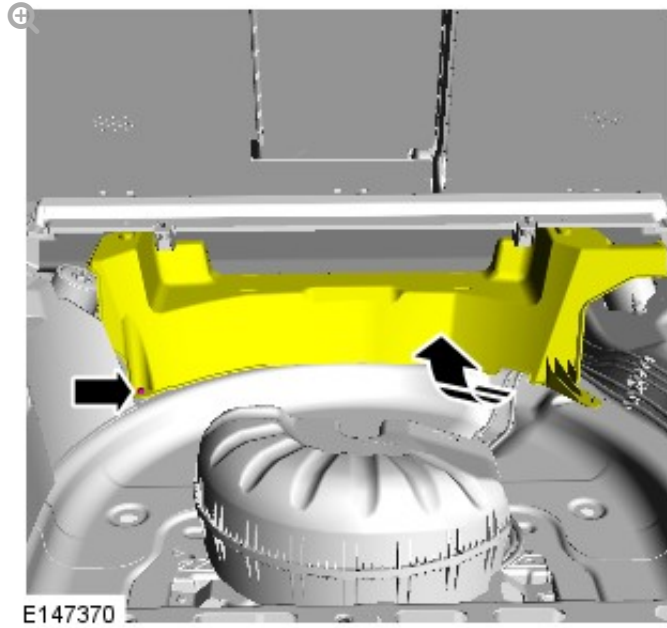

9.

NOTE:

Discard the air line connector.

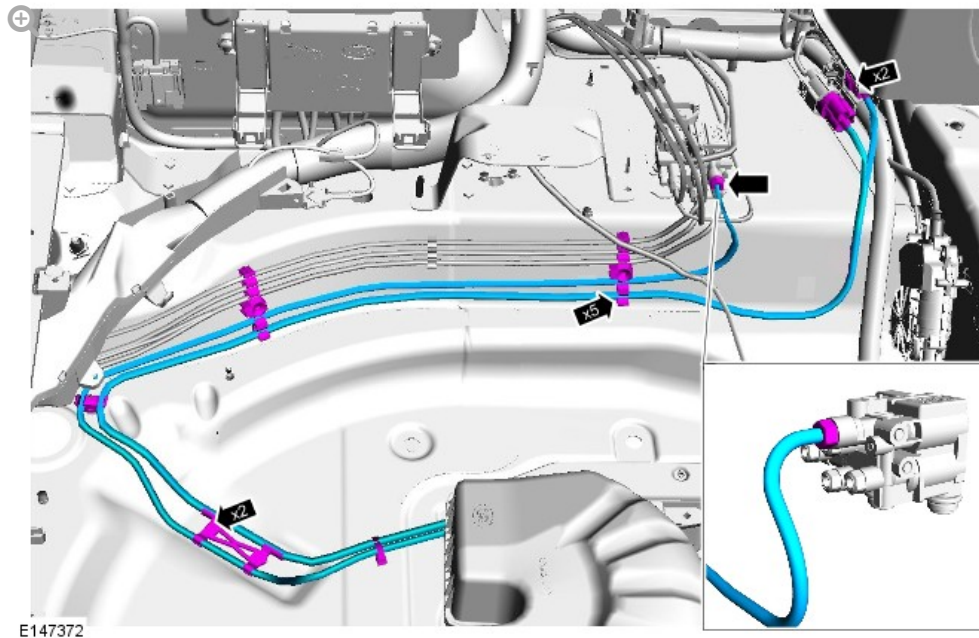


E147372

Refer to: [Air Line Connector](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

Renew Part: [Air line connector](#).


Torque: 4.5 Nm

10.

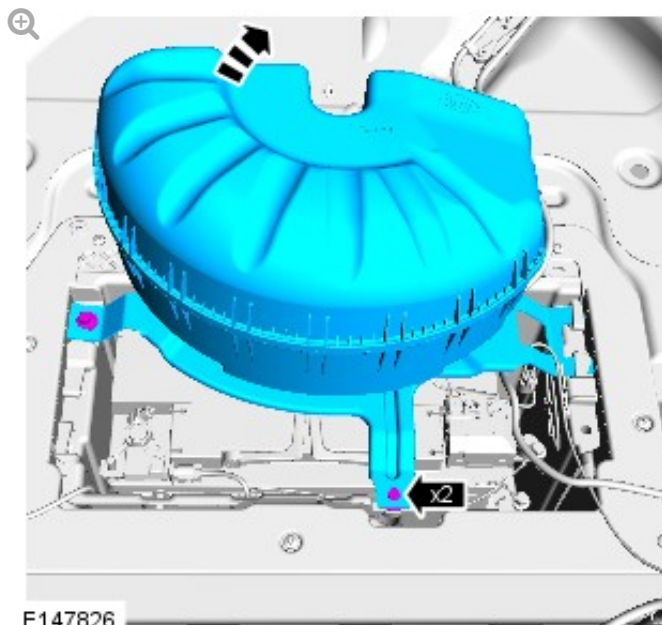

E147826

11.

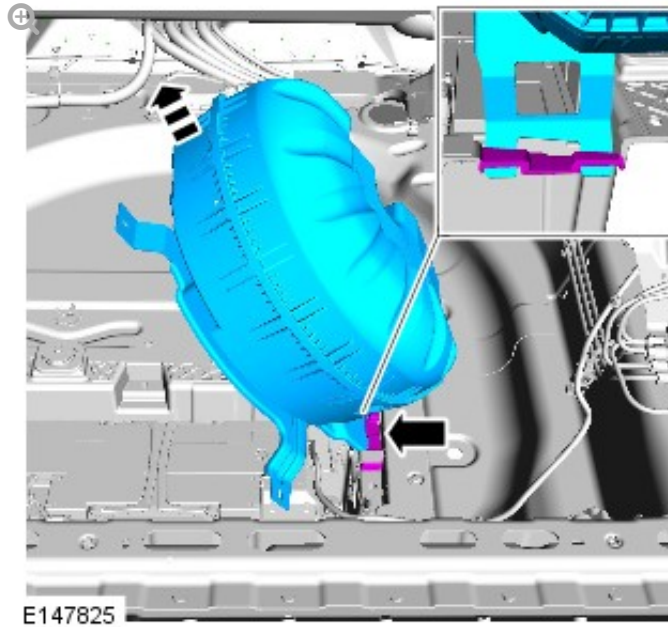


INSTALLATION

1.

CAUTION:

Make sure the component is correctly located on its mounting bracket. Lift the component by 10 mm before lowering into position.

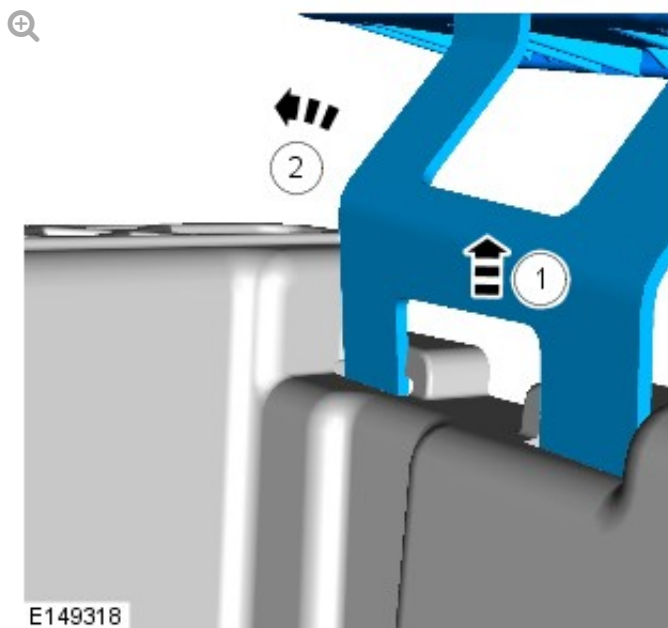

To install, reverse the removal procedure.

2. Refer to: [Air Line Connector](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

Torque: **4.5 Nm**