

2016.0 RANGE ROVER (LG), 204-05

VEHICLE DYNAMIC SUSPENSION

AIR SUSPENSION CONTROL MODULE (G1549342)

REMOVAL AND INSTALLATION

60.50.04	ELECTRONIC CONTROL UNIT - RENEW	ALL DERIVATIVES	0.2	USED WITHINS	+
----------	--	--------------------	-----	-----------------	---


REMOVAL

CAUTIONS:


- Extreme cleanliness must be exercised when handling this component.
- It is imperative that no damage is caused to the electrical connectors or the module.
- Do not touch the electrical connectors.
- If accidentally dropped or knocked install a new module.

1. Disconnect the battery ground cable
Refer to: [Specifications](#) (414-01 Battery, Mounting and Cables, Specifications).

2.

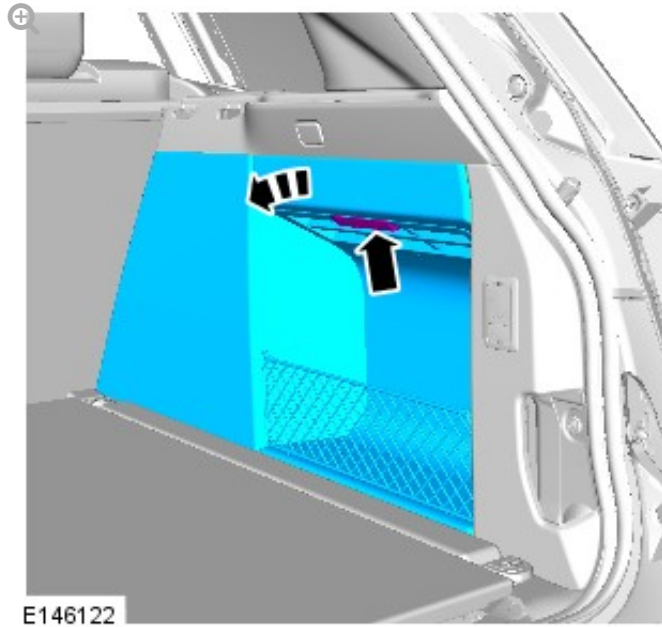

3.

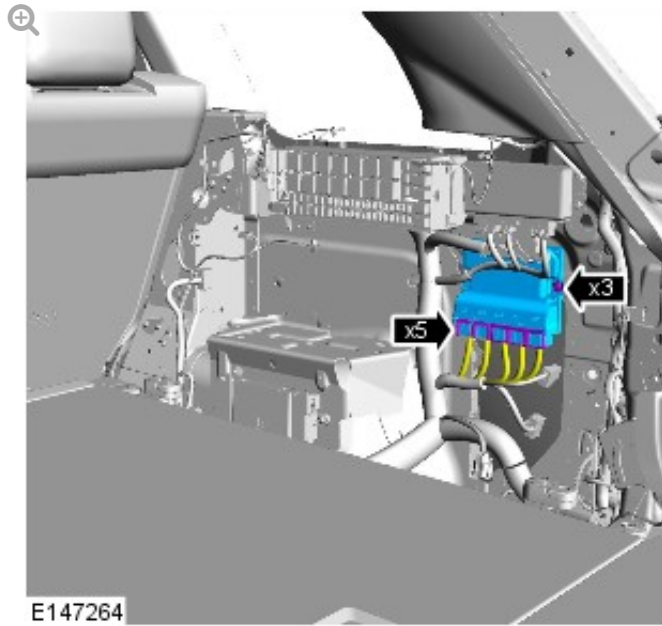

INSTALLATION

1. To install, reverse the removal procedure.
2. Configure the air suspension control module using the diagnostic tool.

