

2016.0 RANGE ROVER (LG), 204-05

VEHICLE DYNAMIC SUSPENSION

AIR SUSPENSION FRONT SOLENOID VALVE BLOCK

[G 1 5 4 9 3 6 8]

REMOVAL AND INSTALLATION

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 2	Replace Part	Air line connector

REMOVAL

1.

WARNING:

A small amount of air pressure will be left in the air suspension system.

2.

NOTE:

Make sure that the component is clean, free of foreign material and lubricant.

3.

CAUTION:

Make sure that all openings are sealed.

4.

CAUTION:

This step must be carried out in order to maintain the correct compressor/dryer performance.

Depressurize the front air springs.

Refer to: [Air Line Connector](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

5. Disconnect the battery ground cable.

Refer to: [Specifications - Armoured](#) (414-00 Battery and Charging System - General Information, Specifications).

6.


NOTE:

Left hand drive only.


Remove the plenum chamber panel.

Refer to: [Cowl Panel Grille](#) (501-02 Front End Body Panels, Removal and Installation).


7.

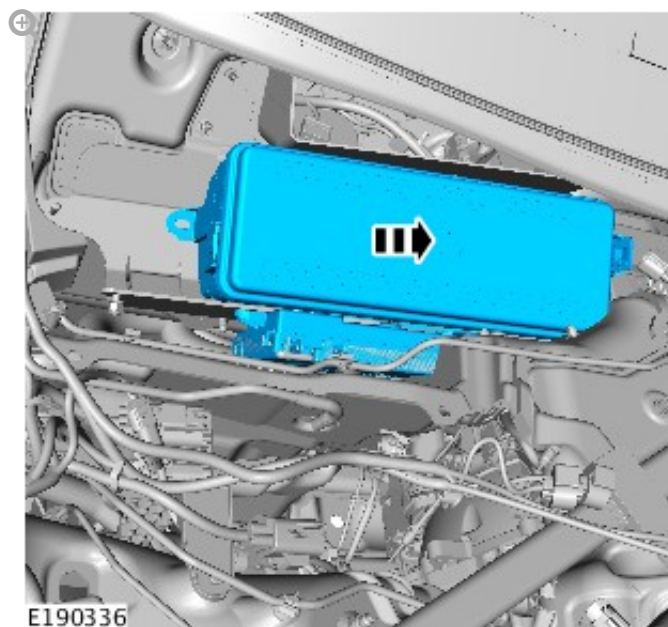

8.

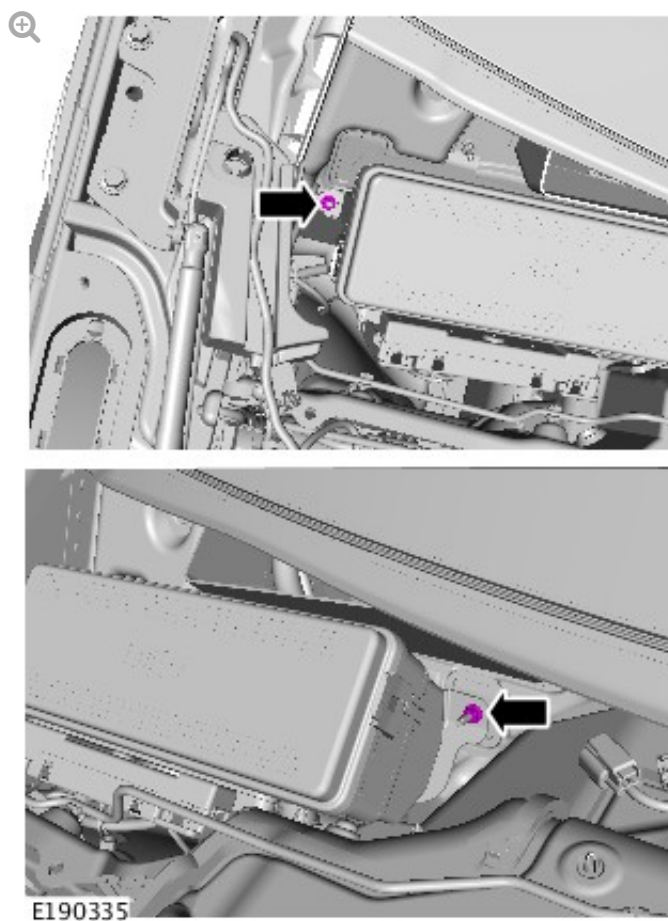


9.

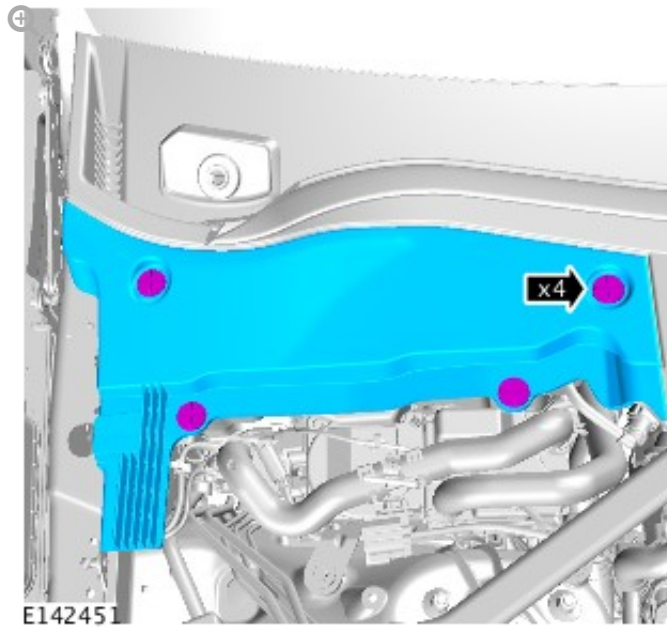

10.

NOTES:


- Note the orientation of the colour coded air lines prior to removal.
- Discard the air line connectors
- Discard the air line collets.

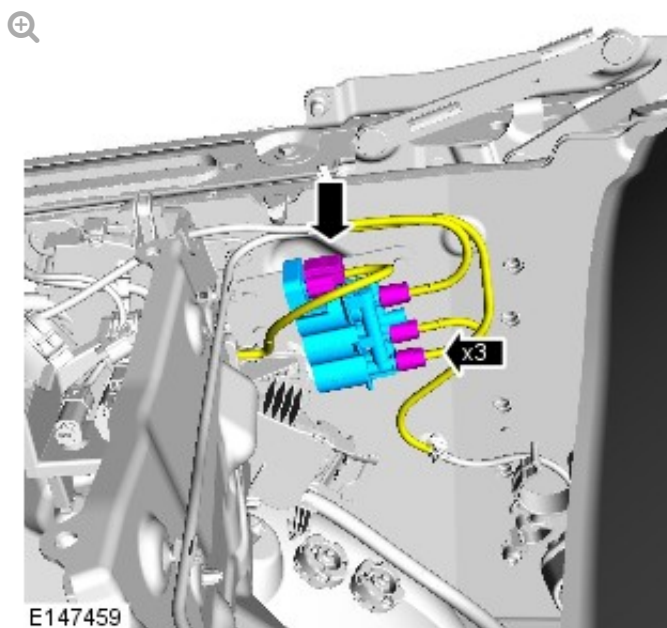

Remove the air line connectors from the air lines.

Refer to: [Air Line Connector](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

11.

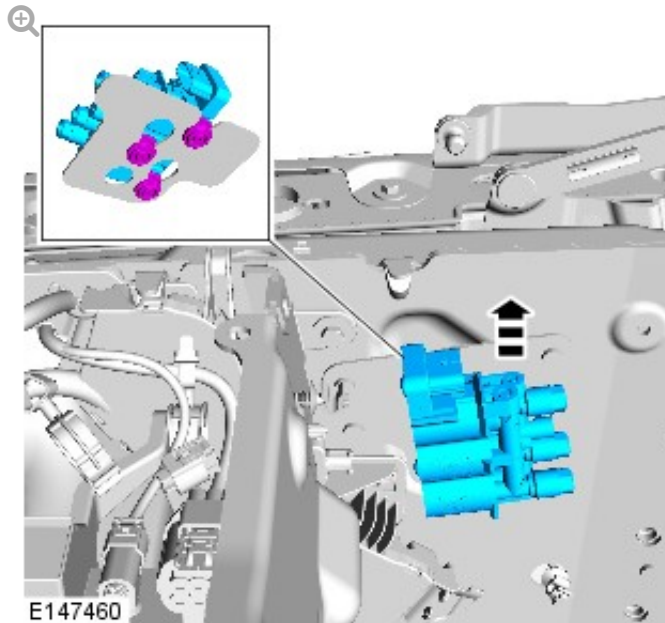

Torque: 10 Nm

INSTALLATION

1. To install, reverse the removal procedure.

2. Install new air line connectors.

Refer to: [Air Line Connector](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

Replace Part: [Air line connector](#).

Torque: 3.5 Nm