

2016.0 RANGE ROVER (LG), 204-05

VEHICLE DYNAMIC SUSPENSION

AIR SUSPENSION REAR SOLENOID VALVE BLOCK

[G1549370]

REMOVAL AND INSTALLATION

64.50.11	VALVE BLOCK ASSEMBLY - RENEW	ALL DERIVATIVES	0.5	USED WITHINS	+
----------	---------------------------------------	--------------------	-----	-----------------	---

REMOVAL

WARNING:

A small amount of air maybe released when removing the air line connector.

CAUTIONS:

- Make sure that the component is clean and free from foreign material.
- Make sure that all openings are sealed.

1.

CAUTION:


This step must be carried out in order to maintain the correct air suspension compressor/dryer performance.

Using SDD depressurize the rear air springs and the air reservoir.
Refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).


2. Disconnect the battery ground cable

Refer to: [Specifications](#) (414-01 Battery, Mounting and Cables, Specifications).

3.

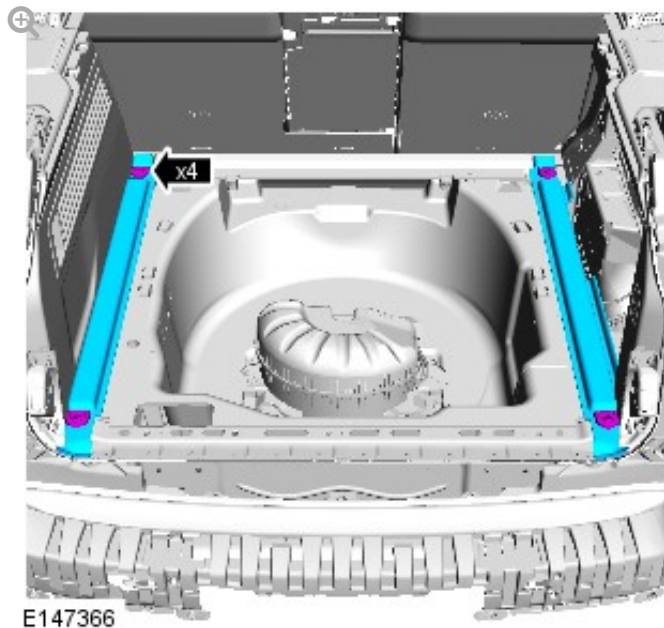


4.

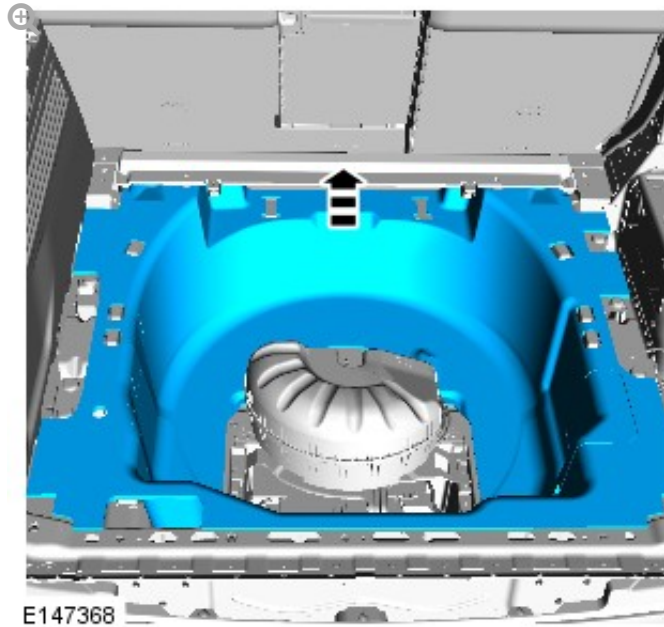

5.


NOTES:

- Note the orientation of the colour coded air lines prior to removal
- Discard the air line connectors.

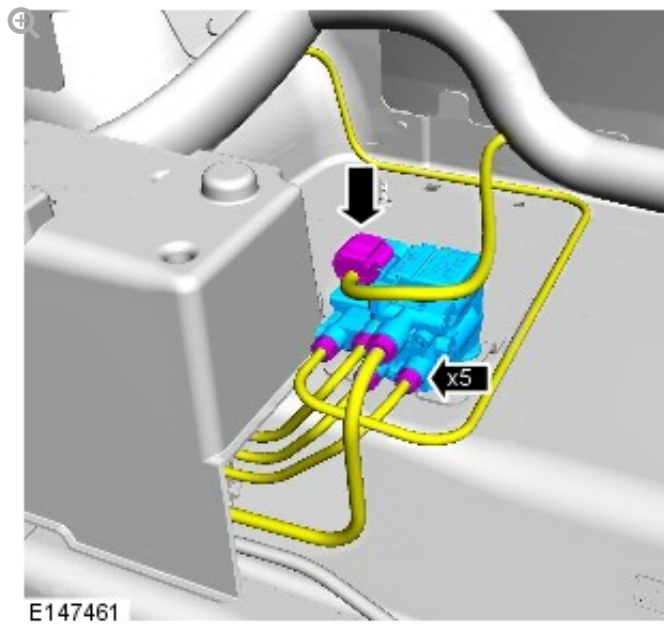

Refer to: [Air Line Connector](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

6.

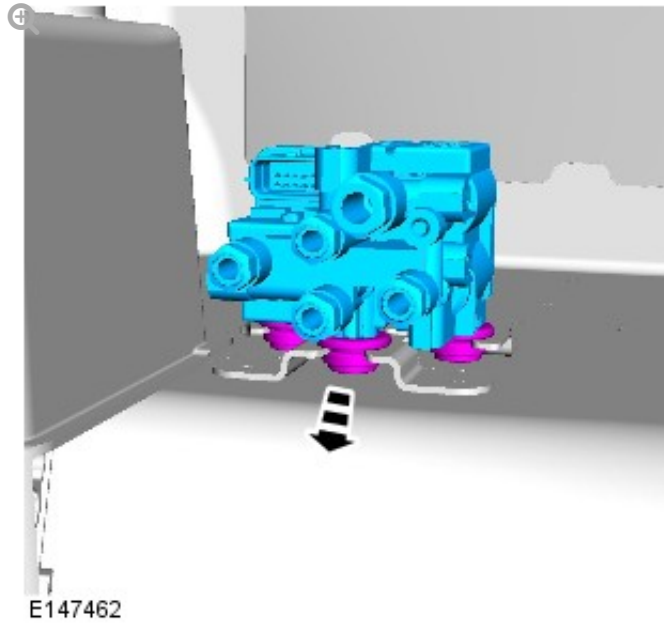

INSTALLATION

1. To install, reverse the removal procedure.
2. Refer to: [Air Line Connector](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

Torque:

6 mm airline **3.5 Nm**

8 mm airline **4.5 Nm**