

2016.0 RANGE ROVER (LG), 204-05

VEHICLE DYNAMIC SUSPENSION

AIR SUSPENSION RESERVOIR - TDV6 3.0L DIESEL /TDV8 4.4L DIESEL/V6 S/C 3.0L PETROL /V8 N/A 5.0L PETROL/V8 S/C 5.0L PETROL [G1676132]

REMOVAL AND INSTALLATION

60.50.03	AIR SUSPENSION RESERVOIR - RENEW	3000 CC, TDV6, DIESEL	1.7	USED WITHINS	+
----------	---	-----------------------------	-----	-----------------	---

REMOVAL

WARNING:

A small amount of air pressure will be left in the air suspension system.



All vehicles

1. Refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

2.

WARNING:

Do not work on or under a vehicle supported only by a jack.
Always support the vehicle on safety stands.

Raise and support the vehicle.

3. Refer to: [Rear Door Lower Moulding - Standard Wheel Base](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
Refer to: [Rear Rocker Panel Moulding - Long Wheel Base](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).




Short wheelbase

4.

NOTE:

LH illustration show, RH similar.

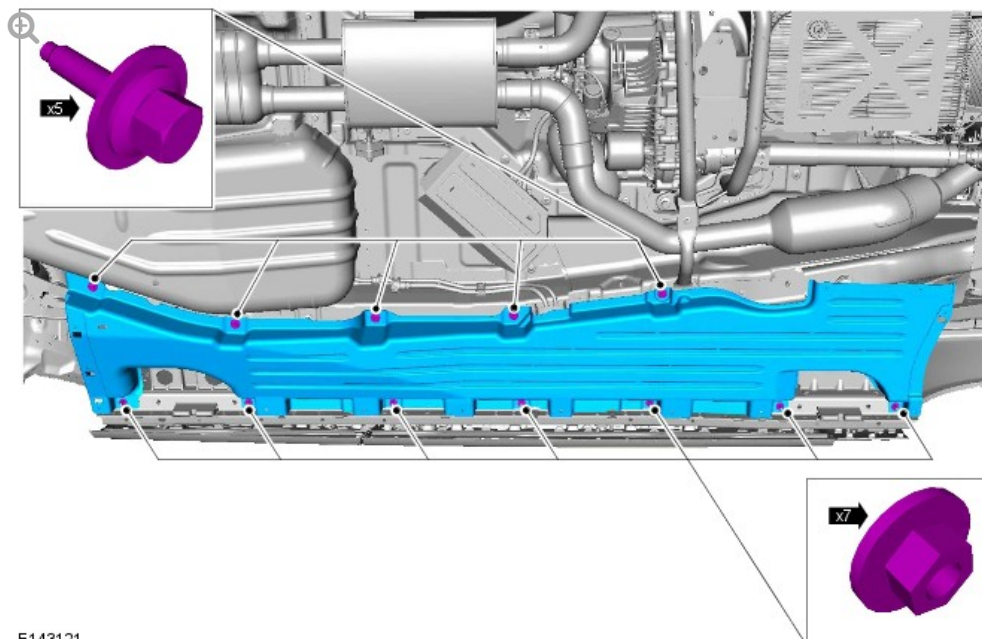


E143121



Long wheelbase

5.

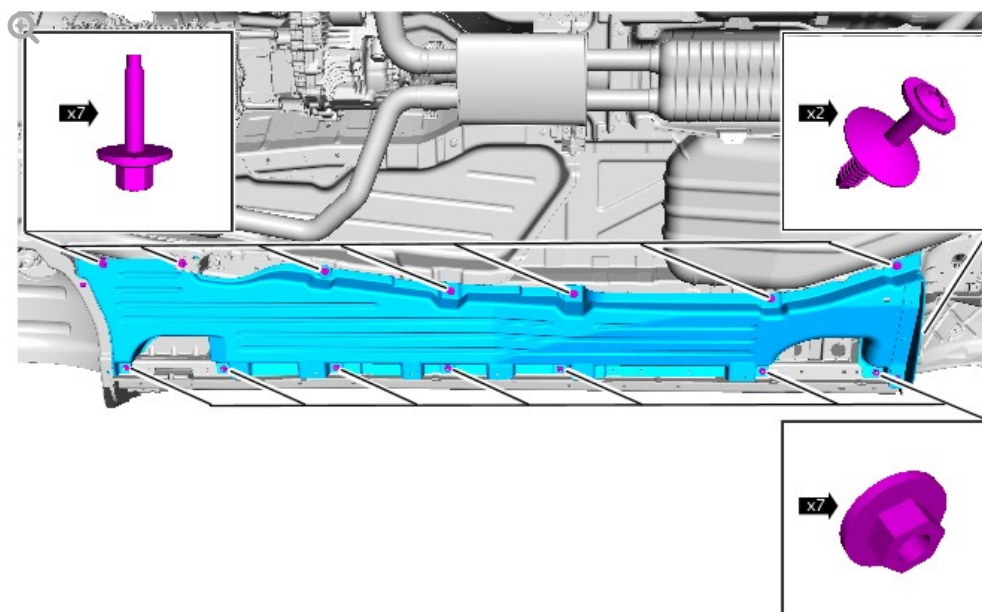


E160300




All vehicles

6.

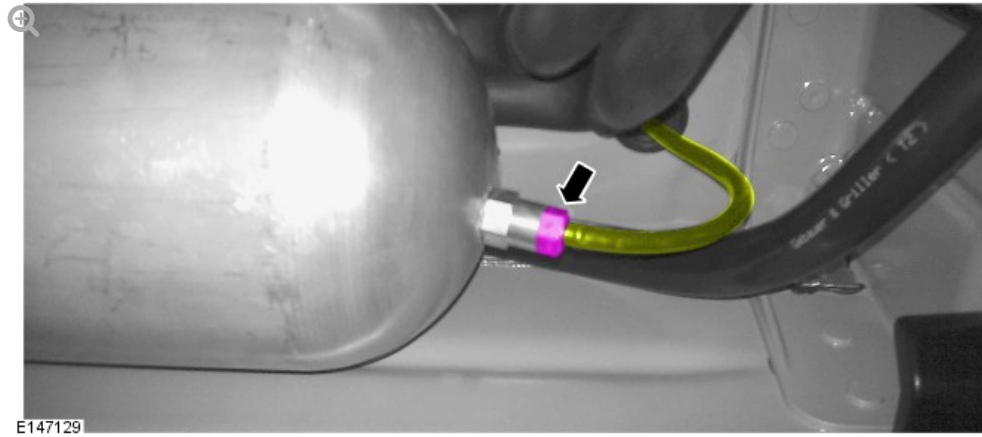

7.

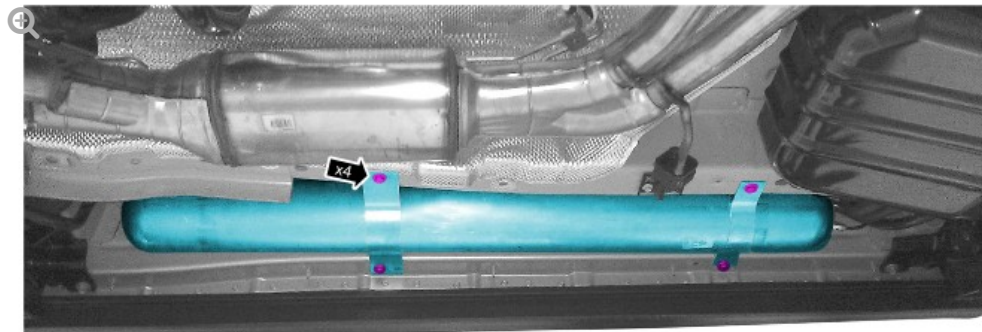

E147130

Torque: 25 Nm

INSTALLATION

1. To install, reverse the removal procedure.
2. Refer to: [Air Line Connector](#) (204-05 Vehicle Dynamic Suspension, General Procedures).
3. Refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).