

2016.0 RANGE ROVER (LG), 204-05

VEHICLE DYNAMIC SUSPENSION

FRONT SUSPENSION HEIGHT SENSOR

[G 1 5 4 9 3 4 3]

REMOVAL AND INSTALLATION

60.36.01	SENSOR - HEIGHT - FRONT - RENEW	ALL DERIVATIVES	0.5	USED WITHINS	+
----------	--	--------------------	-----	-----------------	---

REMOVAL

NOTES:


- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.
- Right hand shown, Left hand similar.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-01 Battery, Mounting and Cables, Specifications).
2. Raise and support the vehicle.
Refer to: [Lifting](#) (100-02 Jacking and Lifting, Description and Operation).


3.

CAUTION:


Do not use excessive force to disconnect the height sensor link.

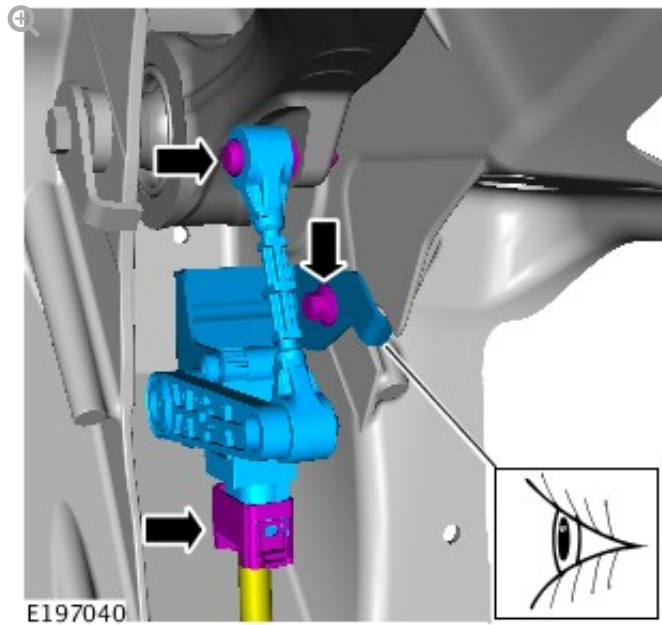

4.

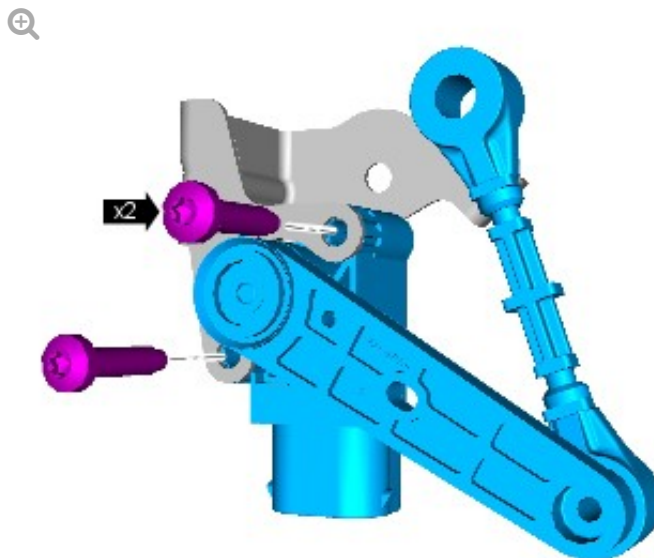


1.

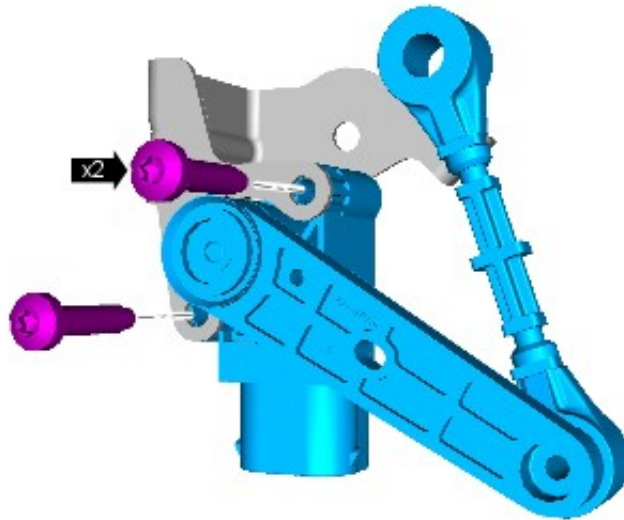

E147855

Torque: 4 Nm

2.

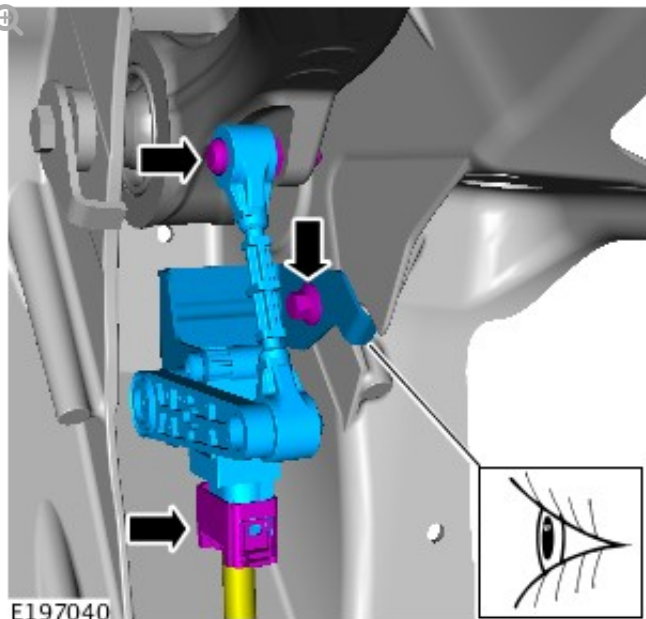

E197040

Torque: 7 Nm

3. Connect the battery ground cable.

Refer to: [Specifications](#) (414-01 Battery, Mounting and Cables, Specifications).

4.

CAUTION:

Calibration of the air suspension system must be carried out if the suspension height sensor is loosened, removed or replaced.

Using the Land Rover approved diagnostic system, calibrate the suspension ride height.

Refer to: [Vehicle Dynamic Suspension](#) (204-05 Vehicle Dynamic Suspension, Diagnosis and Testing).