

2016.0 RANGE ROVER (LG), 204-05

VEHICLE DYNAMIC SUSPENSION

REAR AIR SPRING (G1549376)

REMOVAL AND INSTALLATION

64.21.01	AIR SPRING ASSEMBLY - ONE SIDE - RENEW	ALL DERIVATIVES	0.9	USED WITHINS	+
----------	---	--------------------	-----	-----------------	---

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Installation Step 5	Renew Part	Air line connector

REMOVAL

WARNING:

A small amount of air pressure will be left in the air suspension system.

CAUTION:

Make sure that the area around the component is clean and free of foreign material.

NOTE:

- Make sure that all openings are sealed.
- Left shown, right similar.

1.

CAUTION:

This step must be carried out in order to maintain the correct compressor/dryer performance.

Using Land Rover approved diagnostic equipment depressurize the rear air spring.

Refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

2.

WARNING:


Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


3. Remove the rear wheel.

Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).


4.

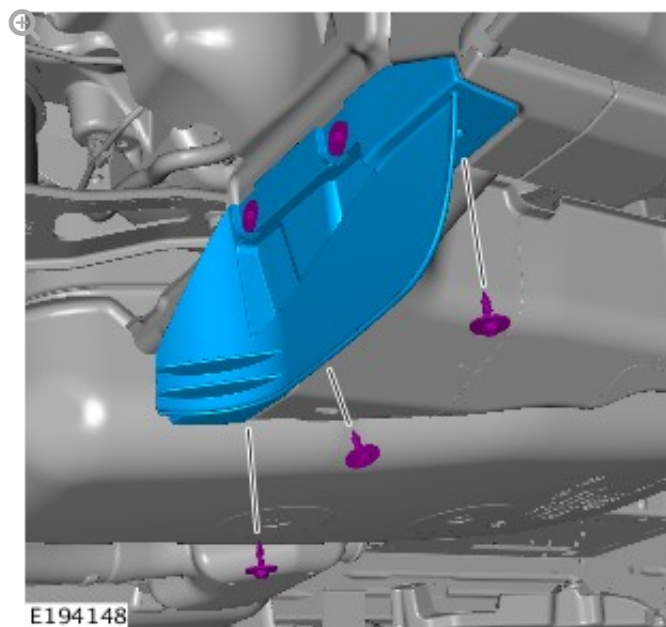


5.

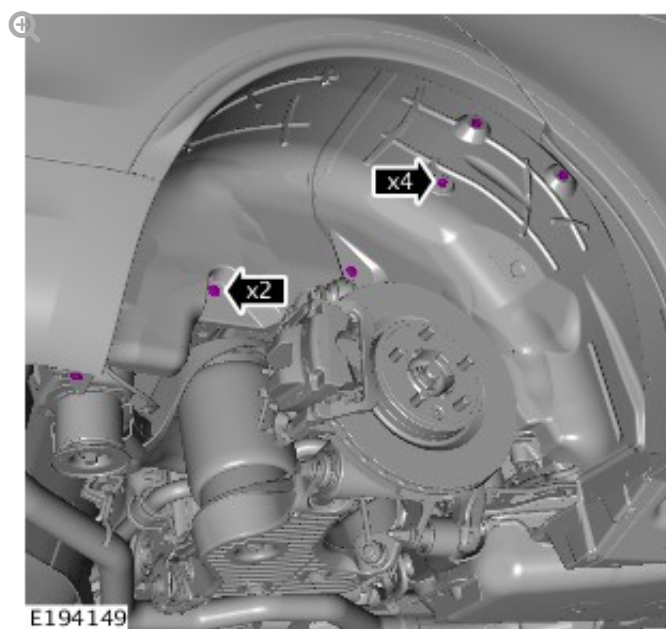


6.

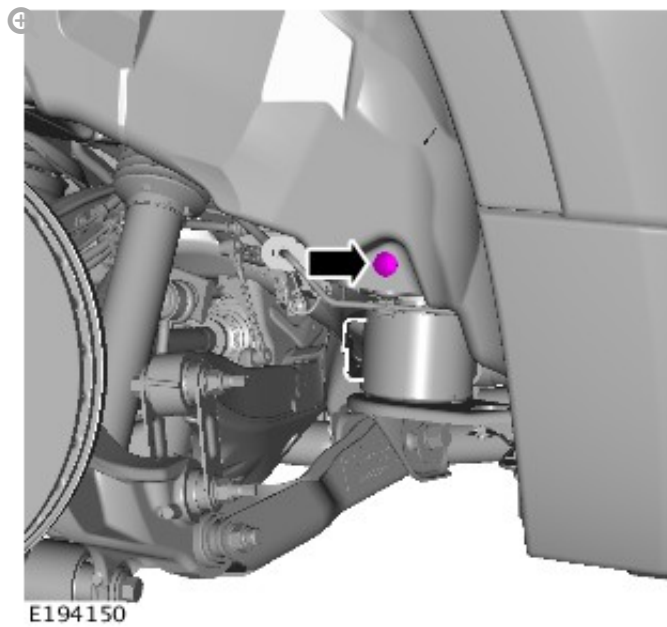

7.

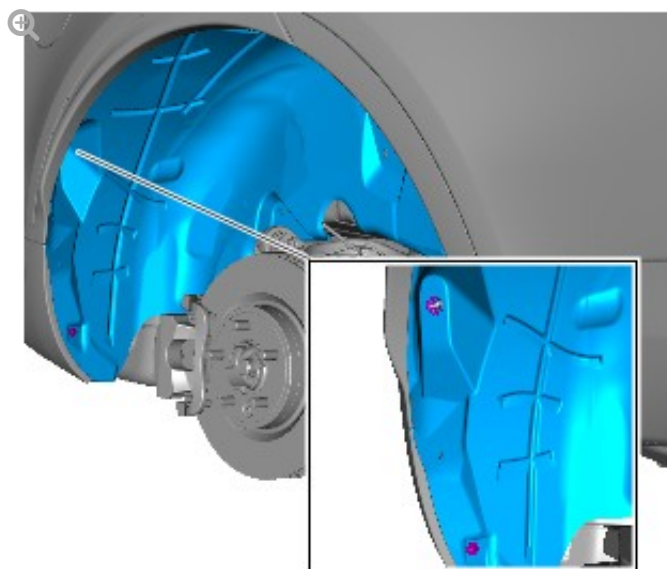


8.

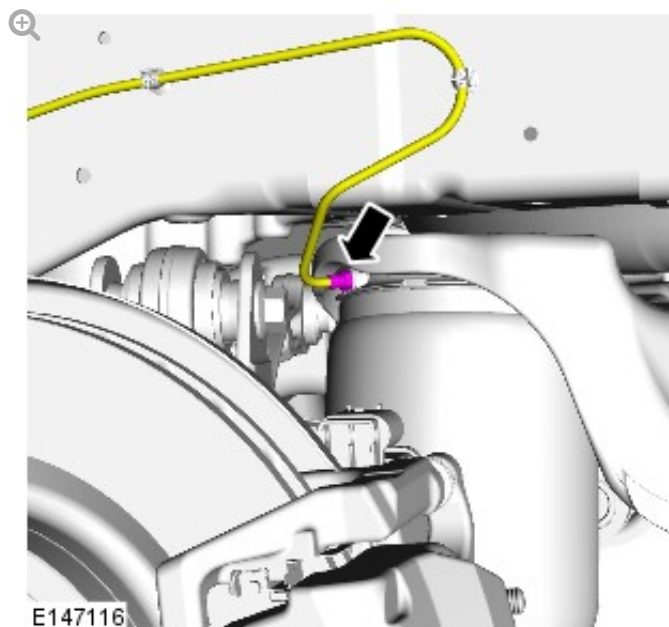


Discard the air line connector.

9.

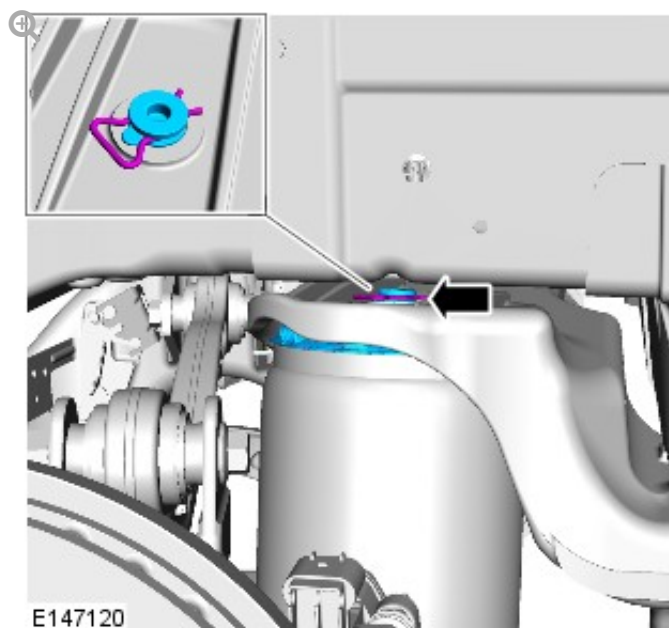


10.

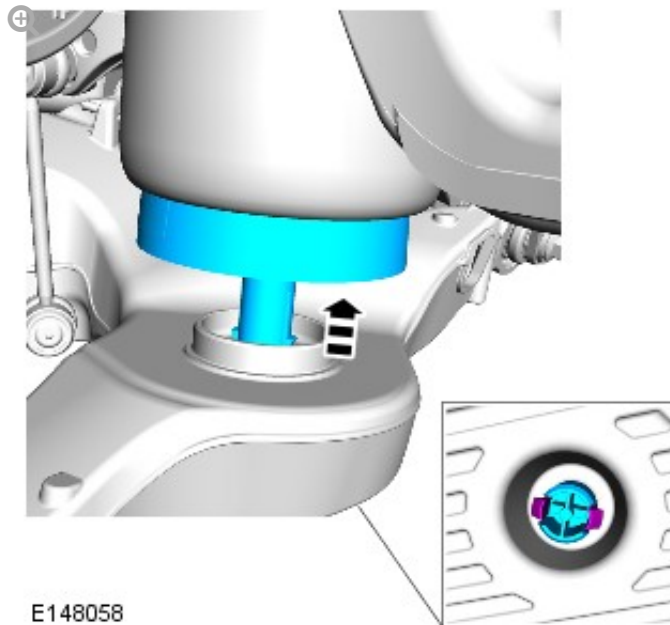

E148058


11.

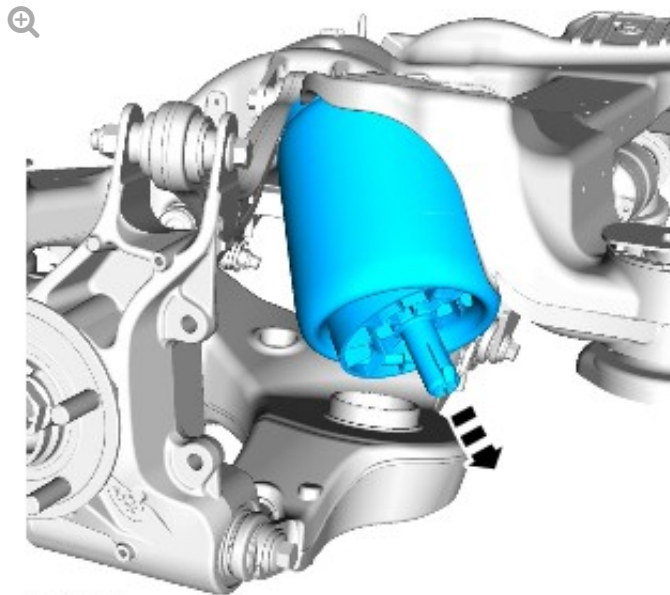

E148057


INSTALLATION

1.

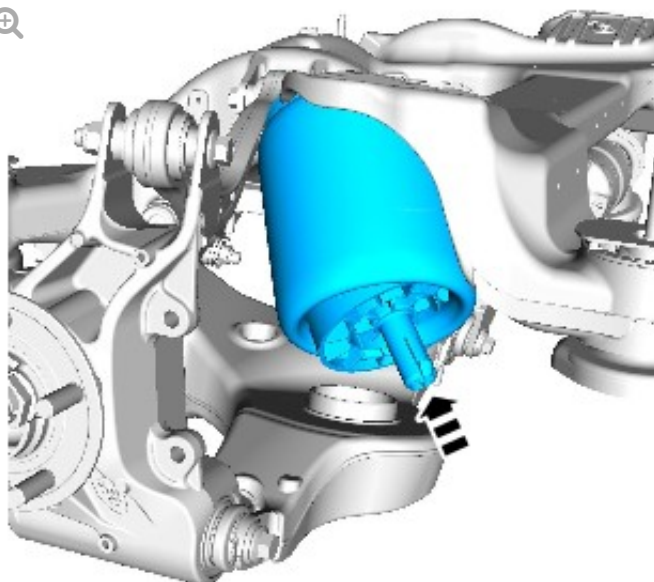


E150093

2.

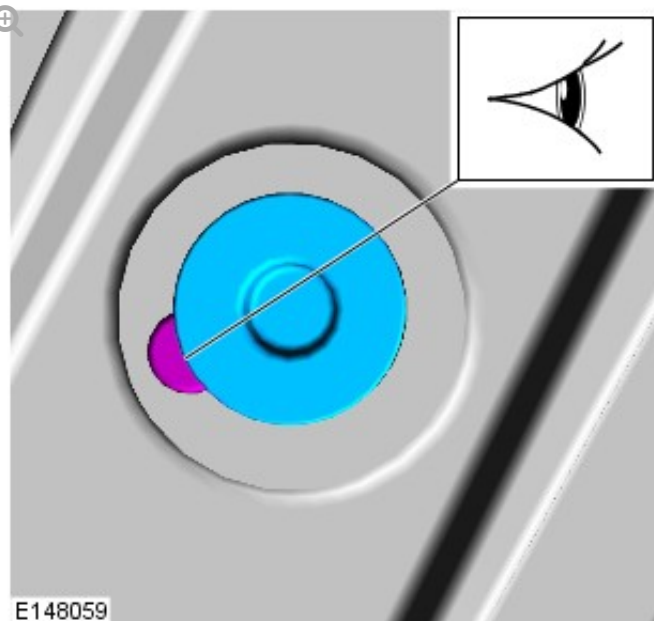


E148059

3.

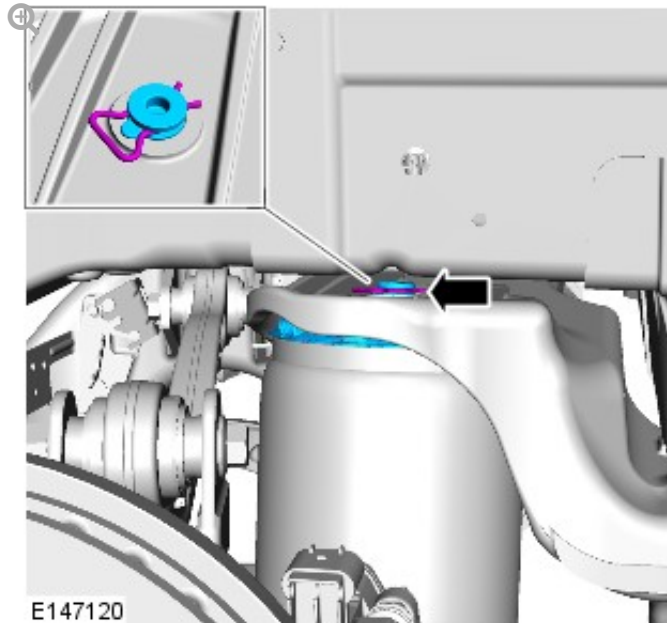


4.

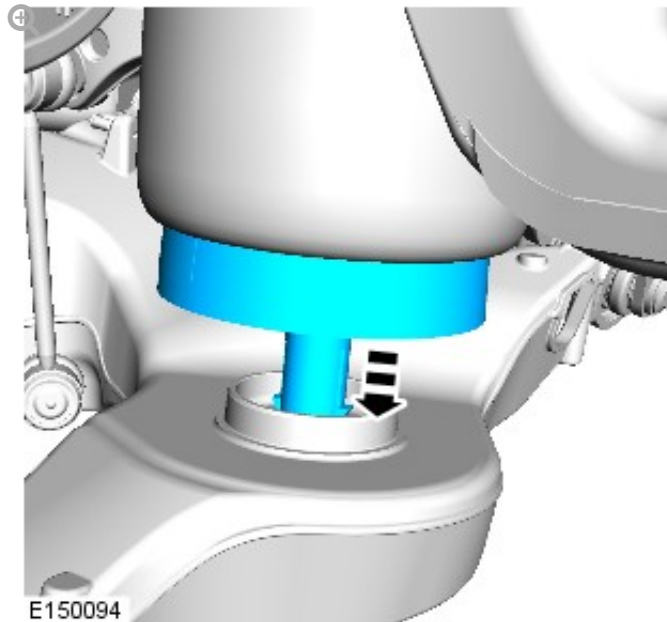

5.

CAUTION:

Do not reuse the air line connector. Always install a new air line connector every time it is released.

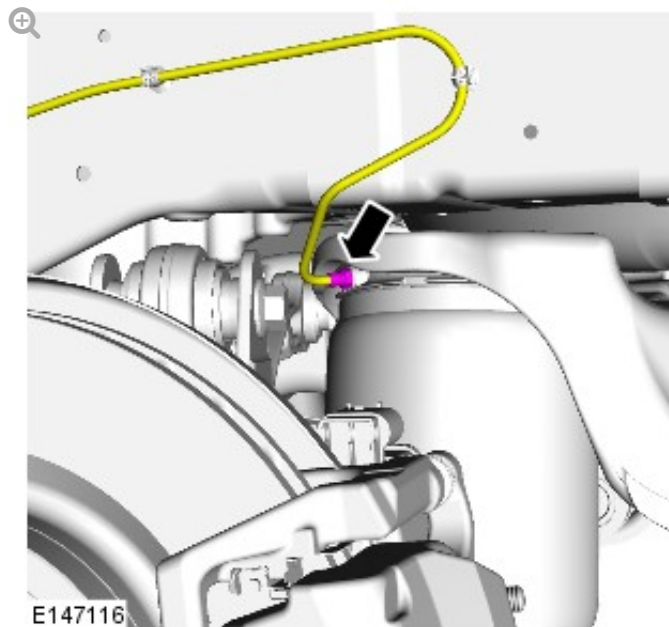


Refer to: [Air Line Connector](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

Renew Part: [Air line connector](#).


Torque: 3 Nm

6.

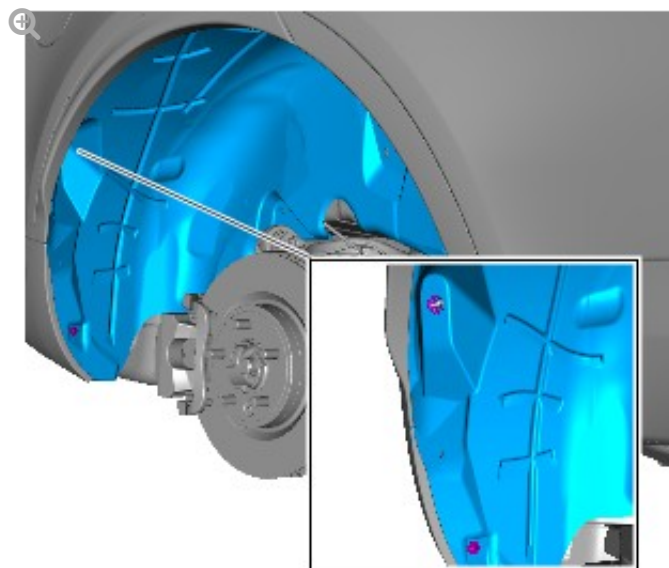


E194151


7.

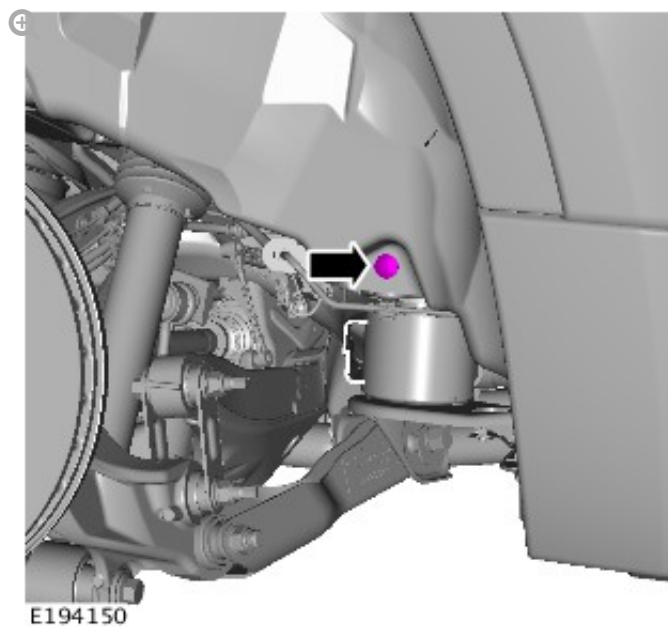

8.

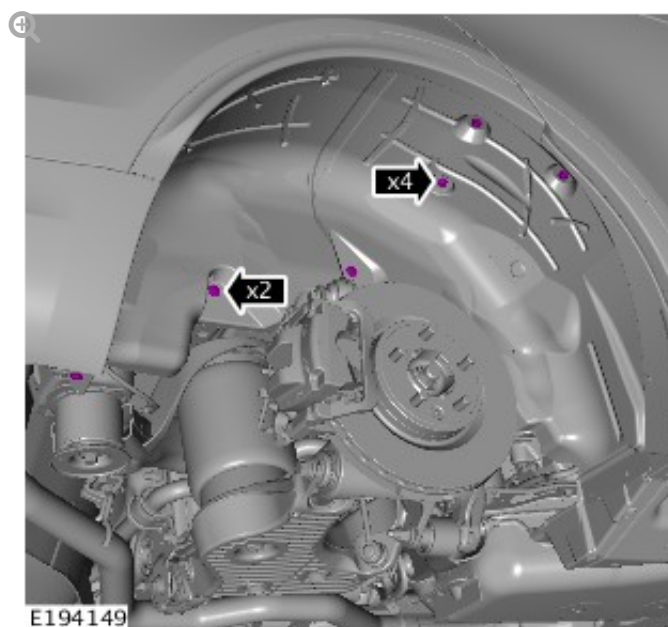

9.

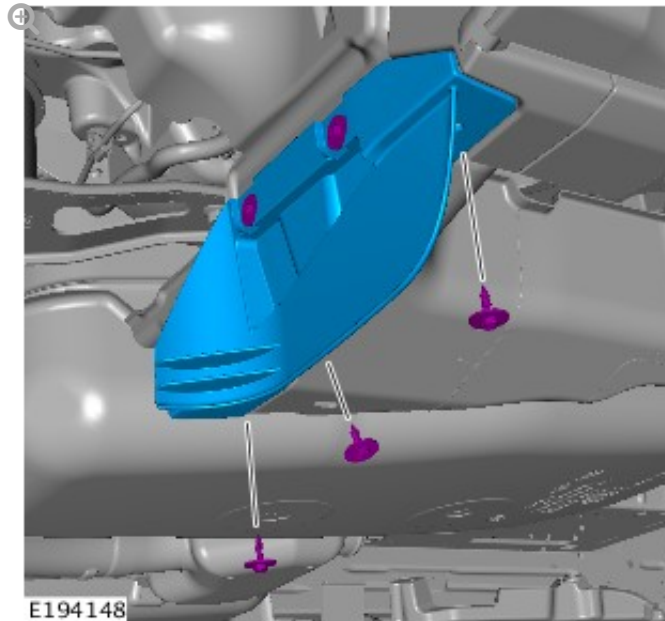

10. Install the rear wheel.

Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

- 11.

CAUTION:

This step must be carried out to prevent damage to the air spring.

Perform the air suspension manual control procedure.

Refer to: [Air Suspension - Manual Control Procedure](#) (204-05 Vehicle Dynamic Suspension, General Procedures).

12. Lower the vehicle.

13.

CAUTION:

This step must be carried out in order to maintain the correct compressor/dryer performance.

Using Land Rover approved diagnostic equipment pressurize the rear air spring.

Refer to: [Air Suspension System Depressurize and Pressurize](#) (204-05 Vehicle Dynamic Suspension, General Procedures).