

2016.0 RANGE ROVER (LG), 204-05

VEHICLE DYNAMIC SUSPENSION

REAR SUSPENSION HEIGHT SENSOR

[G1549344]

REMOVAL AND INSTALLATION

64.36.01	SENSOR - HEIGHT - REAR - LEFT/EACH - RENEW	ALL DERIVATIVES	0.6	USED WITHINS	+
----------	--	--------------------	-----	-----------------	---

REMOVAL

NOTE:

Right hand shown, Left hand similar.


1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-01 Battery, Mounting and Cables, Specifications).

2. **WARNING:**

Do not work on or under a vehicle supported only by a jack.
Always support the vehicle on safety stands.

Raise and support the vehicle.


3.

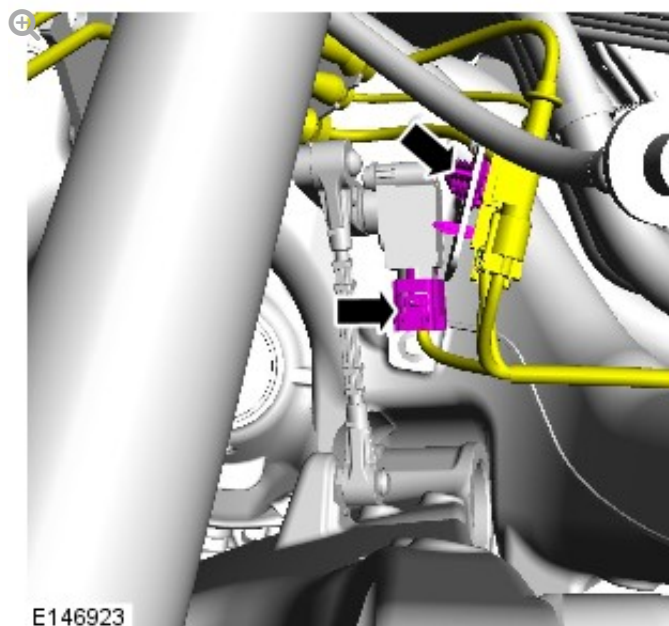

4.

CAUTION:

Do not use excessive force to disconnect the height sensor link.

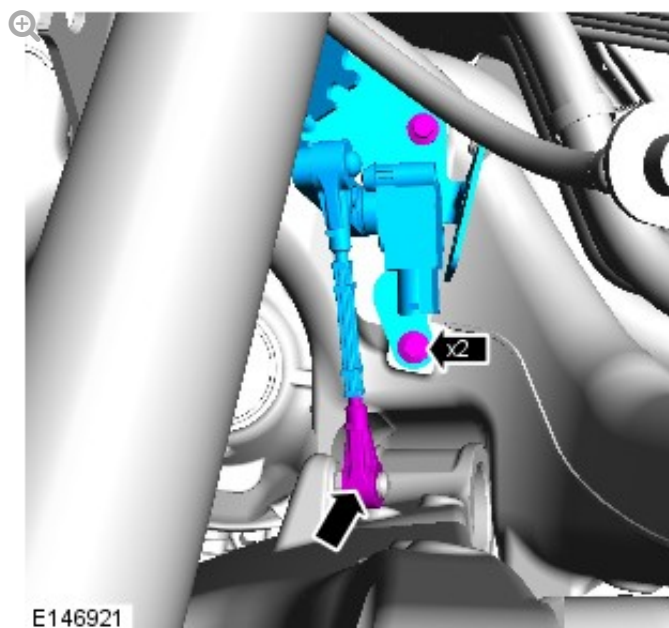

Torque: 10 Nm

5. Inspect the condition of the suspension height sensor wiring harness. Rectify any concerns, if required.
Refer to: [Wiring Harness](#) (418-02 Wiring Harnesses, Description and Operation).

INSTALLATION

1. To install, reverse the removal procedure.

2. **CAUTION:**

Calibration of the air suspension system must be carried out if the suspension height sensor is loosened, removed or replaced.

Using the Land Rover approved diagnostic system, calibrate the suspension ride height.

Refer to: [Ride Height Adjustments](#) (204-05 Vehicle Dynamic Suspension, General Procedures).