

2016.0 RANGE ROVER (LG), 204-04

WHEELS AND TIRES

TIRE LOW PRESSURE SENSOR (G1508955)

REMOVAL AND INSTALLATION

74.10.05	SENSOR - TIRE PRESSURE MONITORING SYSTEM [TPMS] - RENEW	ALL DERIVATIVES	0.4	USED WITHINS	+
----------	---	--------------------	-----	-----------------	---

REMOVAL

WARNING:

The valve seal and steel washer must be replaced each time a tire is changed to avoid seal failure. The seal and washer must be replaced if the sensor is removed. Removal of the sensor retaining nut must be regarded as sensor removal. The valve cap must always be in place except when inflating, releasing or checking pressure.

NOTE:

If the sensor is installed on a **running** wheel, the new sensor identification will be learnt when the vehicle is first driven. If a new sensor is installed to the spare wheel, the identification for that sensor must be programmed into the tire pressure monitoring system (TPMS) module using Land Rover approved diagnostic equipment. The identification code is provided on a label with the complete assembly and is also printed on the casing of each sensor.

1.

WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

-
2. For additional information, refer to: Wheel and Tire (204-04 Wheels and Tires, Removal and Installation).

3.

CAUTION:

To avoid damage to the tire low pressure sensor, release the tire bead from the rim, 180 degrees from the valve.

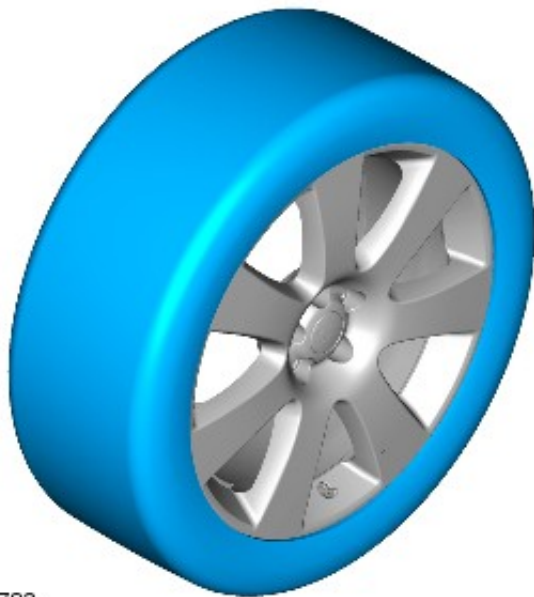


E144783

4.


CAUTIONS:

- Do not push on the valve.
- If the tire low pressure sensor is to be re-installed, a new washer, seal and nut must be installed.

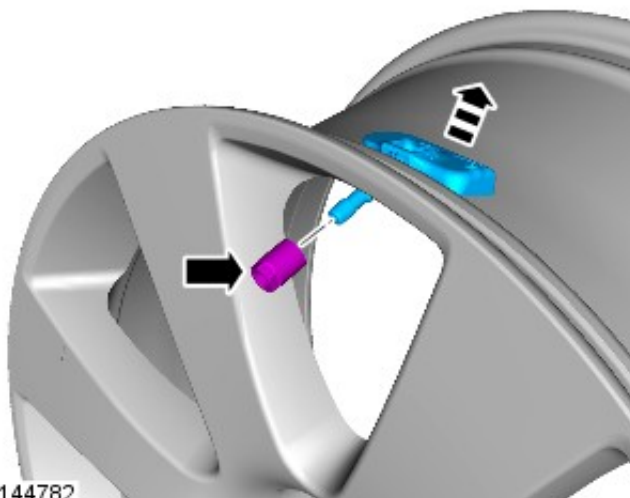

E144782

5.

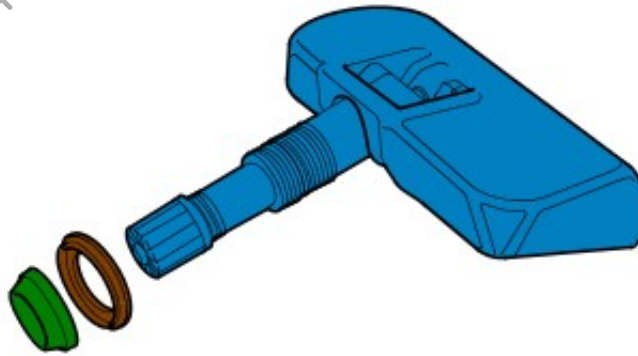

E51447

If necessary, install a new seal and washer.

- Remove and discard the sealing washer.
- Install a new washer and seal, making sure the valve remains pressed fully onto its seat.

INSTALLATION

1.

CAUTIONS:

- Do not use compressed air to clean the sensor. Do not clean the sensor with solvents or cleaning agents of any type, use a clean dry cloth.
- Make sure that the mating faces are clean and free of foreign material.


2.

CAUTION:

Do not apply any lubricant to the new valve.

NOTE:

If the sensor is installed on a **running** wheel, the new sensor identification will be learnt when the vehicle is first driven. If a new sensor is installed to the spare wheel, the identification for that sensor must be programmed into the tire pressure monitoring system (TPMS) module using Land Rover approved diagnostic equipment. The identification code is provided on a label with the complete assembly and is also printed on the casing of each sensor.

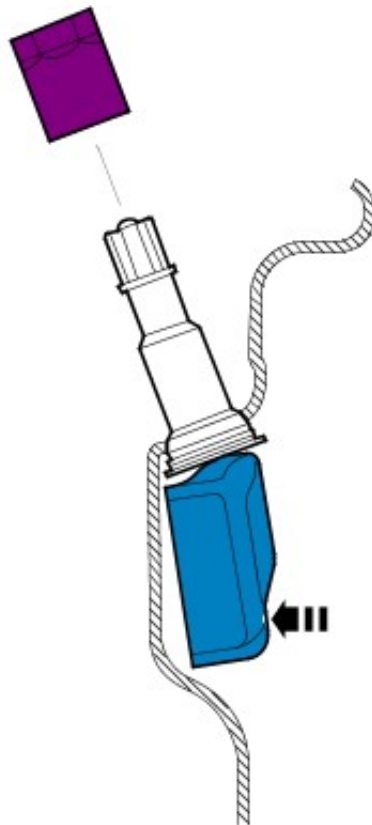

E51449

TORQUE: 8 Nm

-
3. Install the tire and balance the wheel.
-
4. For additional information, refer to: Wheel and Tire (204-04 Wheels

and Tires, Removal and Installation).