

2016.0 RANGE ROVER (LG), 204-04

WHEELS AND TIRES

TIRE PRESSURE MONITORING SYSTEM FRONT INITIATOR (G1531998)

REMOVAL AND INSTALLATION

86.53.16	ANTENNA - FRONT WHEEL - TIRE	ALL DERIVATIVES	0.3	USED WITHINS	+
	PRESSURE MONITORING SYSTEM (TPMS) - RENEW				

REMOVAL

NOTES:

- Removal steps in this procedure may contain installation details.
- LH illustration shown, RH is similar.

1.


WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

2. Refer to: [Wheel and Tire - GTDi 2.0L Petrol/TDV6 3.0L Diesel /TDV8 4.4L Diesel/V6 S/C 3.0L Petrol /V8 N/A 5.0L Petrol/V8 S/C 5.0L Petrol](#) (204-04 Wheels and Tires, Removal and Installation).

3.

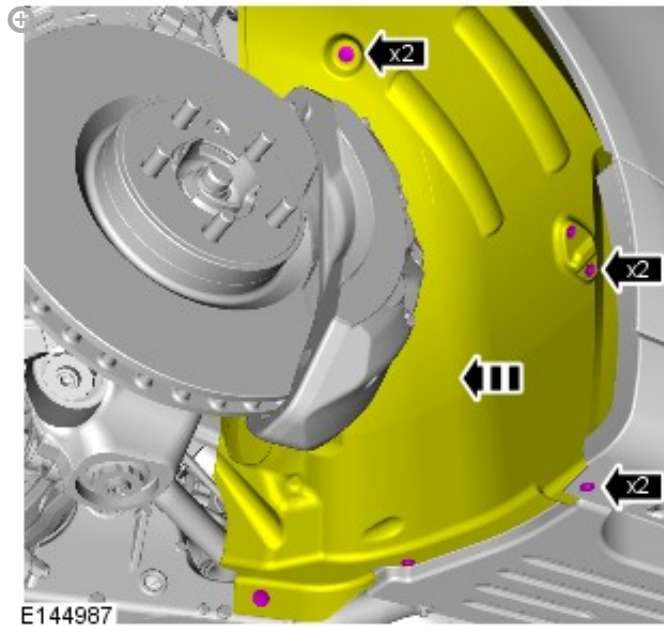

4.

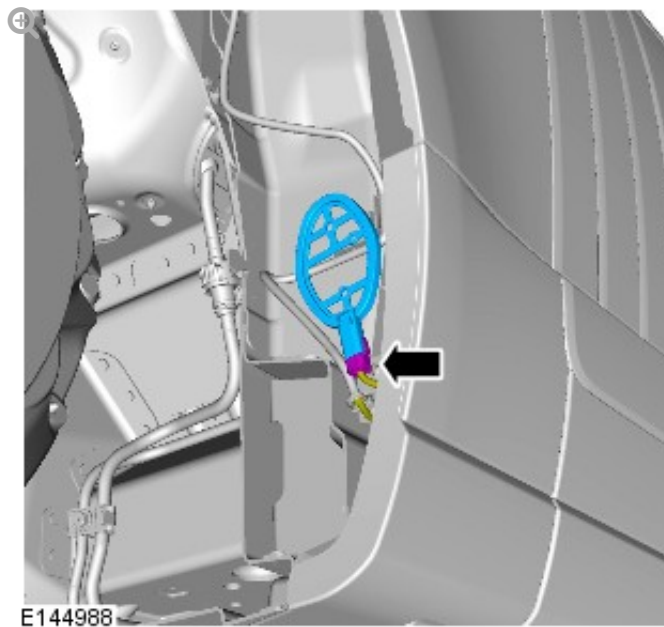

INSTALLATION

1. To install, reverse the removal procedure.
2. If a new component has been installed, configure using Land Rover approved diagnostic equipment.