

2016.0 RANGE ROVER (LG), 204-04

WHEELS AND TIRES

TIRE PRESSURE MONITORING SYSTEM RECEIVER (G1551236)

REMOVAL AND INSTALLATION

86.54.01	RECEIVER - TIRE MONITORING - RENEW	ALL DERIVATIVES	0.8	USED WITHINS	+
----------	---	--------------------	-----	-----------------	---

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1. Refer to: [Overhead Console](#) (501-12A Instrument Panel and Console - Standard Wheel Base, Removal and Installation).

2.

NOTE:

Repeat the procedure for the other side.

Refer to: ['A' Pillar Trim Panel](#) (501-05 Interior Trim and

Ornamentation, Removal and Installation).

3.

NOTE:


Repeat the procedure for the other side.

Refer to: [Sun Visor](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

4.

NOTE:

Repeat the step for the other side.

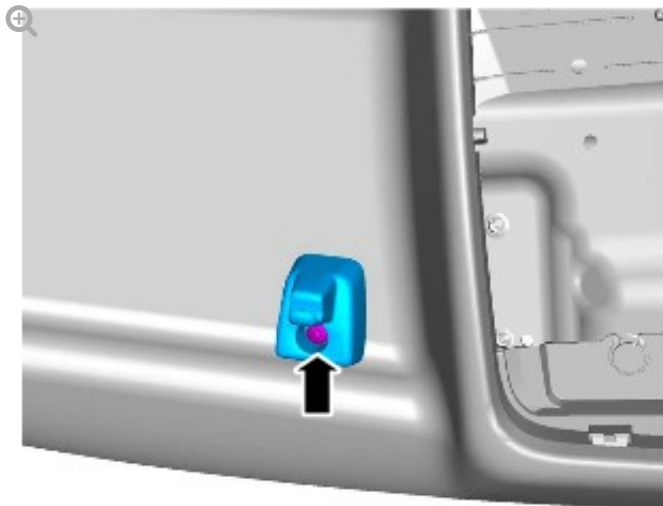


E156547

Torque: 6 Nm

5.

NOTE:


Repeat the step for the other side.

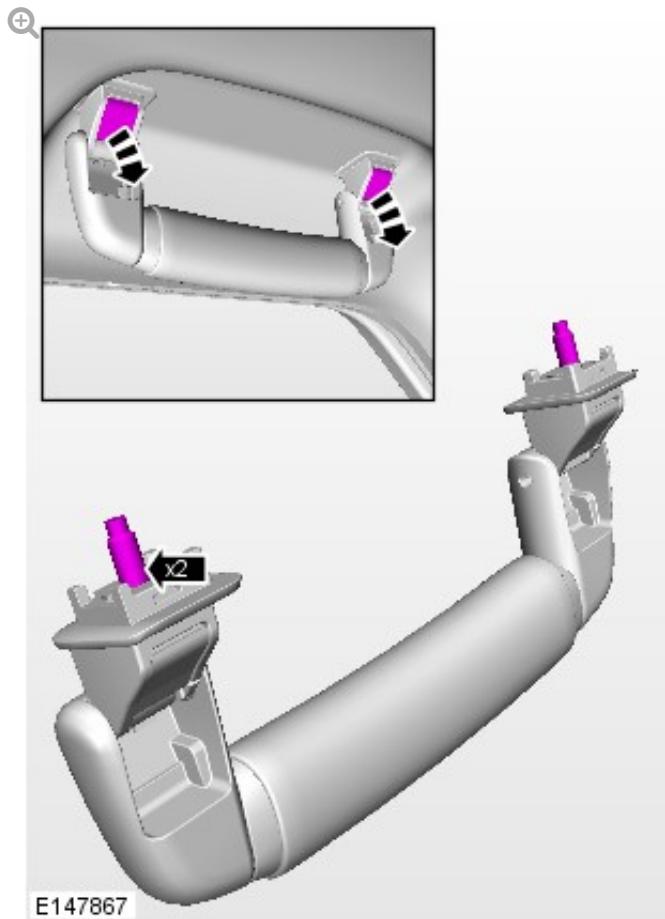

6.

CAUTIONS:

- Lower the front section of the headliner to aid access.
- Make sure damage is not caused to the headliner.

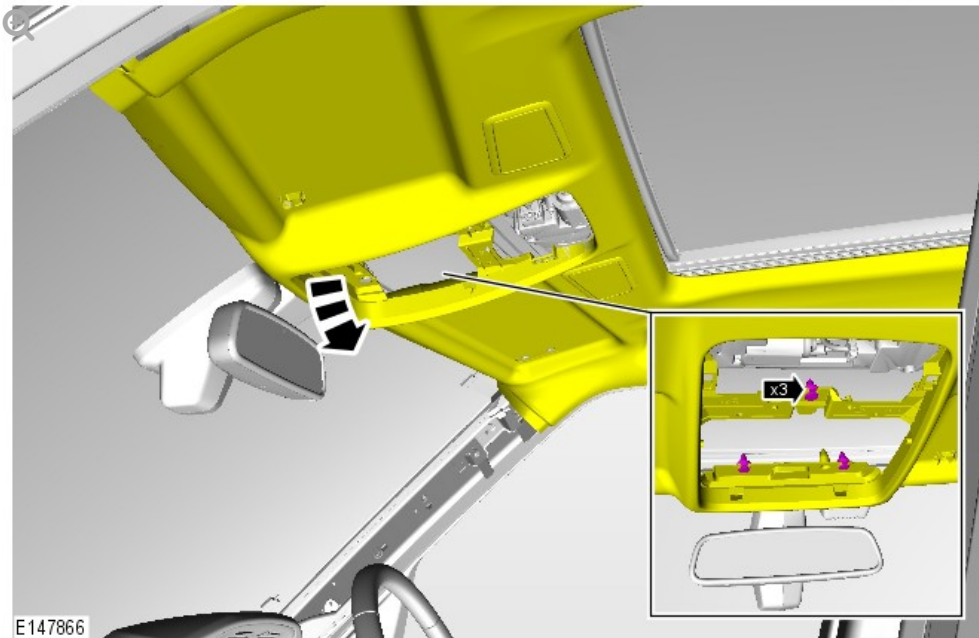

Release the headlining.


7.

CAUTION:

Detach the receiver from the headliner by releasing the velcro.

NOTES:

- Ensure all Data is inhaled from the existing component using a Jaguar Land Rover Approved Diagnostics Tool.
- Make sure that this component is installed to the noted removal position.

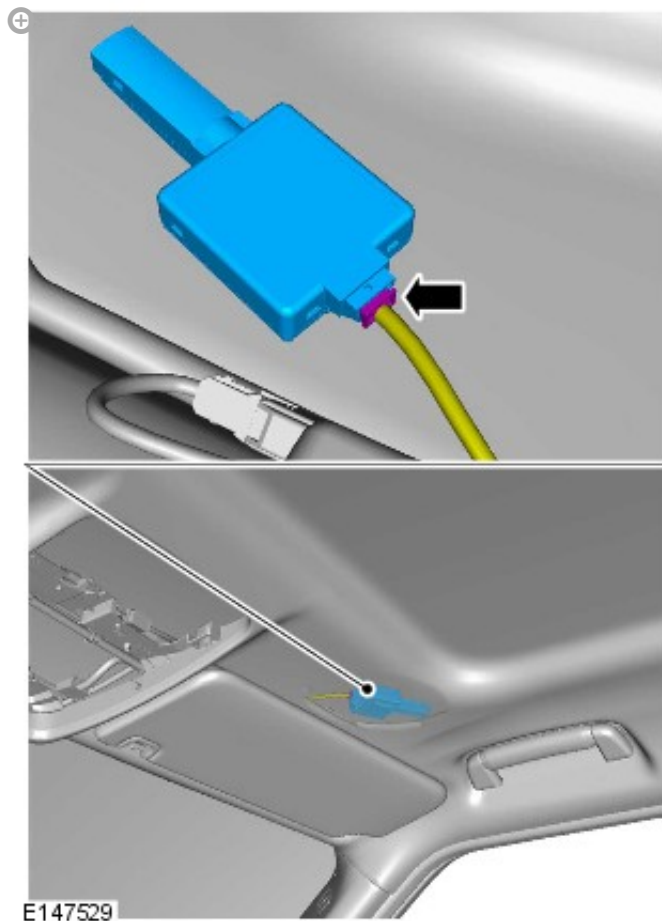

INSTALLATION

1. To install, reverse the removal procedure.
2. If a new component has been installed, configure using Land Rover approved diagnostic equipment.