

2016.0 RANGE ROVER (LG), 414-01

BATTERY, MOUNTING AND CABLES

AUXILIARY BATTERY (G1551626)

REMOVAL AND INSTALLATION



REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.


1. Disconnect the battery earth lead.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.

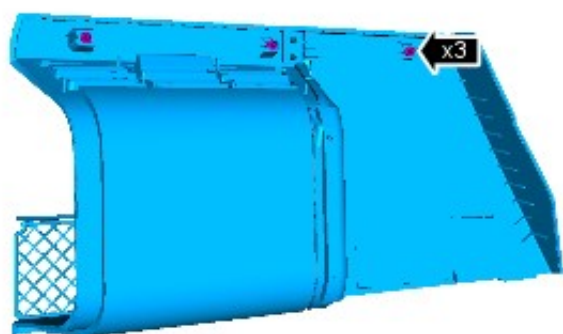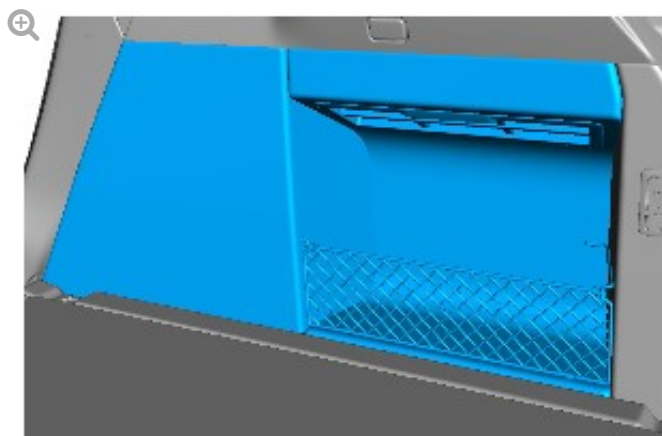


E145529

3.

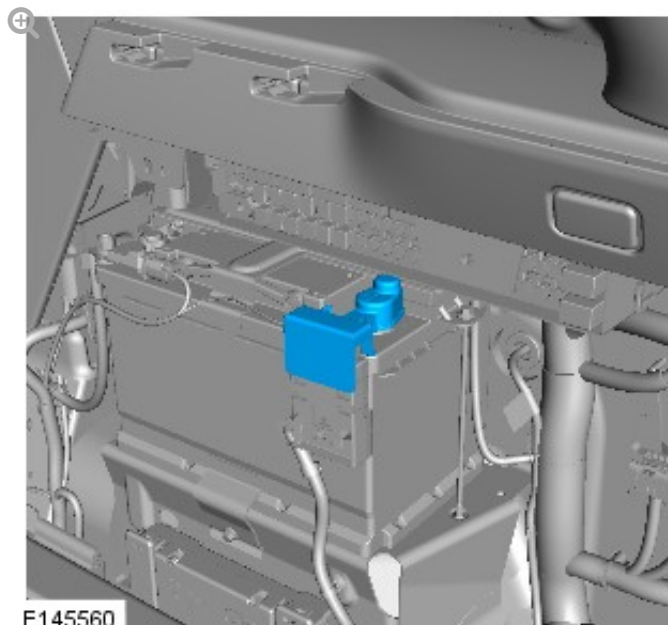


E145560

4.

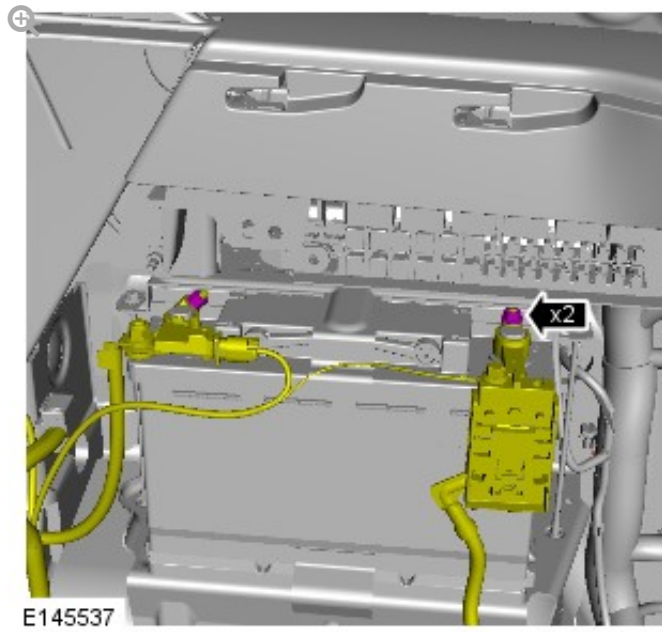

Torque: 6 Nm

5.

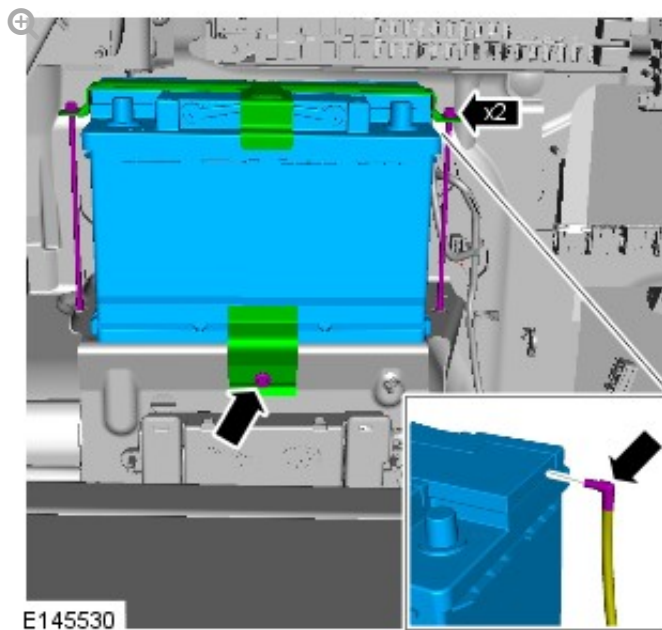

Torque: 9 Nm

INSTALLATION

1. To install reverse the removal procedure.

