

2016.0 RANGE ROVER (LG), 414-01

BATTERY, MOUNTING AND CABLES

BATTERY (G1558977)

REMOVAL AND INSTALLATION


REMOVAL

NOTES:


- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.
- If a new battery is installed, the battery monitoring system (BMS) must be reset using Land Rover approved diagnostic equipment.

1. Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).


2.

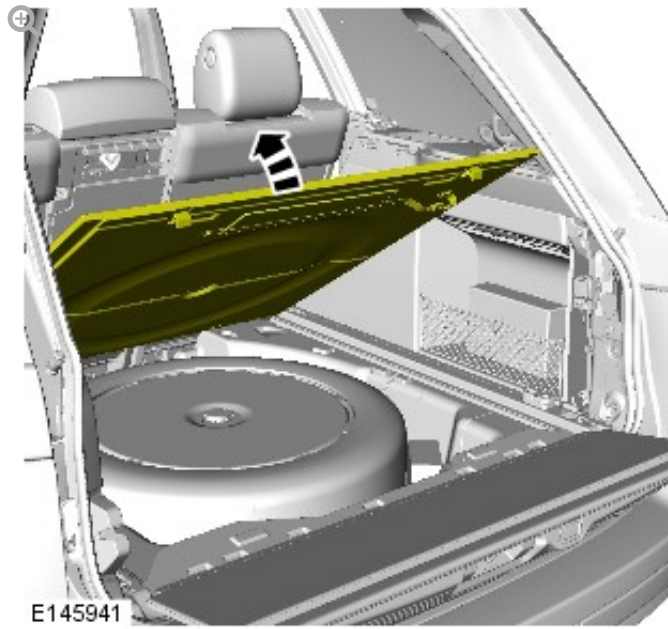


3.

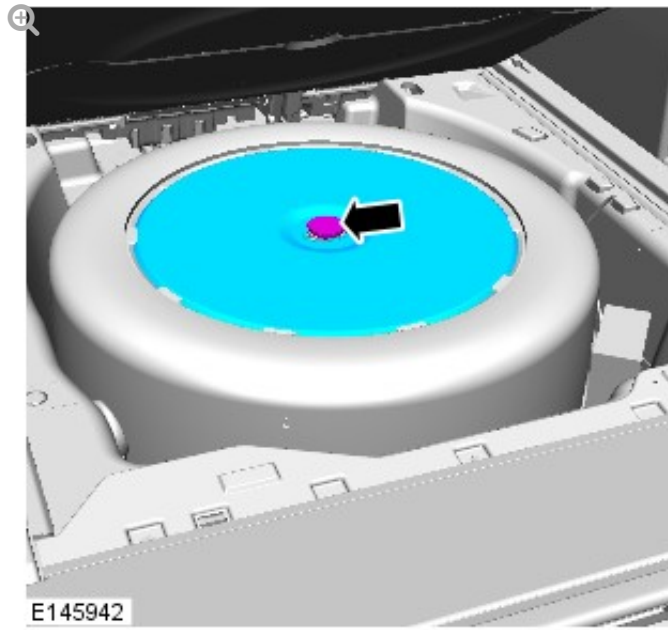

4.

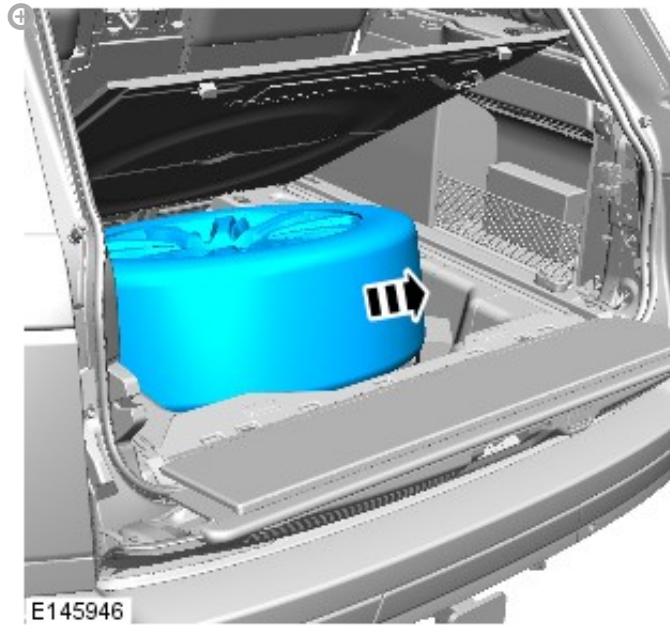


5.

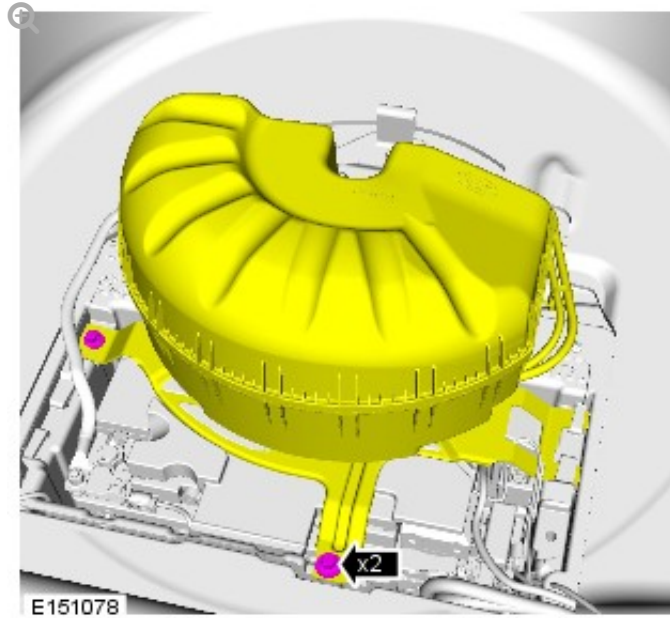


6.

CAUTION:


Secure the air suspension compressor in the upright position as illustrated.

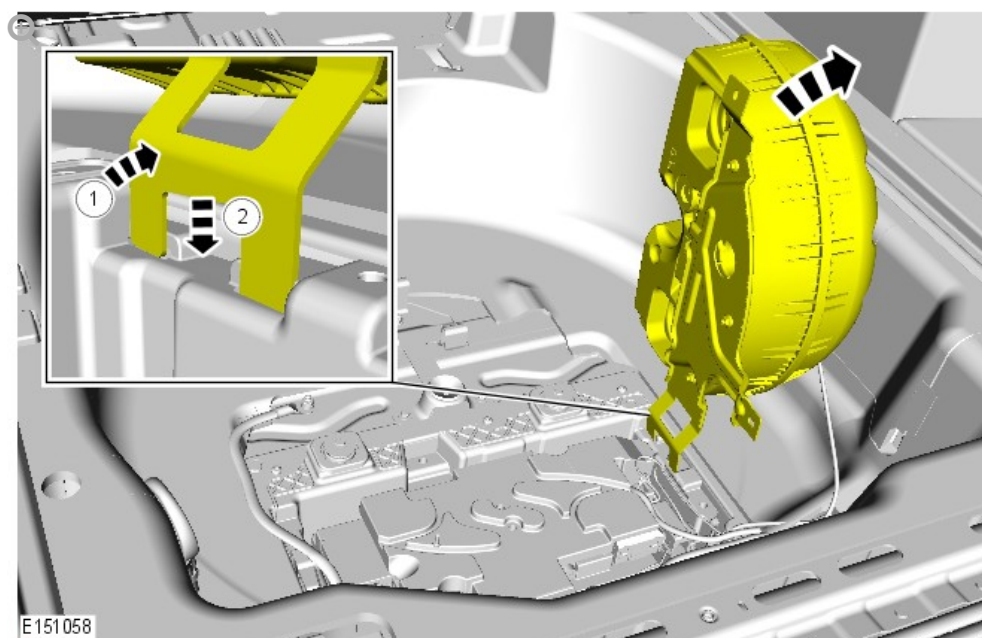

7.

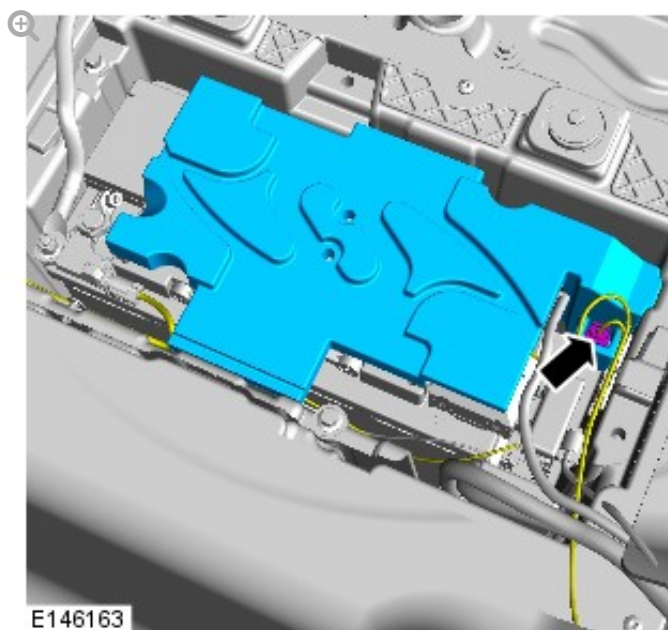


8.

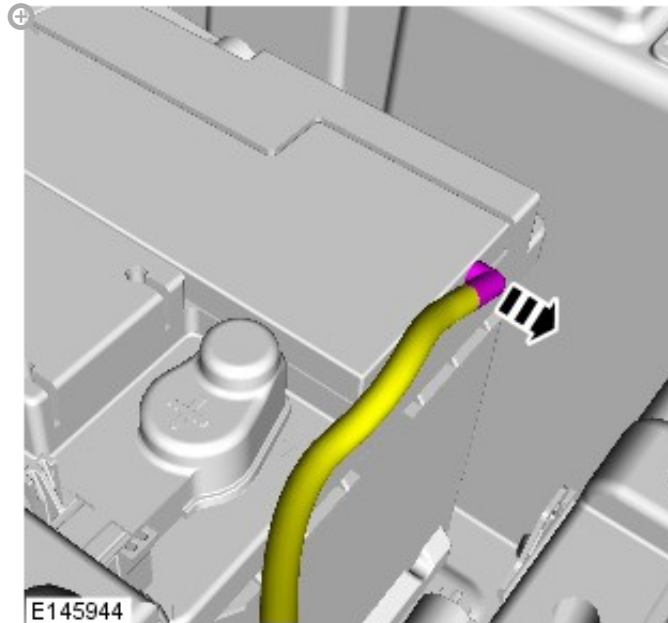

9.

CAUTION:

Ensure the clamping lug on the BMS is below the top of the negative terminal post as shown.

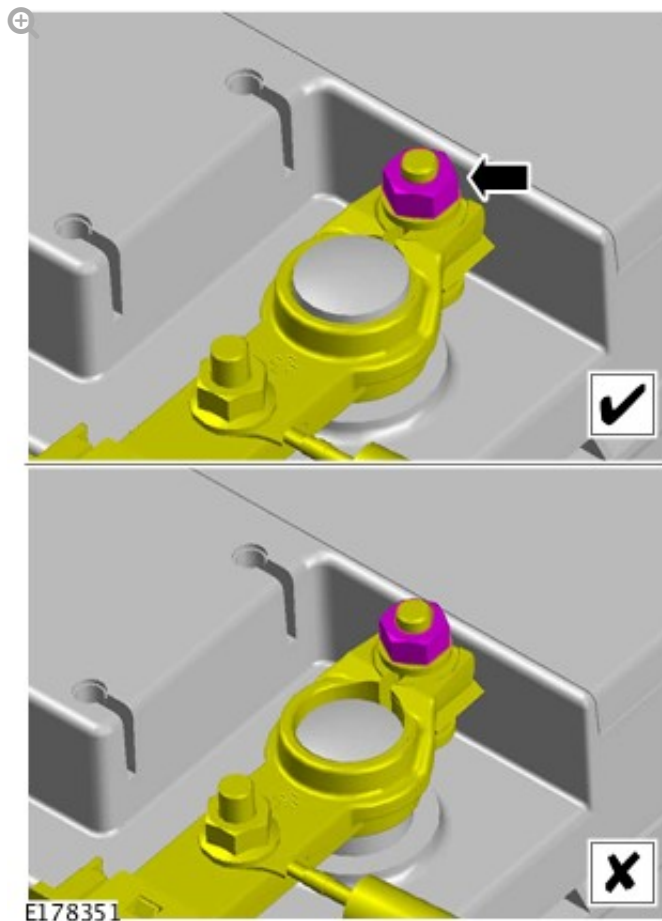


10.

CAUTION:

Make sure the component is aligned as shown.

NOTE:

Disconnect the ground cable first.

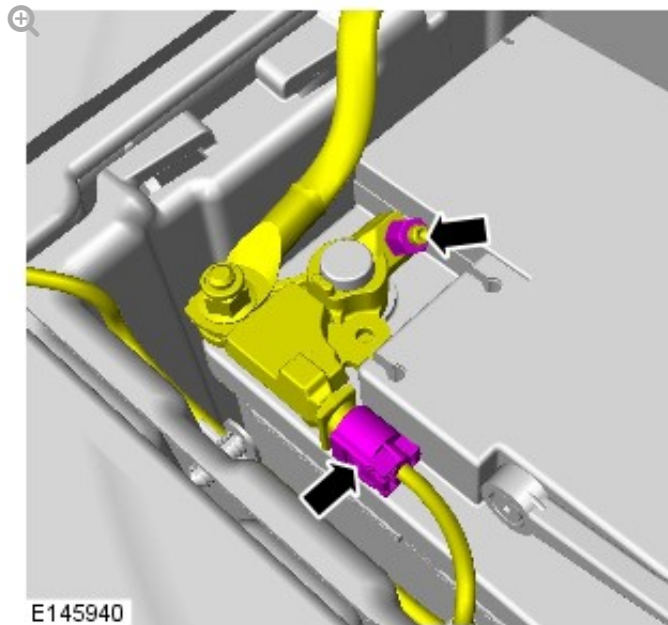


Torque: 6 Nm

11.


CAUTION:

Make sure the component is aligned as shown.

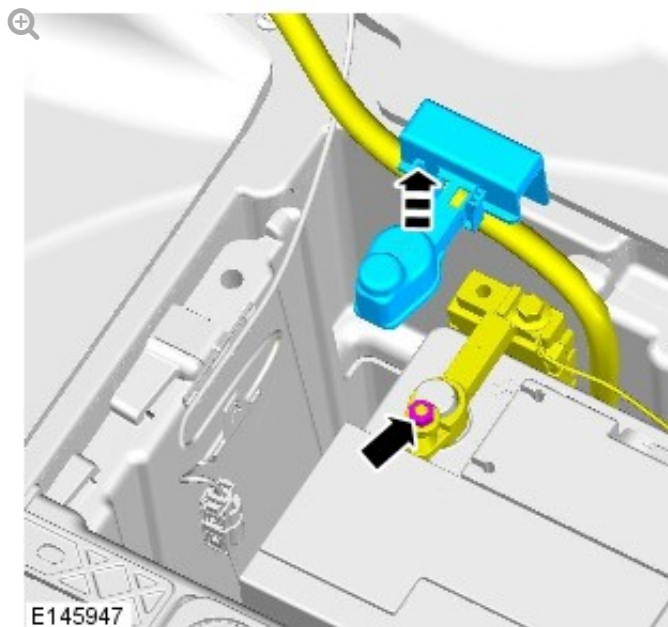

Torque: 6 Nm

12.

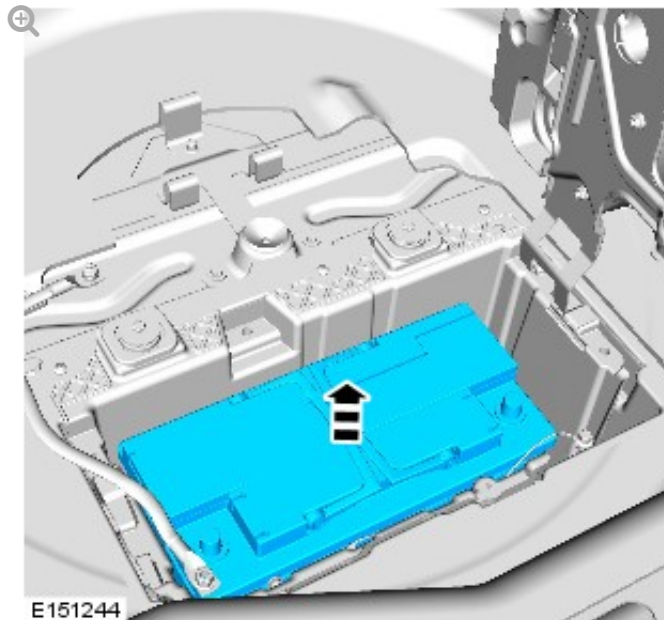


INSTALLATION

1.

CAUTIONS:

- Make sure the air suspension compressor is located correctly in its mounting bracket.
- Make sure that the battery monitoring system (BMS) module wiring harness does not get caught beneath the battery securing clamp.
- Make sure that the battery is positioned fully outboard on the battery tray and that no harnesses or hoses are trapped before securing the battery with the bolts.
- Make sure the component is correctly located on its mounting bracket. Lift the component by 10 mm before lowering into position.
- Make sure the battery monitoring system (BMS) electrical connector is connected to the module, before installing the BMS on to the battery terminal.

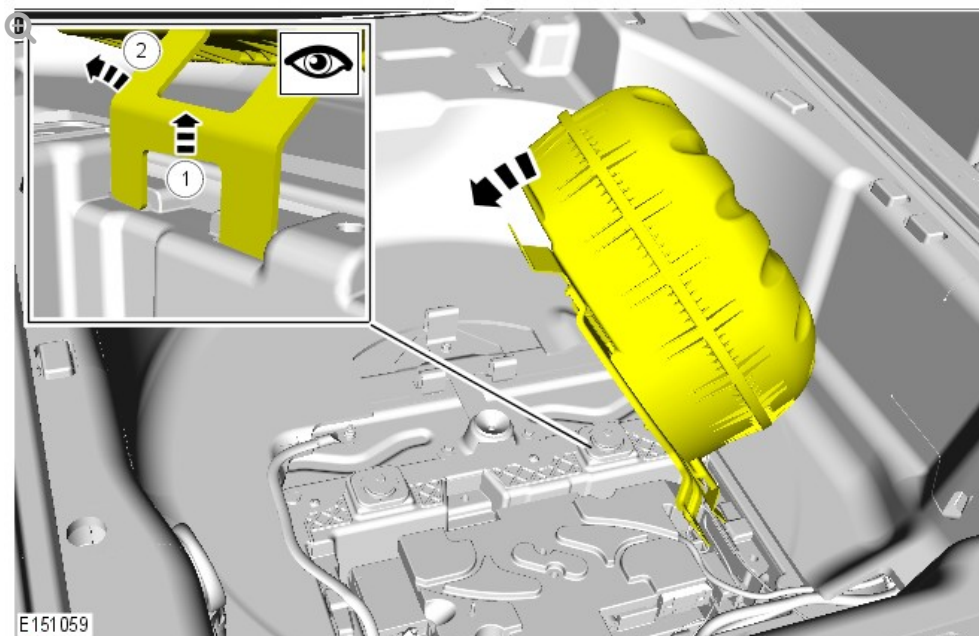

To install, reverse the removal procedure.

2.

NOTE:

This step is only necessary when installing a new battery.

Using Land Rover approved diagnostic equipment, reset the battery monitoring system (BMS).