

2016.0 RANGE ROVER (LG), 414-01

BATTERY, MOUNTING AND CABLES

ELECTRIC POWER INVERTER CONVERTER LOWER COOLER

[G1676012]

REMOVAL AND INSTALLATION

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Removal Step 4	Renew Part	Air conditioning pipes to condenser O- ring seals
Removal Step 6	Renew Part	Air conditioning pipes to condenser O- ring seals

REMOVAL

NOTES:


- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.
- Some components shown removed for clarity.

1. Refer to: [Air Conditioning System Recovery, Evacuation and](#)

[Charging](#) (412-00 Climate Control System - General Information, General Procedures).

2. Refer to: [Cooling Fan](#) (303-03A Engine Cooling - TDV6 3.0L Diesel - Gen 2/TDV6 3.0L Diesel, Removal and Installation).

3.

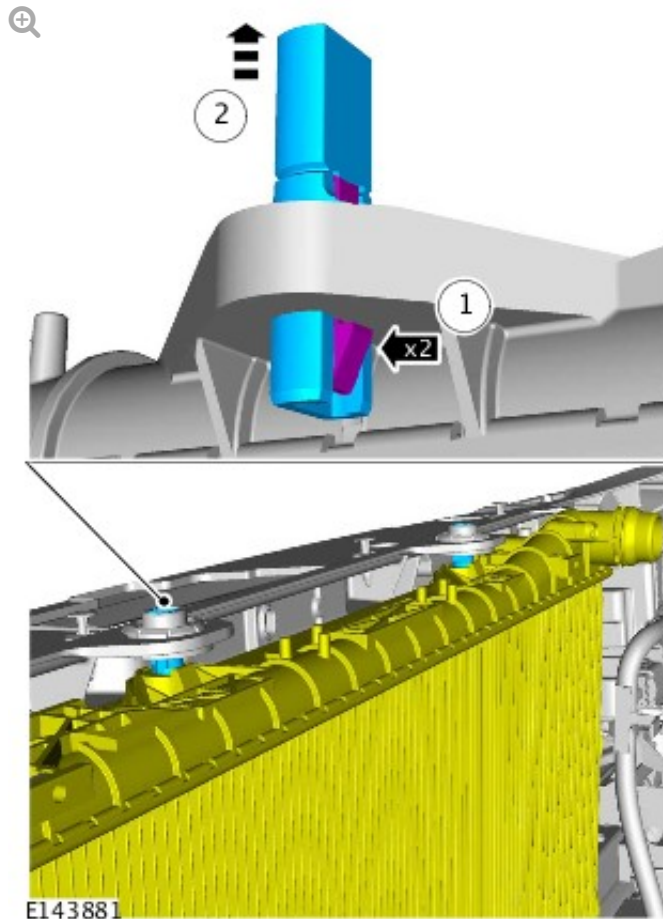


4.

CAUTIONS:

- Make sure that all openings are sealed.
- Remove and discard the O-ring seals.

NOTE:


Install new O-ring seals.

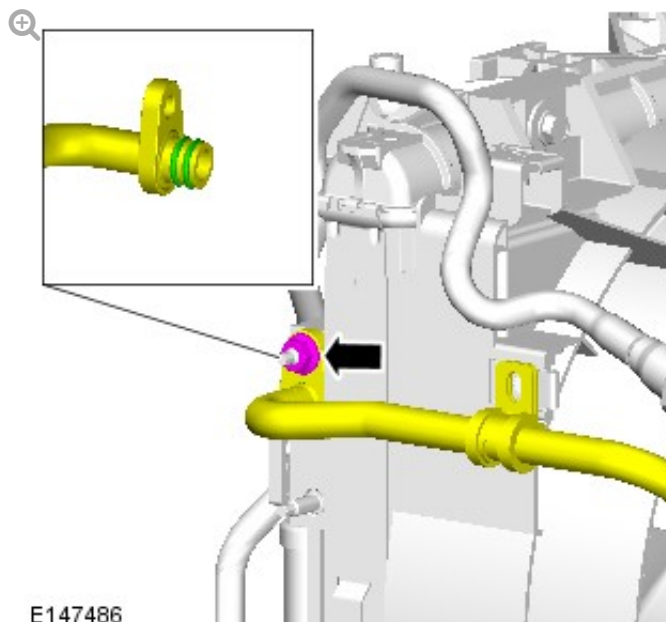

Renew Part: *Air conditioning pipes to condenser O-ring seals.*

Torque: 8 Nm

5.

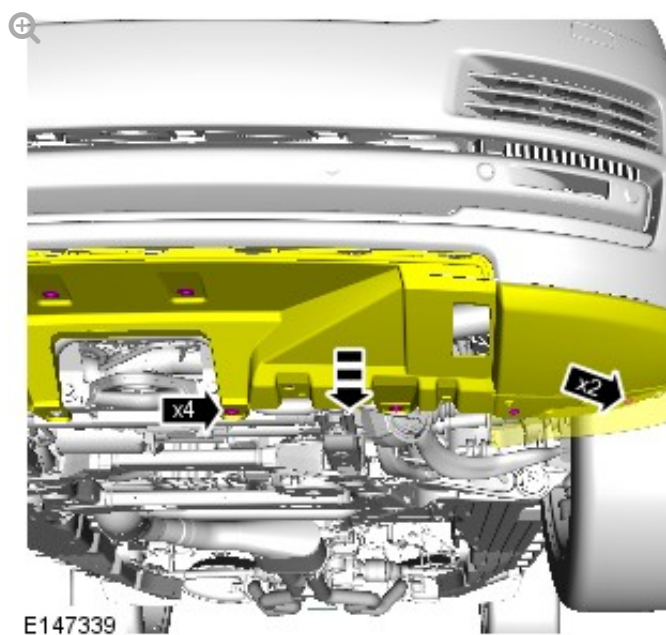


6.

CAUTION:

Remove and discard the O-ring seals.

NOTE:

Install new O-ring seals.

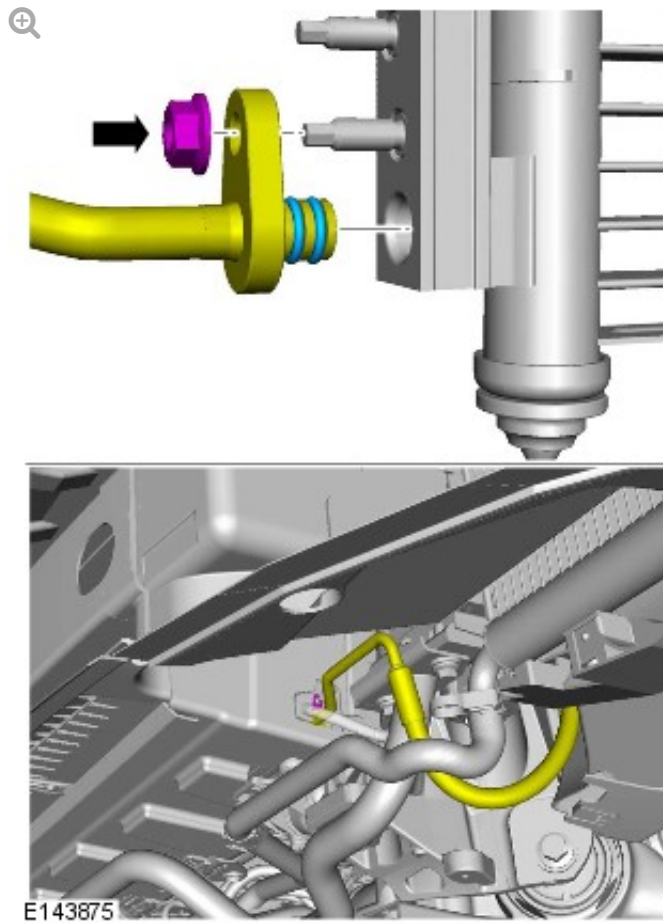


E143875


Renew Part: [Air conditioning pipes to condenser O-ring seals.](#)

Torque: 8 Nm

7.

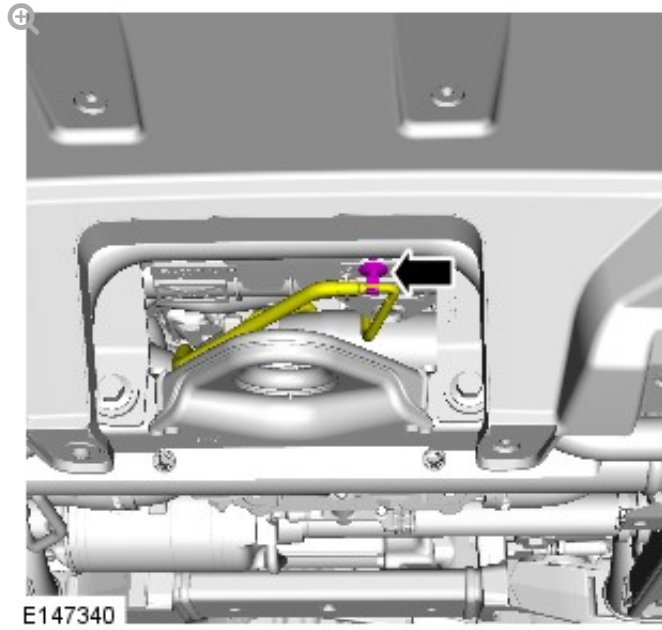

8.

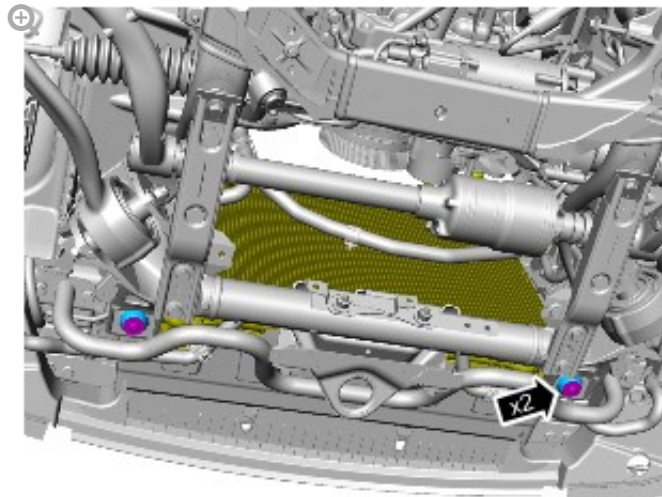


E143877

Torque: 15 Nm

9.

NOTE:


If equipped.

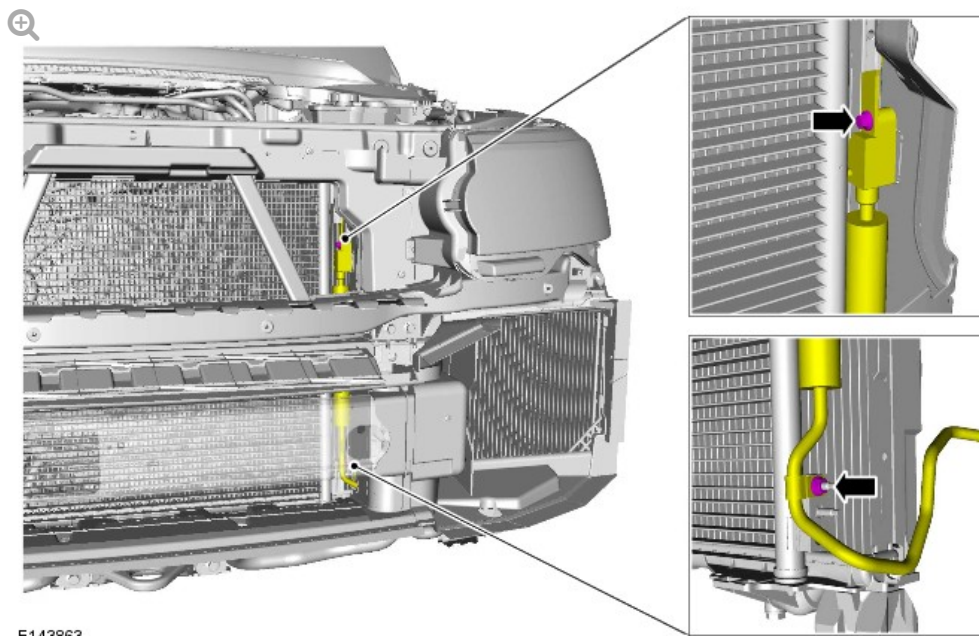

E143863

Torque: 7 Nm

10.


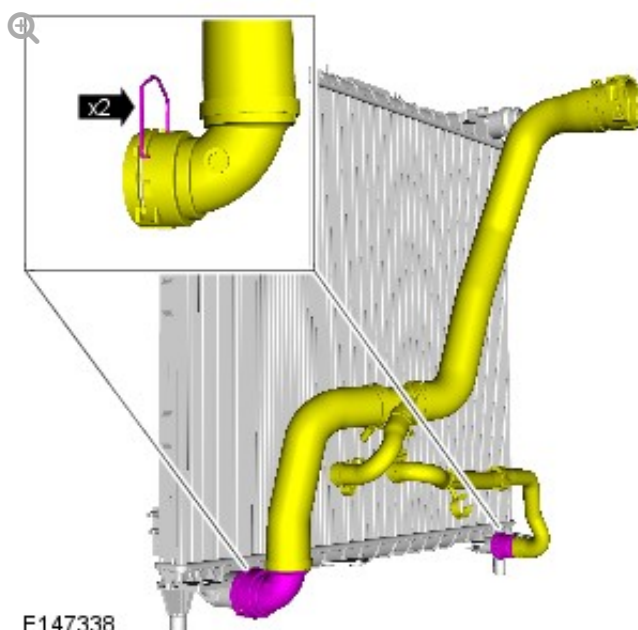


E147338

11.

CAUTION:


Always protect the cooling pack elements to prevent accidental damage.

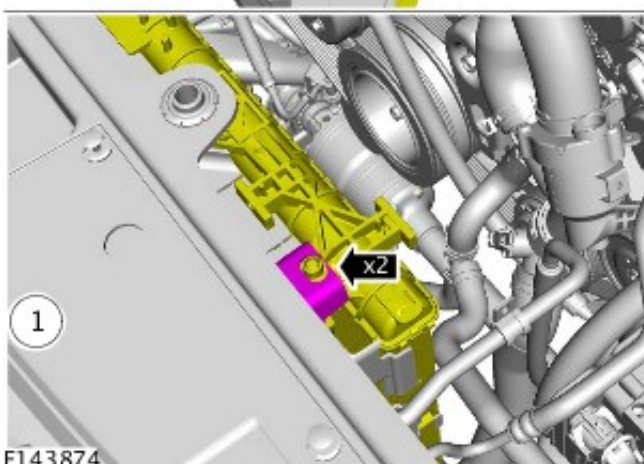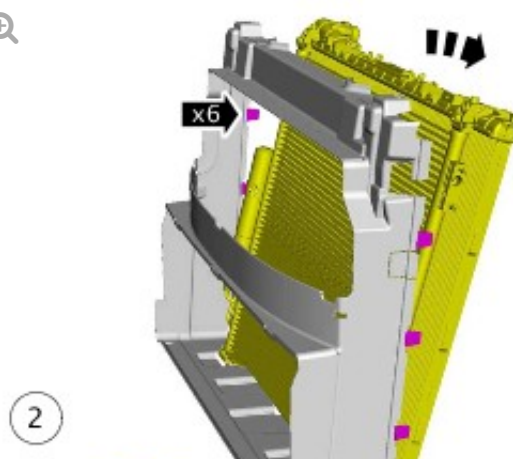

12.


CAUTION:

Always protect the cooling pack elements to prevent accidental damage.

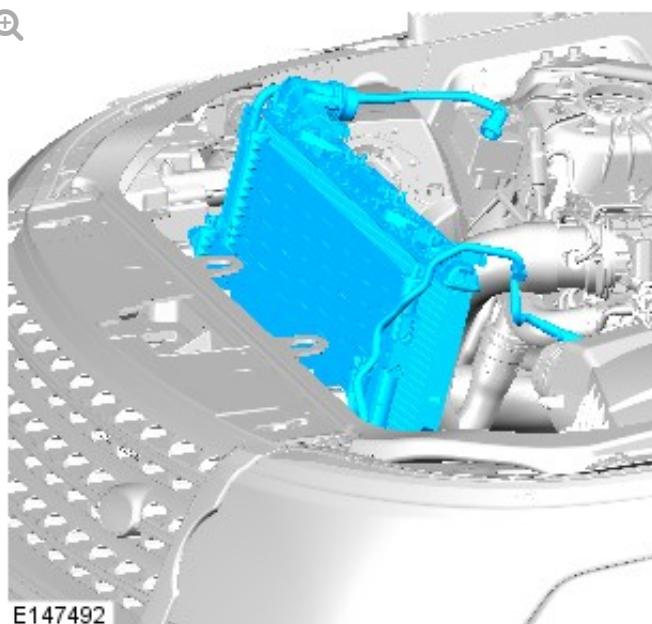


E147492

13.

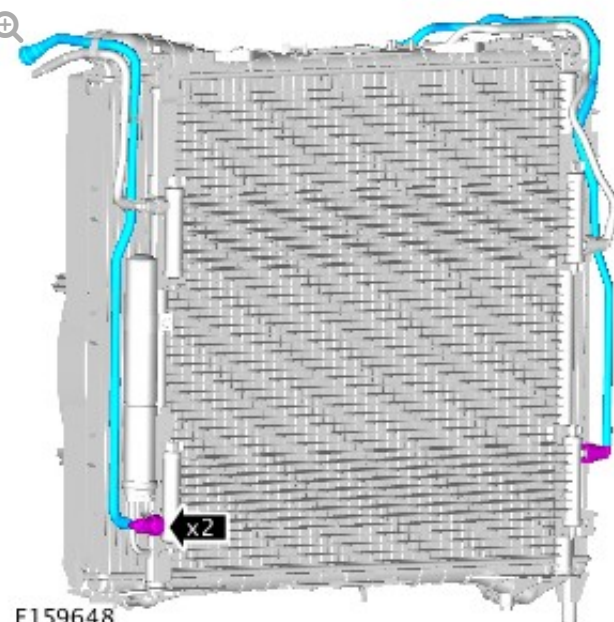

E159648

14.

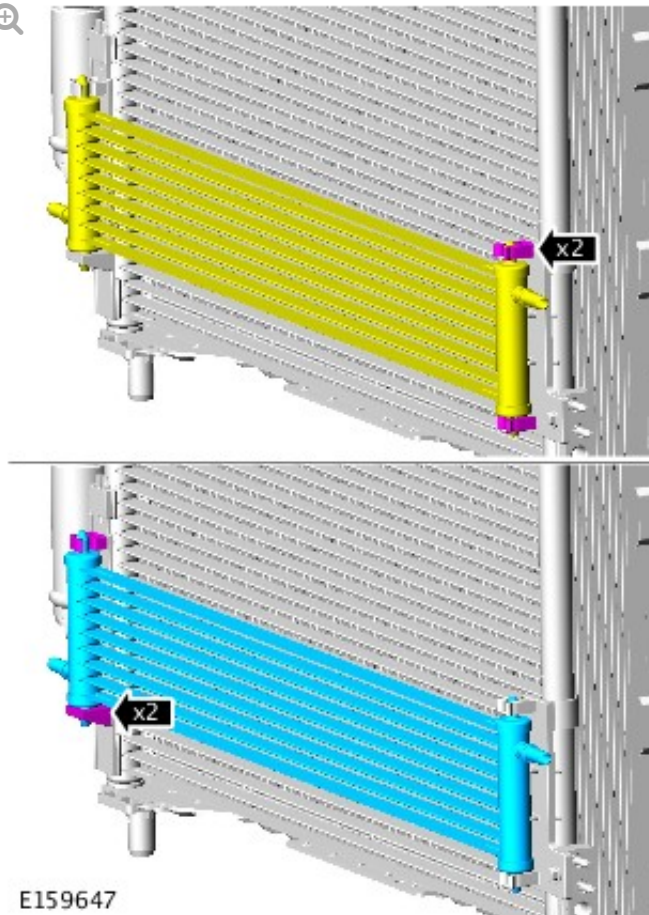

INSTALLATION

1. To install, reverse the removal procedure.