

2016.0 RANGE ROVER (LG), 414-01

BATTERY, MOUNTING AND CABLES

HYBRID ELECTRIC VEHICLE BATTERY COOLER AND ISOLATION VALVE [G1669414]

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.



All vehicles

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2. Refer to: [Air Conditioning System Recovery, Evacuation and Charging](#) (412-00 Climate Control System - General Information,

General Procedures).


3. Remove the rear right fender splash shield.

Refer to: [Rear Wheel Arch Liner](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).

- 4.

CAUTION:

Make sure that the area around the component is clean and free of foreign material.

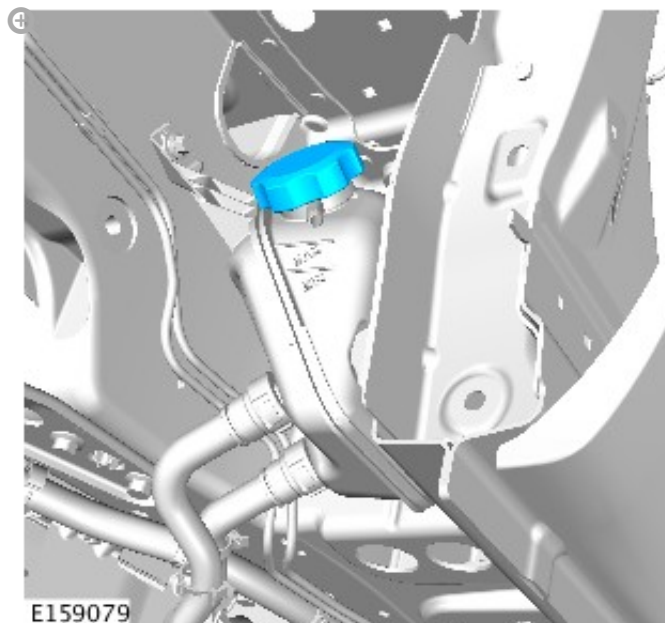

- 5.

NOTE:

RH side only.


Refer to: [Rear Rocker Panel Moulding - Standard Wheel Base](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).

Refer to: [Rear Rocker Panel Moulding - Long Wheel Base](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).

6.

NOTE:


RH side only.

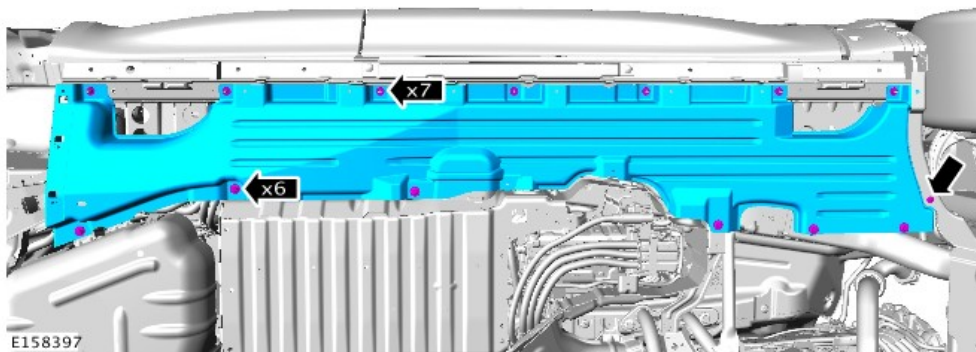


7.

CAUTIONS:


- Remove and discard the O-ring seals.
- Be prepared to collect escaping oil.

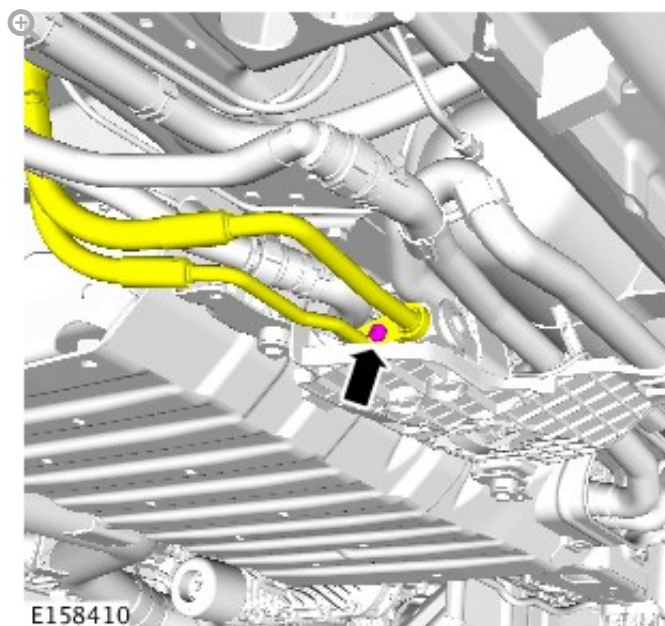


8.

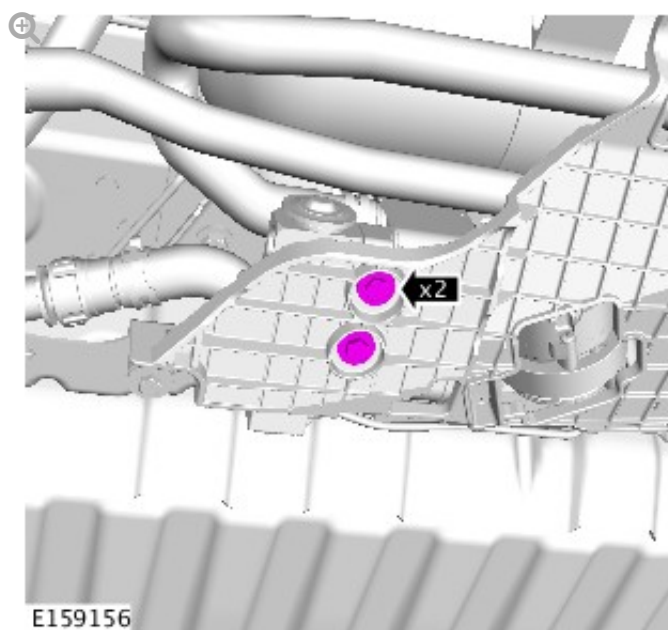

9.

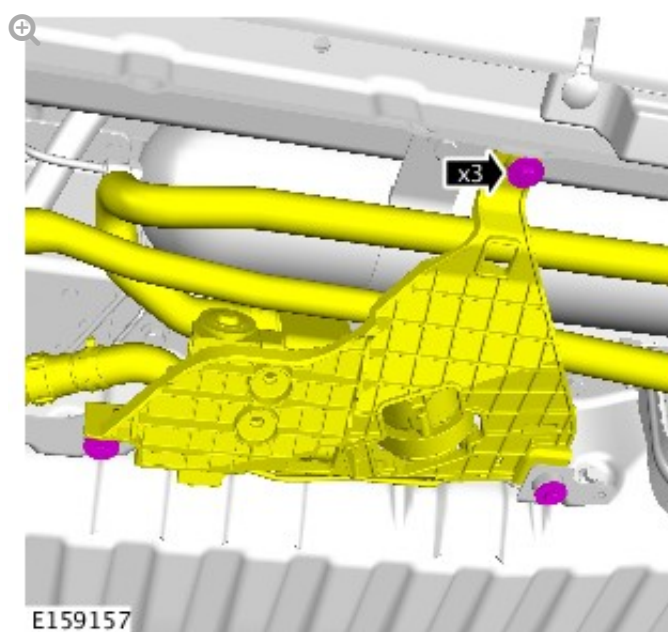

10.

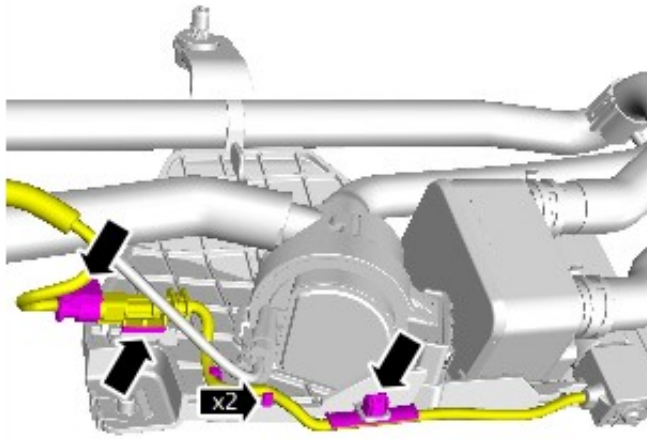


E159158

11.

CAUTION:

Be prepared to collect escaping coolant.

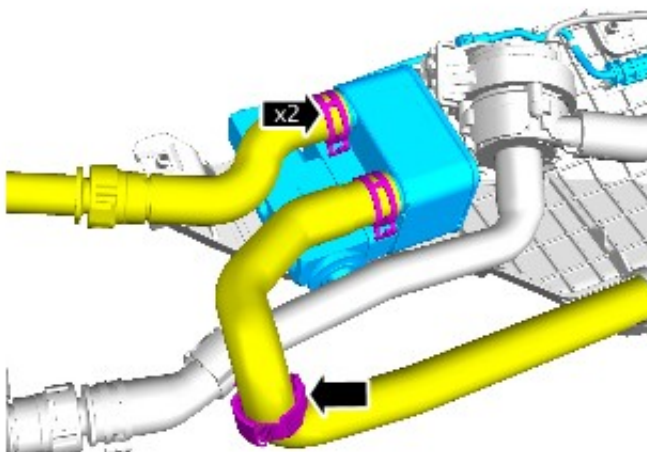

E159159




Short wheelbase

12.

NOTE:

RH side only.

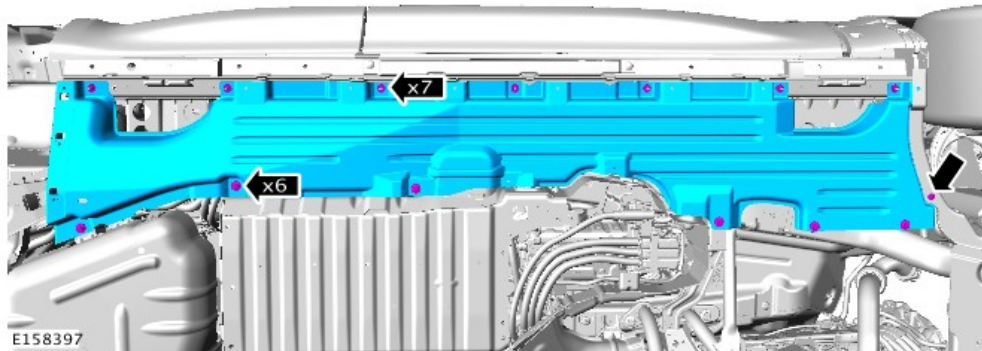


Long wheelbase

13.

NOTE:

RH side only.

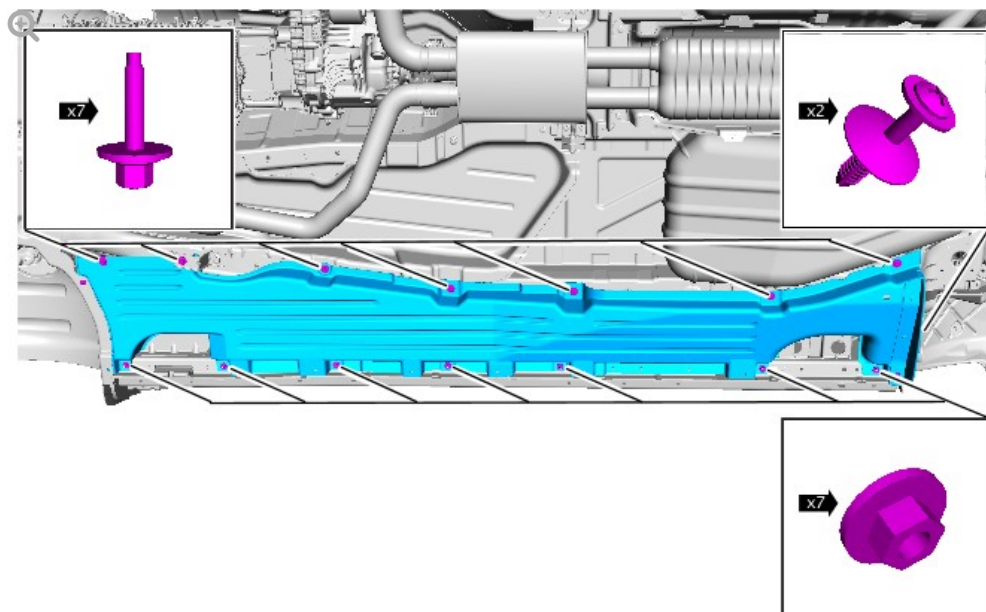

E160300




All vehicles


14.

CAUTIONS:


- Remove and discard the O-ring seals.
- Be prepared to collect escaping oil.

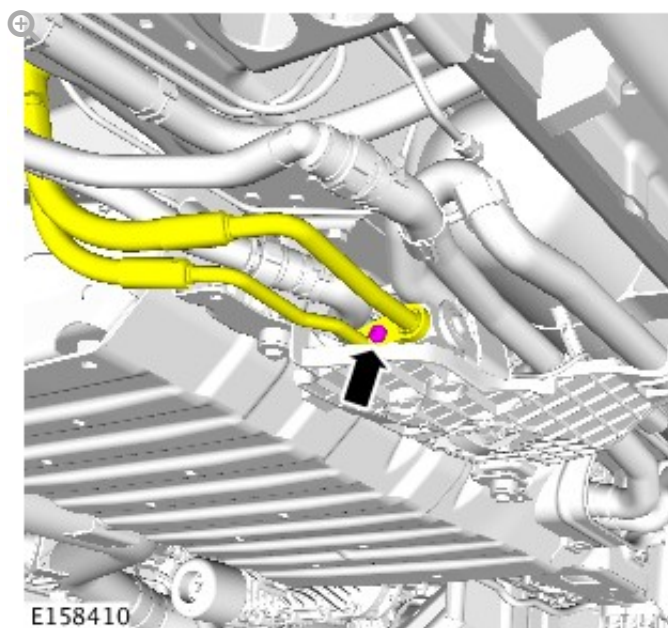


15.

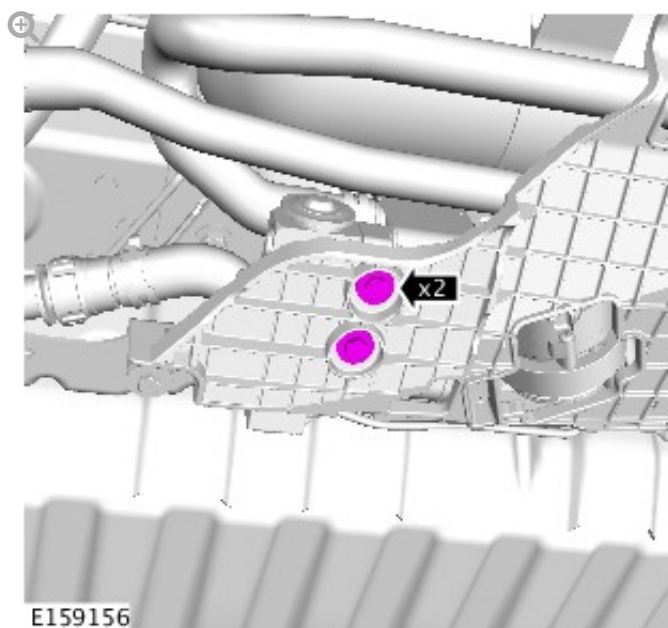

16.

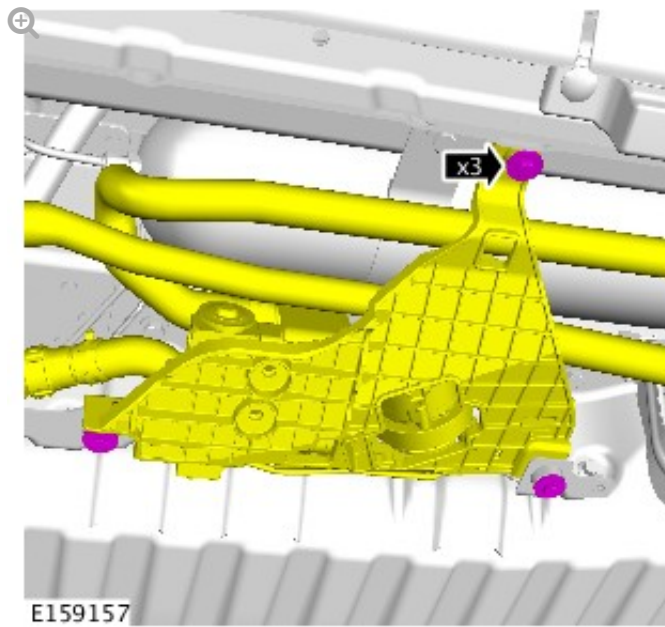


17.

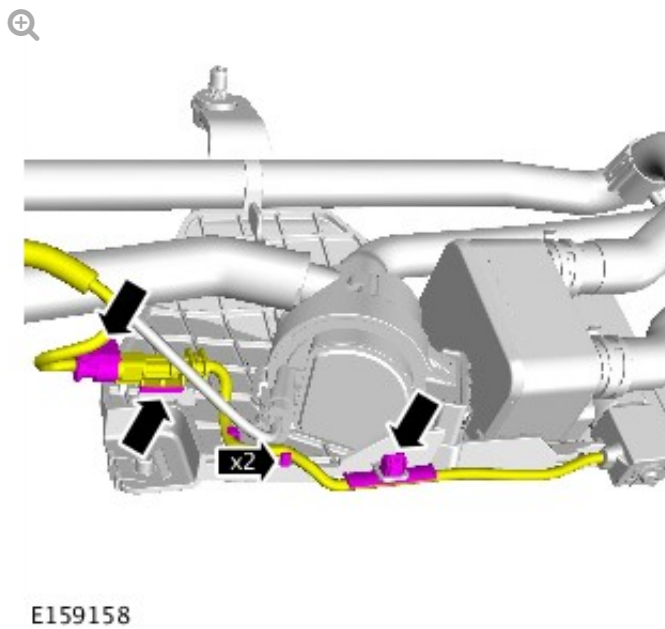

18.

CAUTION:

Be prepared to collect escaping coolant.

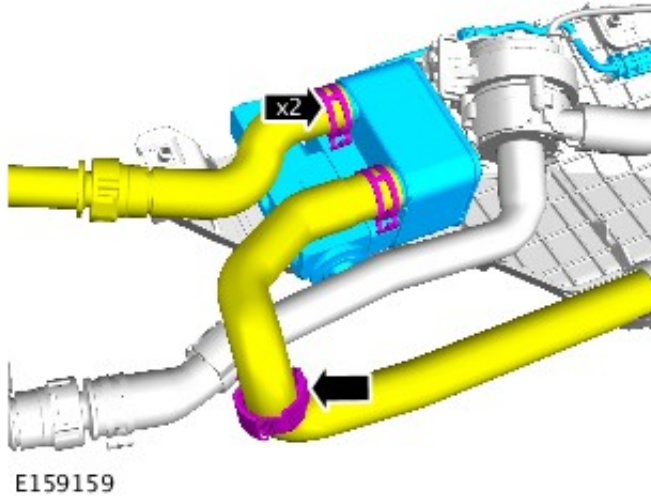


E159159

INSTALLATION




All vehicles

1.

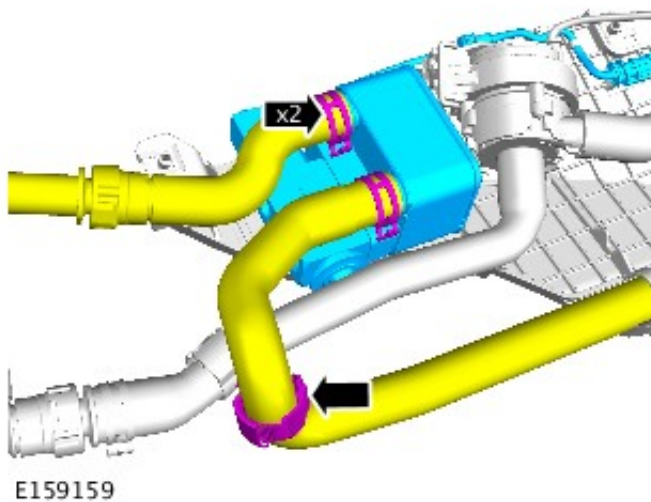

E159159

2.

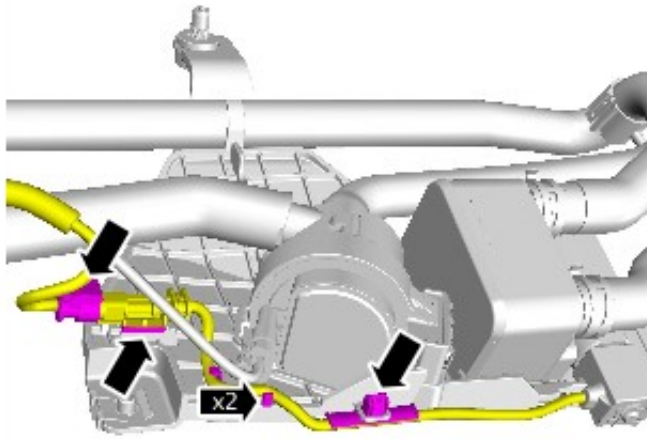

E159158

3.

CAUTION:

The coolant pump assembly requires lowering and supported by the coolant hoses during this procedure.

Add coolant to the battery coolant expansion tank as required, until the upper level mark is achieved.

4.

CAUTIONS:


- The coolant pump assembly requires lowering and supported by the coolant hoses during this procedure.
- If the coolant pump fails to run, the coolant pump has entered its run-dry mode. In this case the coolant pump assembly will require lowering further. This will make sure that the coolant pump is primed correctly and any air in the system is dispersed.

Using Land Rover approved diagnostic equipment, run the battery


coolant pump until the coolant level drops and coolant can be seen circulating around the system through the expansion tank.

5. Fill the coolant level in the battery coolant expansion tank, to the maximum cold fill line.

6.

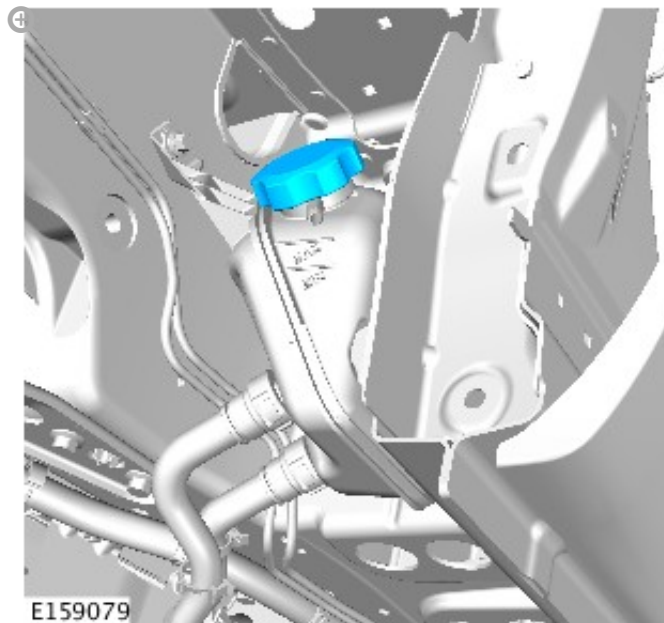


7.

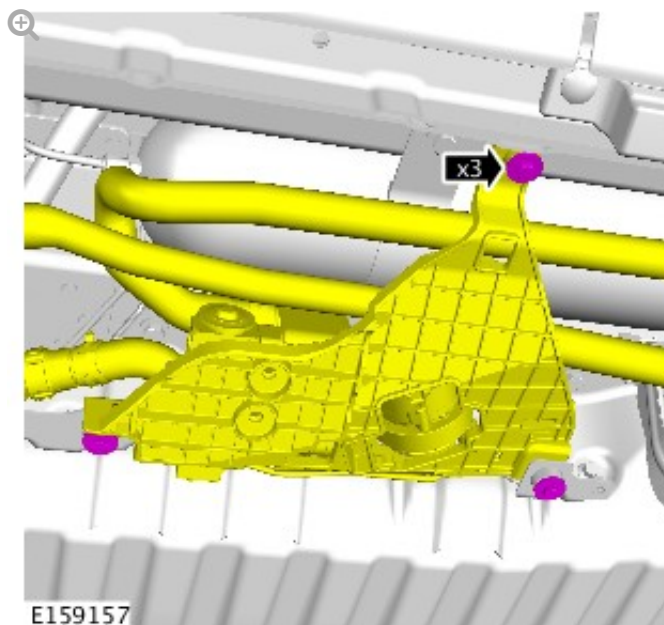

Torque: 10 Nm

8.

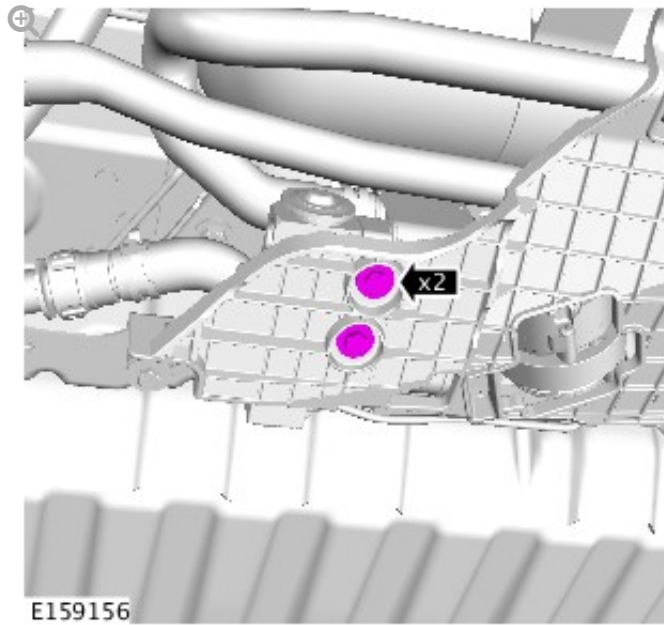


Torque: 9 Nm

9.

NOTE:

Install new O-ring seals.

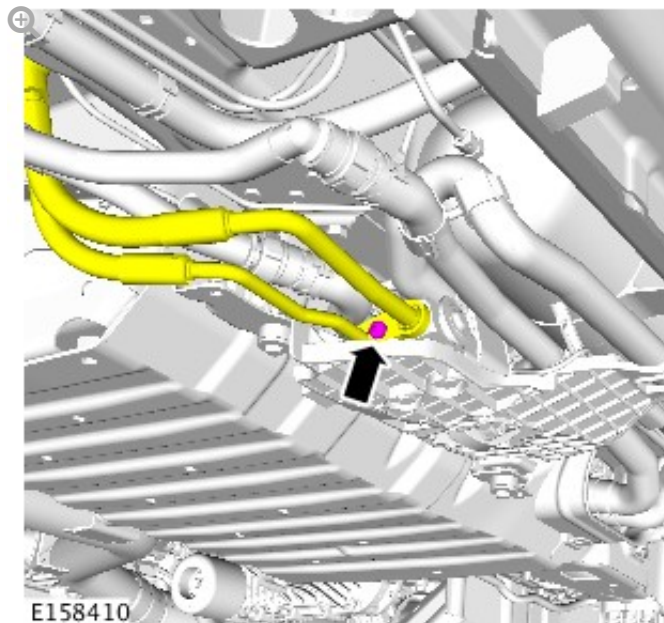

Torque: 9 Nm




Short wheelbase

10.

NOTE:

RH side only.

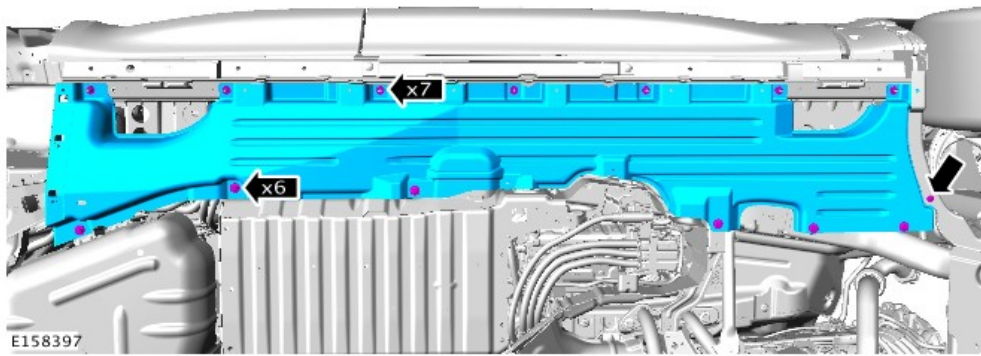


Long wheelbase

11.

NOTE:

RH side only.

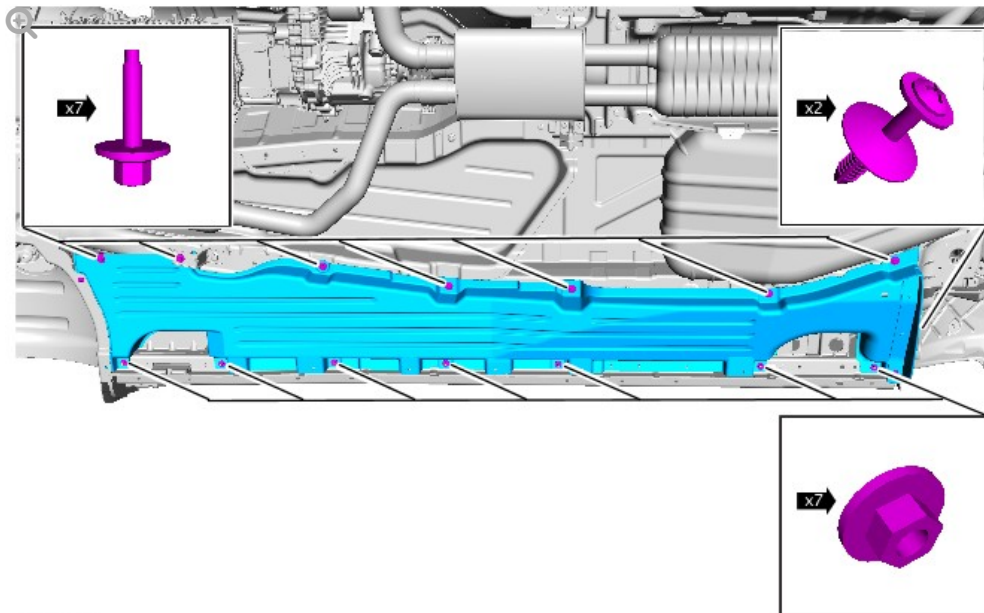

E160300



All vehicles

12. Refer to: [Rear Rocker Panel Moulding - Standard Wheel Base](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
Refer to: [Rear Rocker Panel Moulding - Long Wheel Base](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
13. Install the rear right fender splash shield.
Refer to: [Rear Wheel Arch Liner](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
14. Refer to: [Air Conditioning System Recovery, Evacuation and Charging](#) (412-00 Climate Control System - General Information, General Procedures).