

2016.0 RANGE ROVER (LG), 412-02

AUXILIARY CLIMATE CONTROL

AUXILIARY HEATER CORE AND EVAPORATOR CORE HOUSING [G 1 5 4 9 9 9 4]

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2. Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, General Procedures).
Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, General Procedures).
Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-

03F Engine Cooling - TDV8 4.4L Diesel, General Procedures).

Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-

03F Engine Cooling - TDV8 4.4L Diesel, General Procedures).

Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-

03F Engine Cooling - TDV8 4.4L Diesel, General Procedures).

3. Refer to: [Air Conditioning System Recovery, Evacuation and Charging](#) (412-00 Climate Control System - General Information, General Procedures).

4. Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

5. Refer to: [Rear Wheel Arch Liner](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).


6.

CAUTION:

Install new o-ring seals

NOTE:

Remove and discard the O-ring seals.

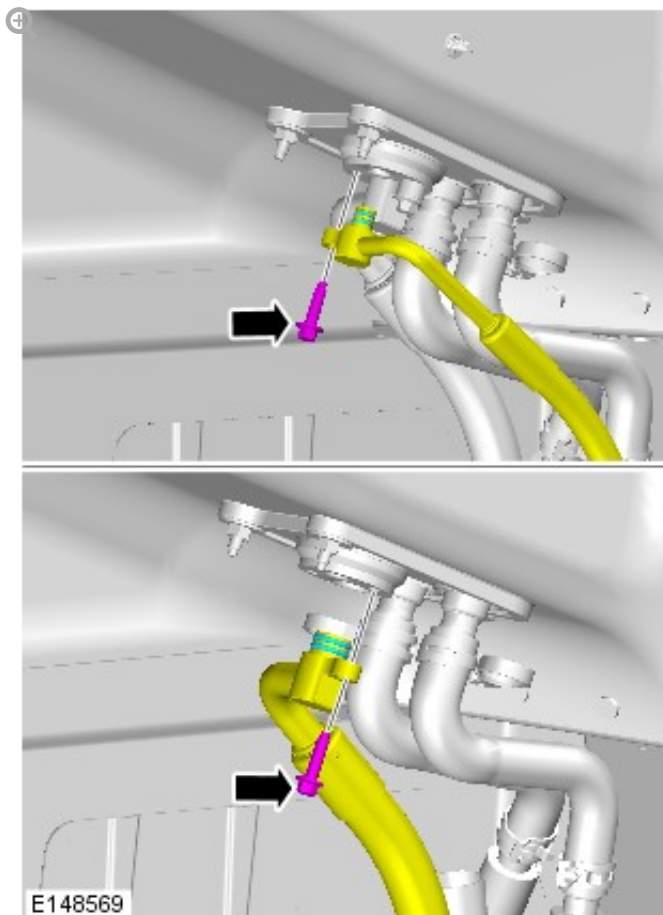


Torque: 10 Nm


7.

CAUTION:

Be prepared to collect escaping coolant.

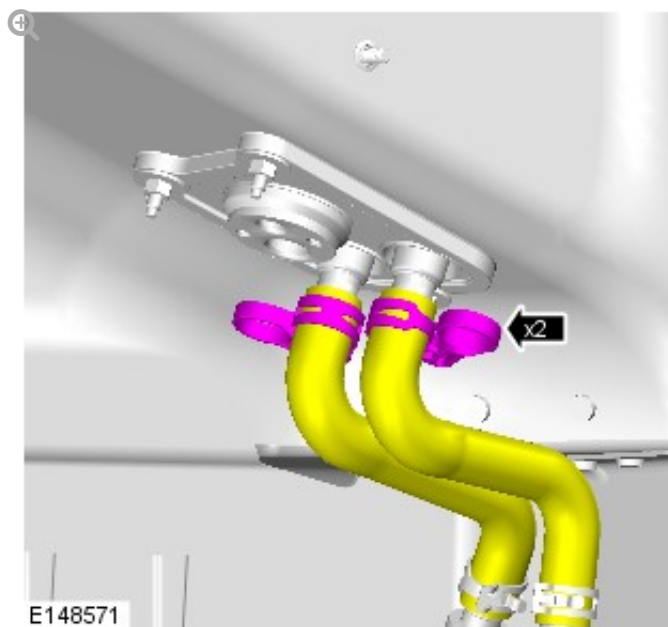


8.

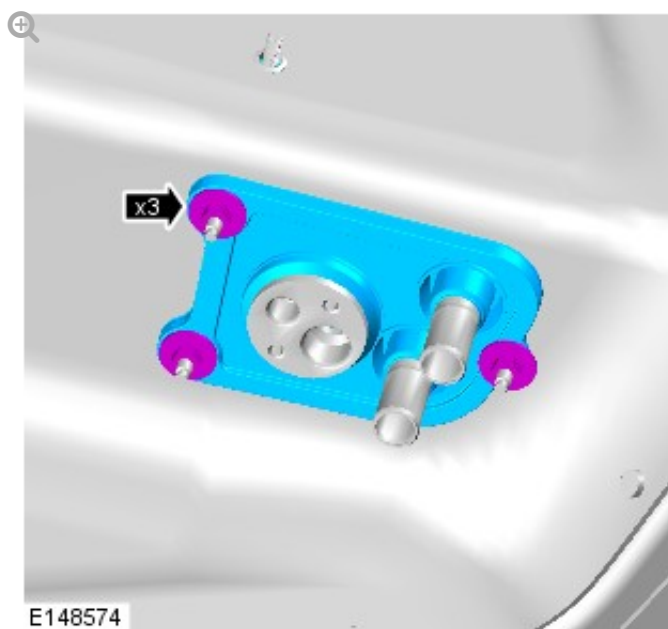


Torque: 10 Nm

9.

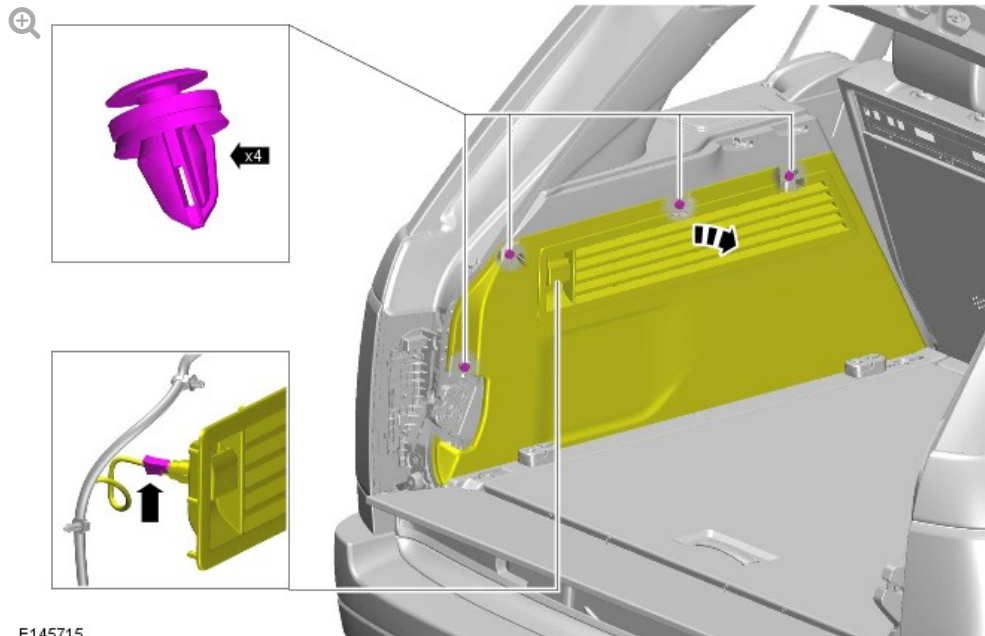

E145715

10.

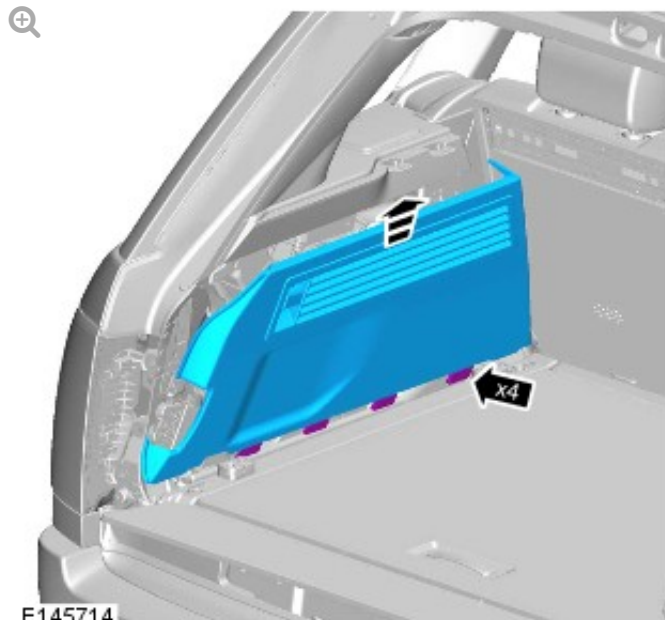


E145714


11.

NOTE:


LH shown.

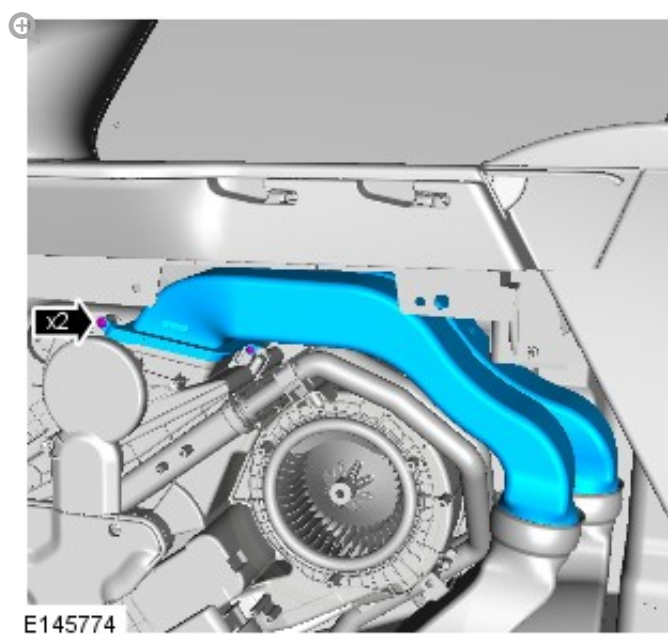


12.

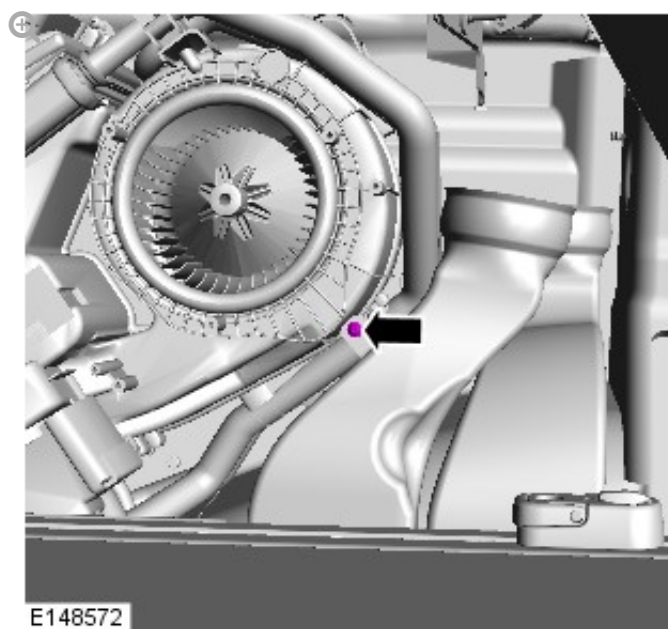

13.

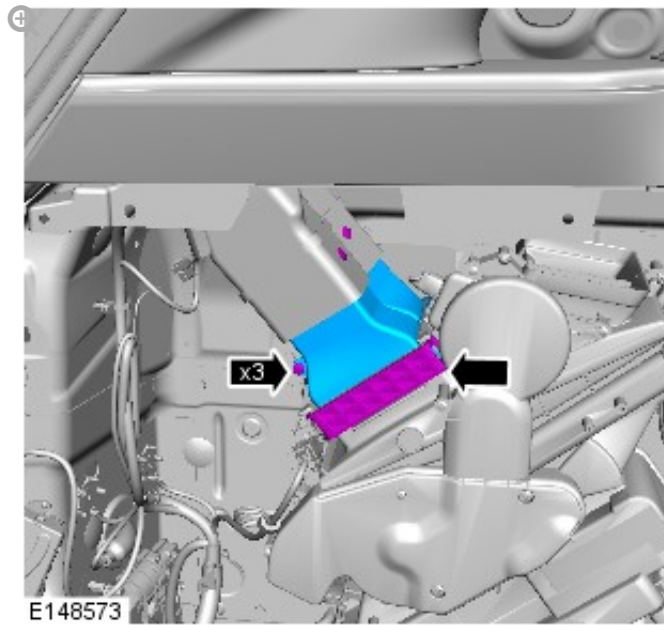


14.

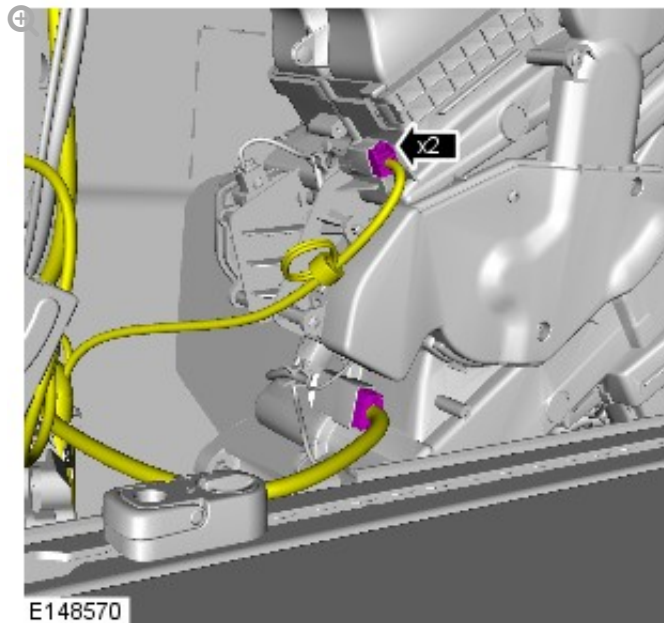

15.

CAUTION:

Tighten the bolts in the sequence shown.

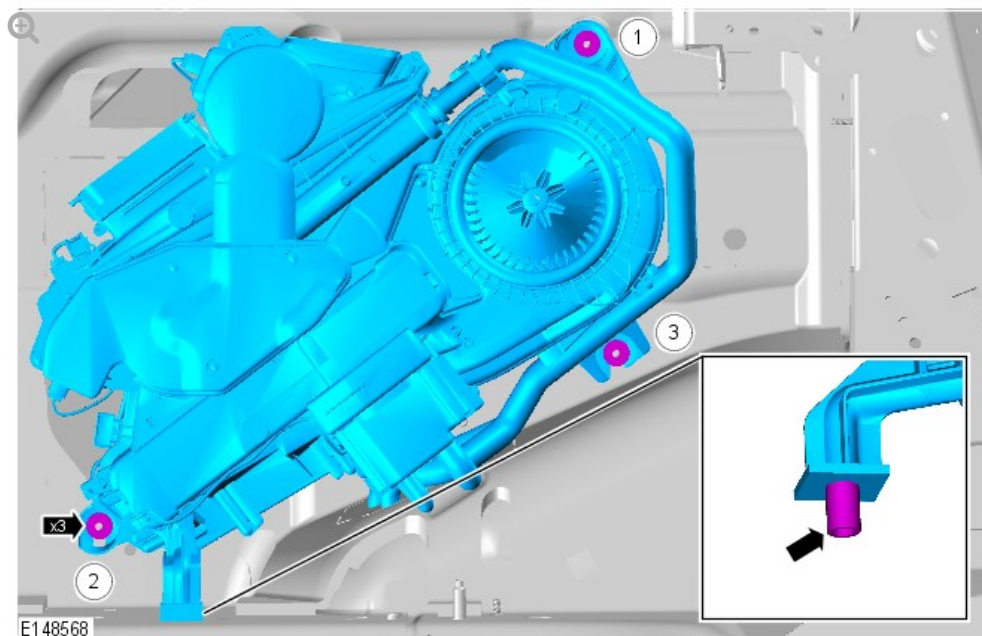

Torque: 5 Nm

INSTALLATION

1. To install, reverse the removal procedure.