

2016.0 RANGE ROVER (LG), 412-02

AUXILIARY CLIMATE CONTROL

AUXILIARY TEMPERATURE BLEND MOTOR LEFT (G1557424)

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1.

WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

2. Disconnect the battery ground cable.


Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

3. Refer to: [Auxiliary Heater Core and Evaporator Core Housing](#) (412-02A Auxiliary Climate Control, Removal and Installation).


4.

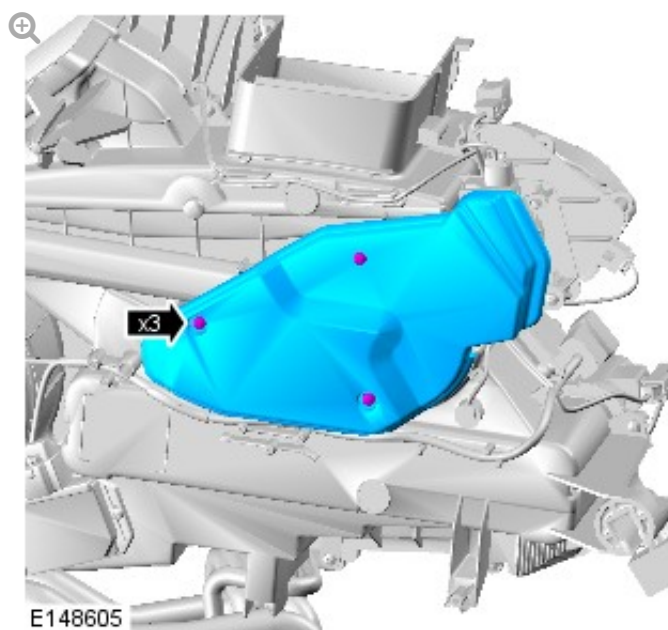

5.

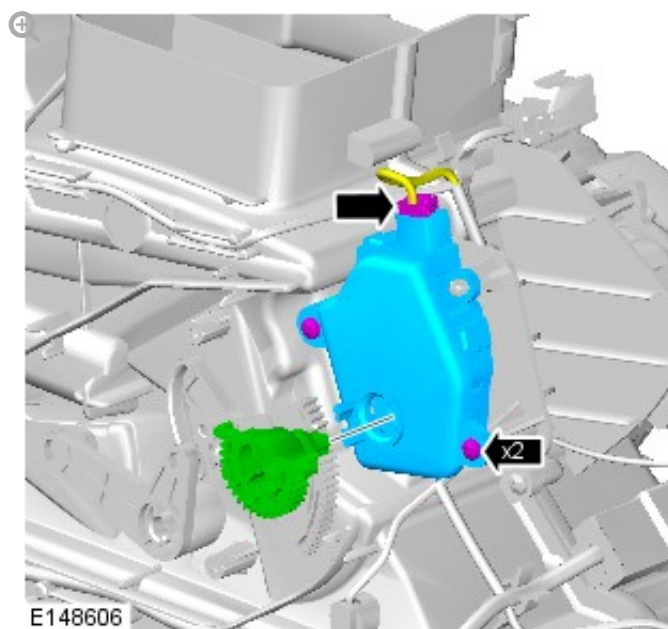

6.

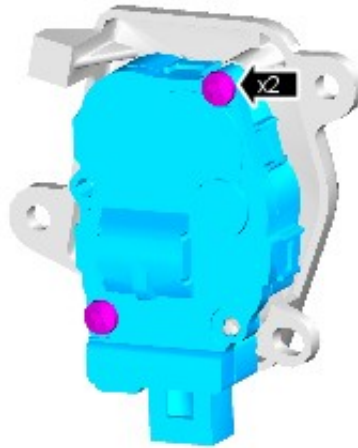

E148607

INSTALLATION

1. To install, reverse the removal procedure.