

2016.0 RANGE ROVER (LG), 412-02

AUXILIARY CLIMATE CONTROL

AUXILLIARY THERMOSTATIC EXPANSION VALVE (G1557399)

REMOVAL AND INSTALLATION

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME
Removal Step 5	Renew Part	Thermostatic expansion valve O-ring seals
Removal Step 6	Renew Part	Thermostatic expansion valve O-ring seals

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.


1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).
3. Refer to: [Auxiliary Heater Core and Evaporator Core Housing](#) (412-02A Auxiliary Climate Control, Removal and Installation).

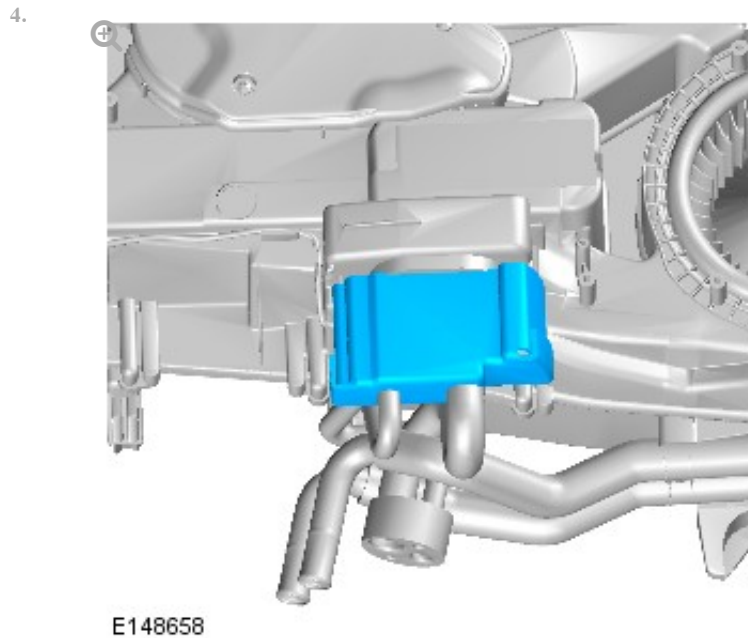


5. **CAUTION:**

Remove and discard the O-ring seals.

NOTE:

Install new O-ring seals.

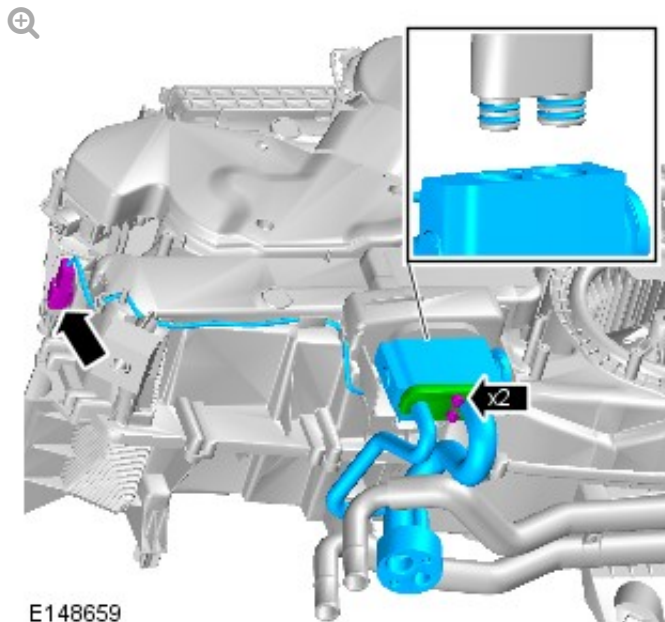

Renew Part: *Thermostatic expansion valve O-ring seals.*

Torque: 4 Nm

6.

CAUTION:

Remove and discard the O-ring seals.

NOTE:

Install new O-ring seals.



E148660

Renew Part: *Thermostatic expansion valve O-ring seals.*

INSTALLATION

1. To install, reverse the removal procedure.