

2016.0 RANGE ROVER (LG), 412-02

AUXILIARY CLIMATE CONTROL

FUEL FIRED BOOSTER HEATER FLAME SENSOR

[G1521577]

REMOVAL AND INSTALLATION

REMOVAL

NOTE:


Removal steps in this procedure may contain installation details.

1. Remove the fuel fired booster heater combustion chamber.
Refer to: [Fuel Fired Booster Heater Combustion Chamber](#) (412-02A
Auxiliary Climate Control, Removal and Installation).

2.



3.

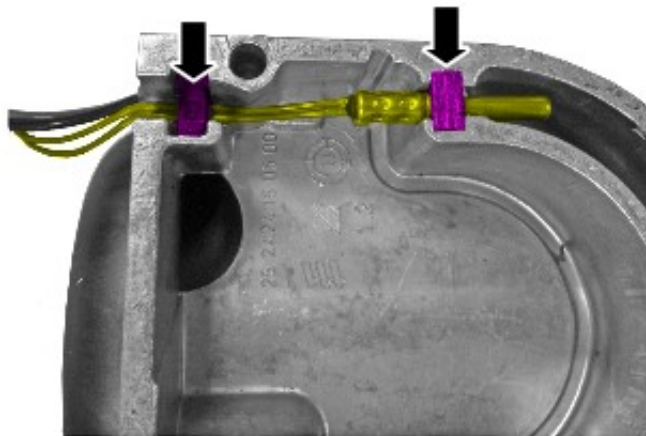


E155493

4.

NOTE:

Remove the terminals from the connector as indicated in order to replace the component.

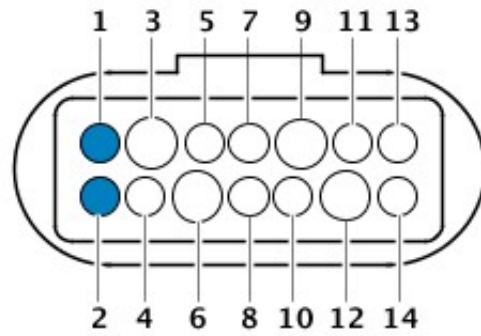

E155492

INSTALLATION

1. To install, reverse the removal procedure.