

2016.0 RANGE ROVER (LG), 412-02

AUXILIARY CLIMATE CONTROL

FUEL FIRED BOOSTER HEATER FUEL PUMP (G1521562)

REMOVAL AND INSTALLATION

REMOVAL

NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.




All vehicles

1. Refer to: [Diesel Fuel System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
Refer to: [Petrol and Petrol-Ethanol Fuel Systems Health and Safety Precautions](#) (100-00 General Information, Description and Operation).



Vehicles with business seats


2.

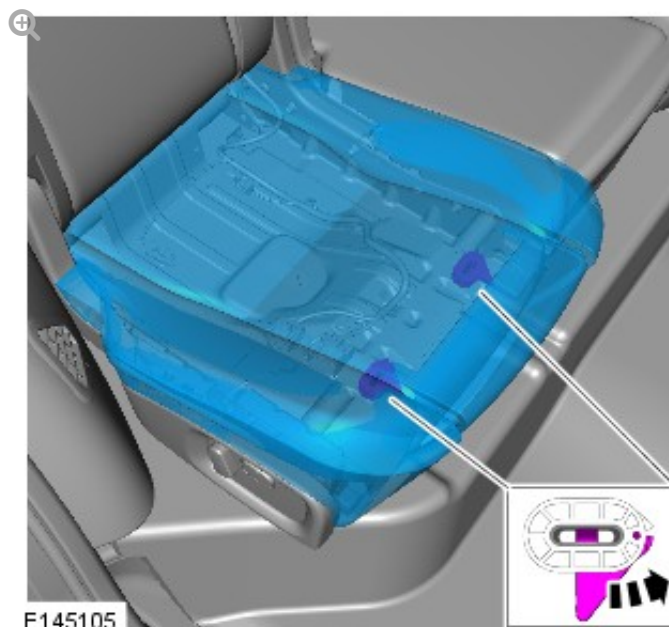

3.



4.

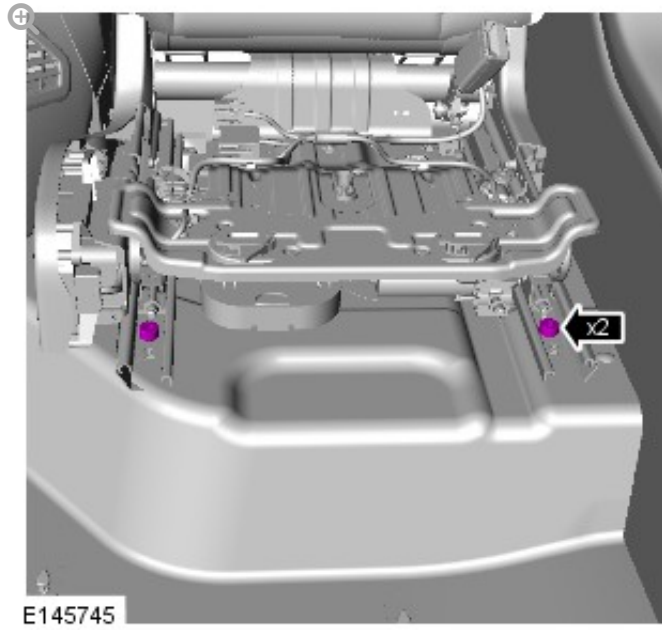

Torque: 50 Nm

5.



6.



E146116

Torque: 50 Nm




All vehicles

7. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).




Vehicles with business seats

8.

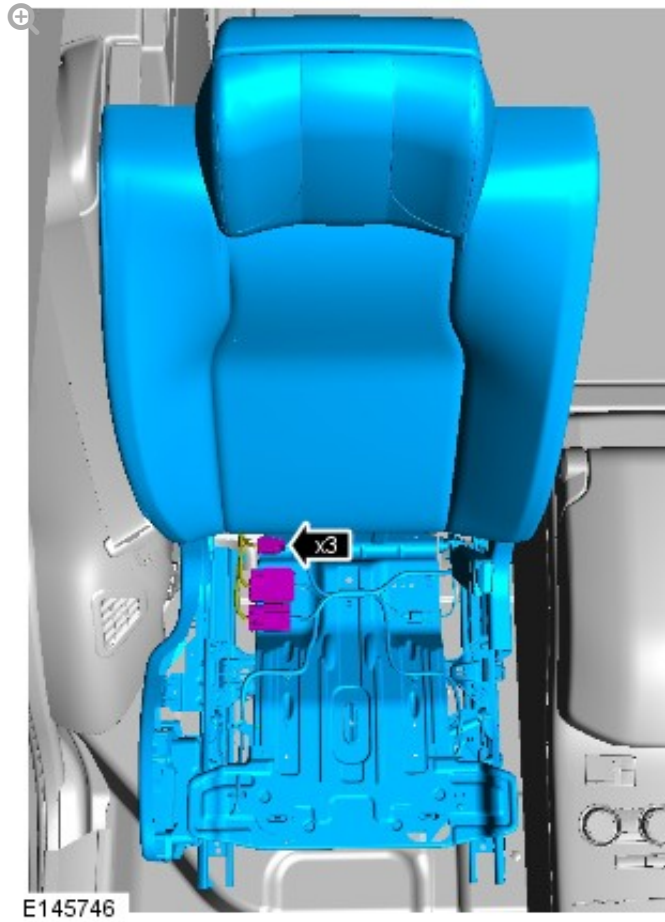


Vehicles without business seats

9.

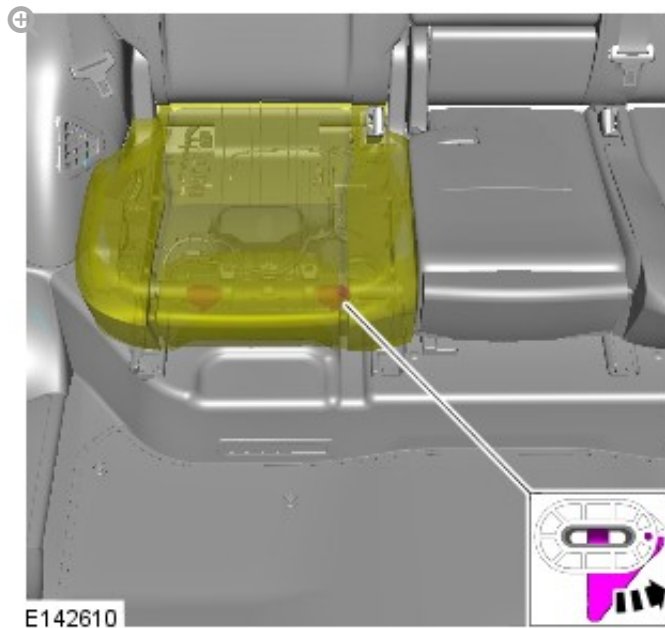


10.

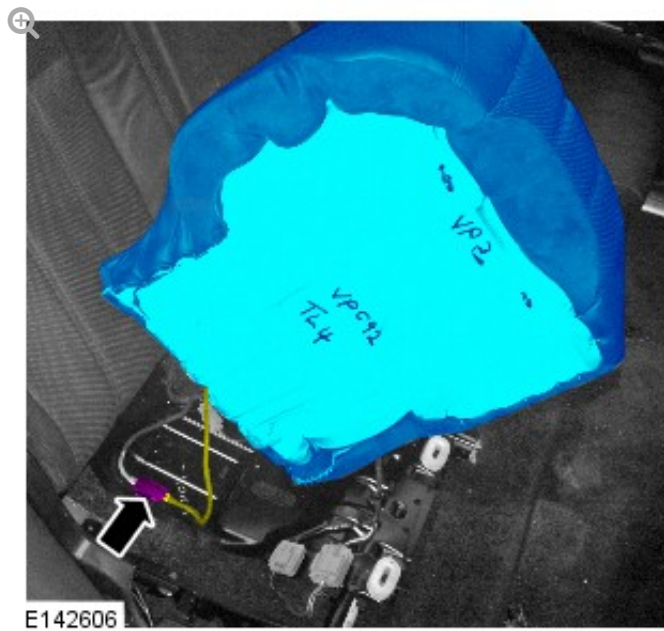


E142606

11.

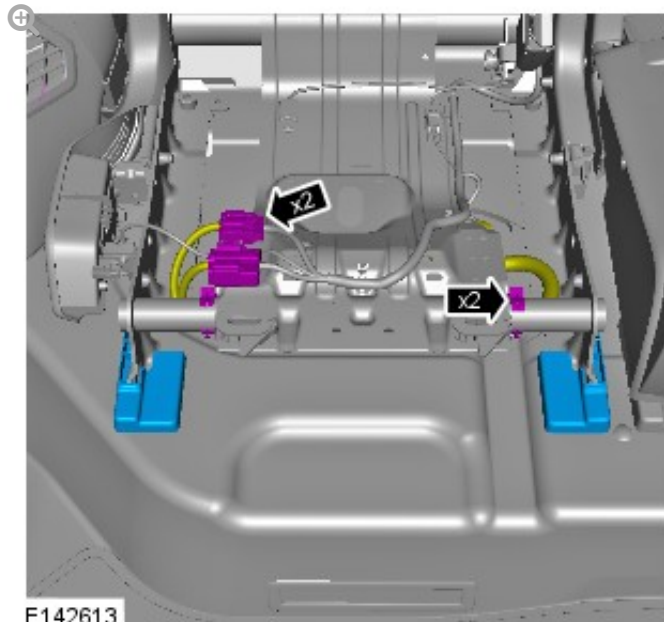

E142613

12.

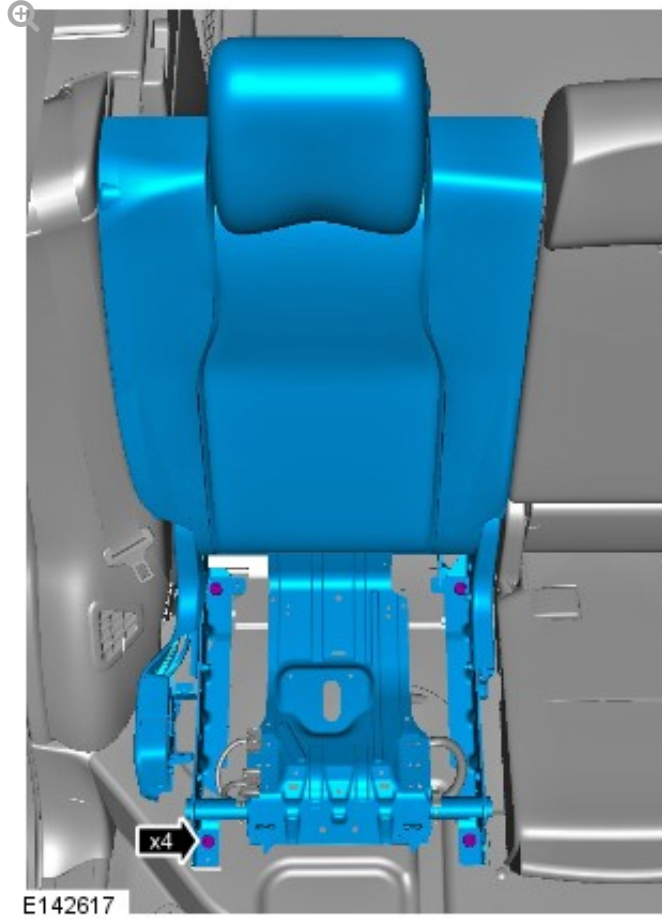


Torque: 50 Nm




All vehicles



13.

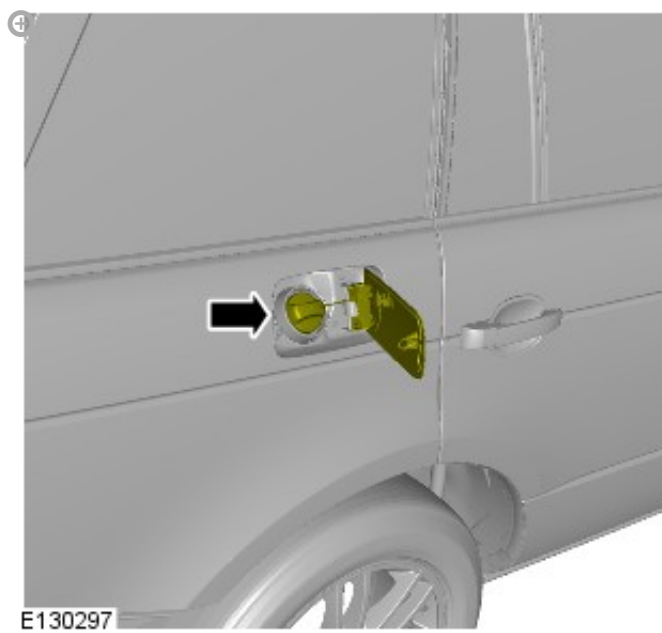

14.

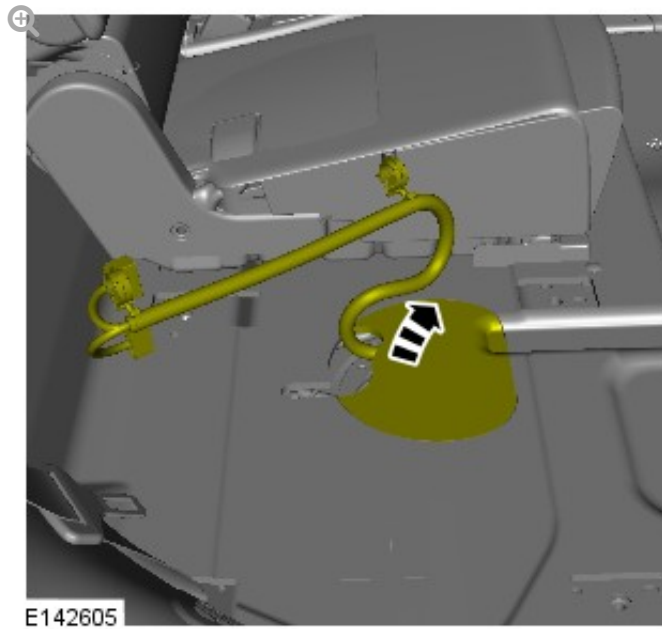

15.

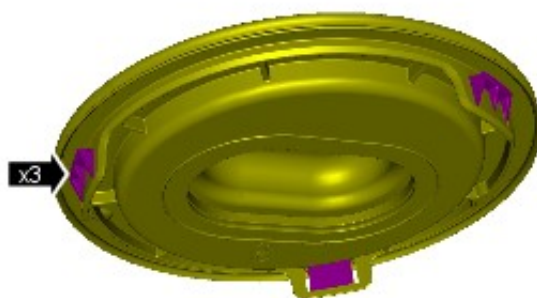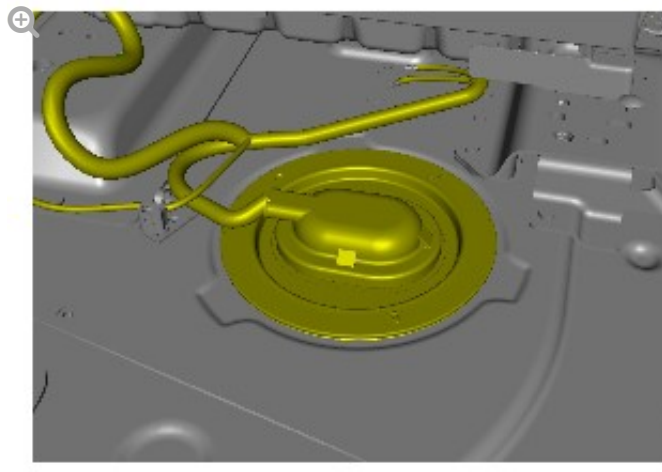


E142604


18.

CAUTION:

Be prepared to collect escaping fuel.

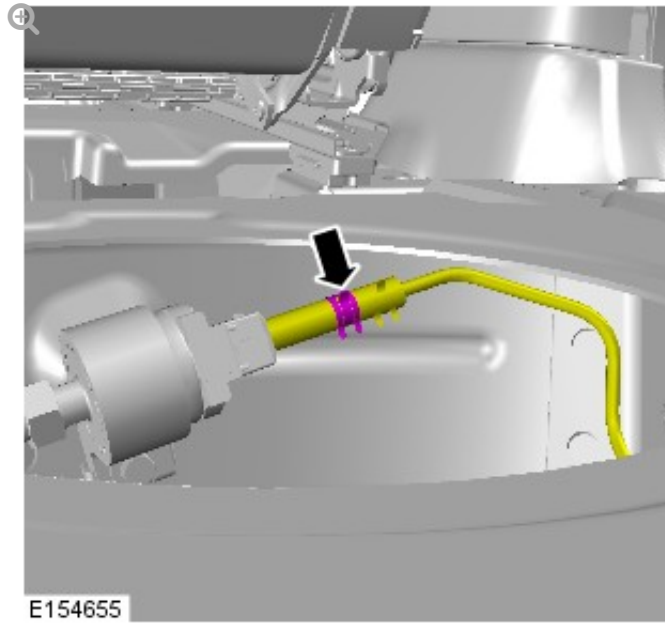

19.

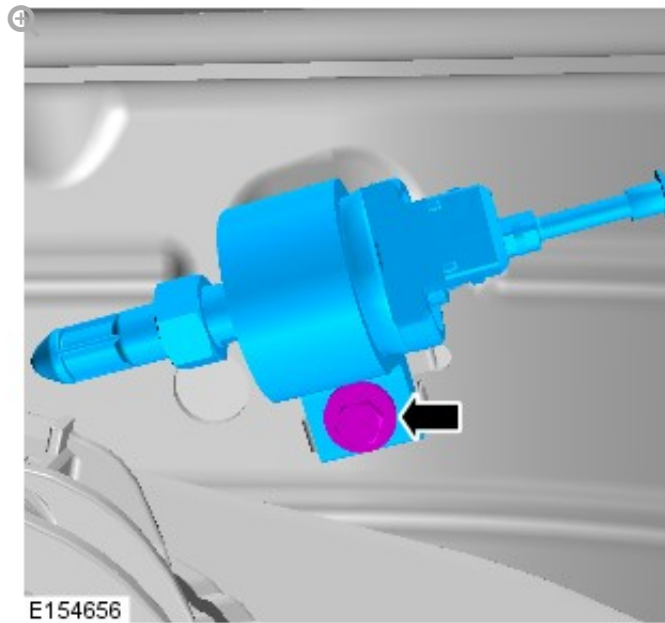

Torque: 9 Nm

INSTALLATION

1.

CAUTIONS:

- If a new fuel pump is to be installed, make sure that the blanking caps are not removed prior to installation.
- Make sure that the fuel line does not contact the body.

To install, reverse the removal procedure.