

2016.0 RANGE ROVER (LG), 412-02

AUXILIARY CLIMATE CONTROL

FUEL FIRED BOOSTER HEATER GLOW PLUG (G1521571)

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.


1. Remove the fuel fired booster heater heat exchanger.
Refer to: [Fuel Fired Booster Heater Heat Exchanger](#) (412-02A Auxiliary Climate Control, Removal and Installation).

2.



E155489

3.

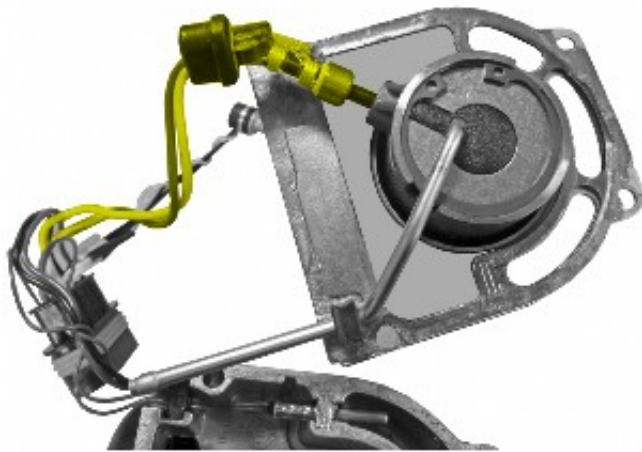


E155482

4.

NOTE:

Remove the terminals from the connector as indicated in order to replace the component.

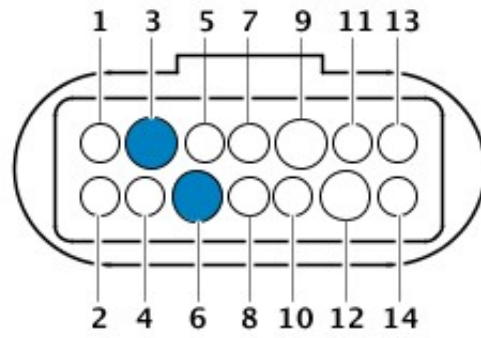

E155488

INSTALLATION

1. To install, reverse the removal procedure.