

2016.0 RANGE ROVER (LG), 412-02

AUXILIARY CLIMATE CONTROL

FUEL FIRED BOOSTER HEATER HEAT EXCHANGER

[G1604772]

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.


1. Remove the fuel fired booster heater control module.
Refer to: [Fuel Fired Booster Heater Control Module](#) (412-02A
Auxiliary Climate Control, Removal and Installation).

2.




E155487

3.

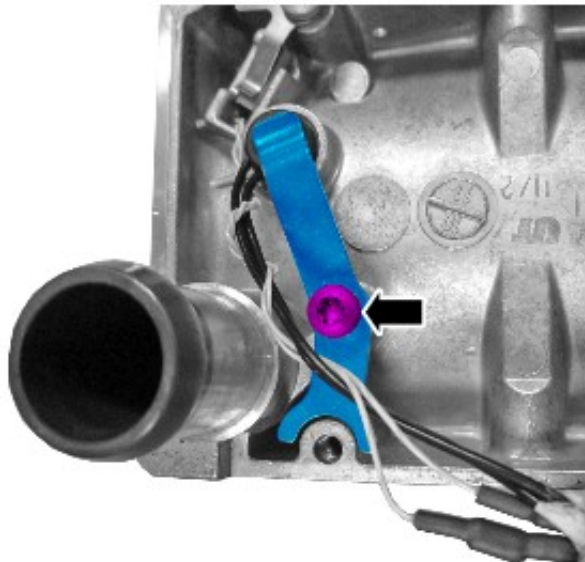

E155485

4.

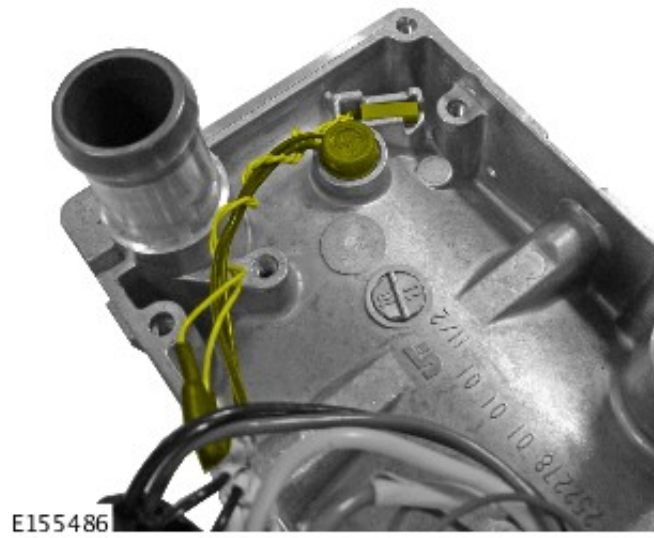

E155486

5.



E155479

6.



1422



E155483

INSTALLATION

1. To install, reverse the removal procedure.