

2016.0 RANGE ROVER (LG), 412-01

CLIMATE CONTROL

# AIR CONDITIONING

## COMPRESSOR – TDV6 3.0L

### DIESEL (G1509823)

#### REMOVAL AND INSTALLATION

---

PART(S)

| STEP           | REPLACE PART / RENEW PART | PART NAME                              |
|----------------|---------------------------|----------------------------------------|
| Removal Step 5 | Renew Part                | Steering column lower shaft lower bolt |

---

#### REMOVAL

**CAUTION:**

Make sure that all openings are sealed. Use new blanking caps.

**NOTES:**

- Component shown removed for clarity.
- Removal steps in this procedure may contain installation details.

1. Refer to: [Air Conditioning System Recovery, Evacuation and Charging](#) (412-00 Climate Control System - General Information, General Procedures).
2. Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, General Procedures).
3. Refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).
4. Refer to: [Accessory Drive Belt](#) (303-05E Accessory Drive - SDV6 3.0L Diesel - Hybrid Electric Vehicle, Removal and Installation).


5.

**CAUTIONS:**

- Discard the bolt.
- Make sure that a new bolt is installed.

**NOTE:**

Left hand drive only.

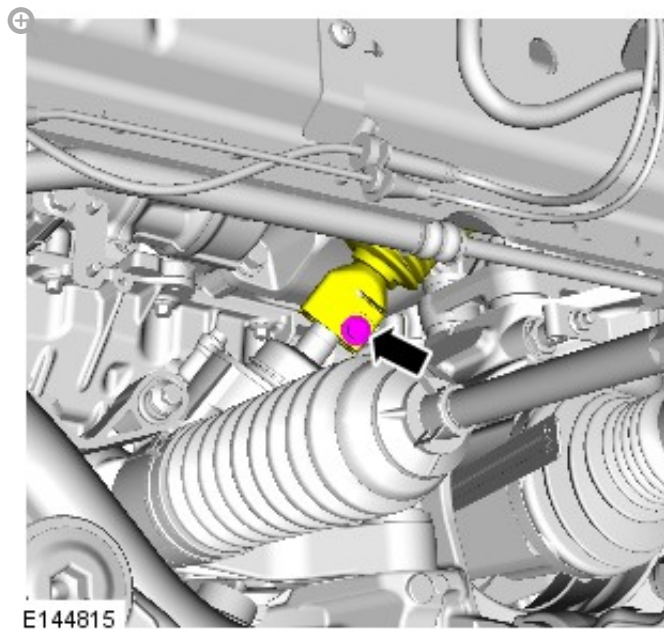

Align the steering wheel to straight ahead.


Renew Part: *Steering column lower shaft lower bolt.*

Torque: 30 Nm

6.

#### NOTE:


Make sure the retaining clips are correctly installed and tightened.

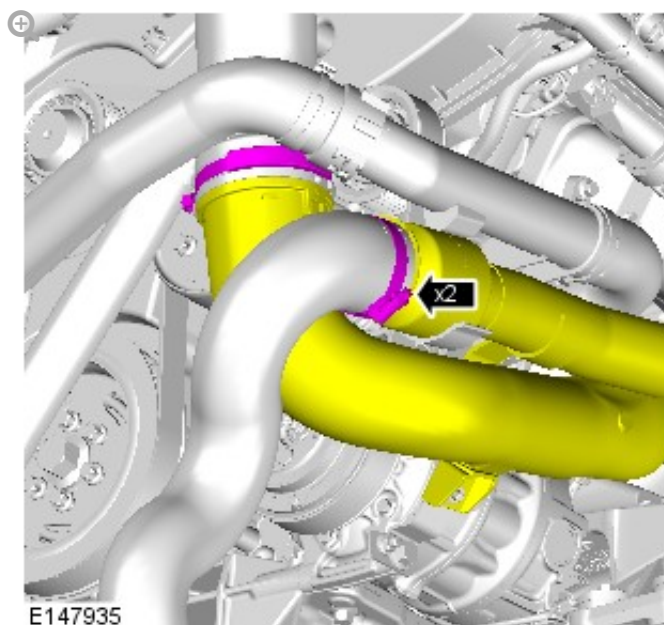


7.

**NOTE:**

Make sure the retaining clips are correctly installed and tightened.

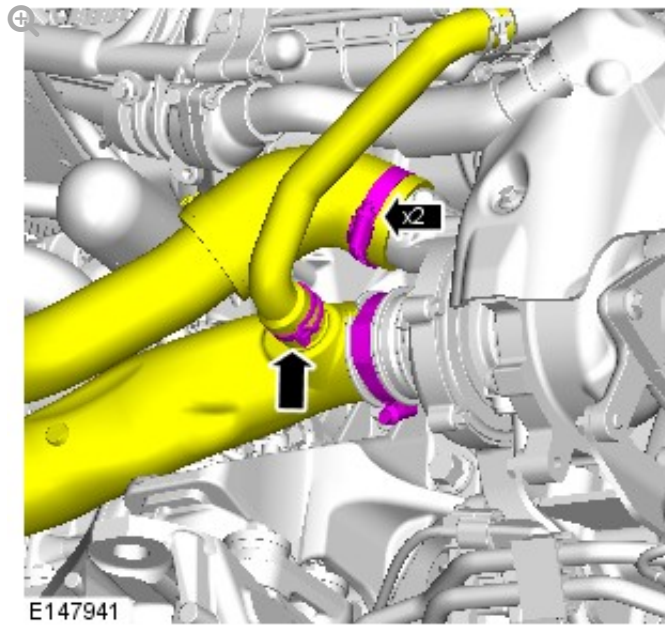


8.

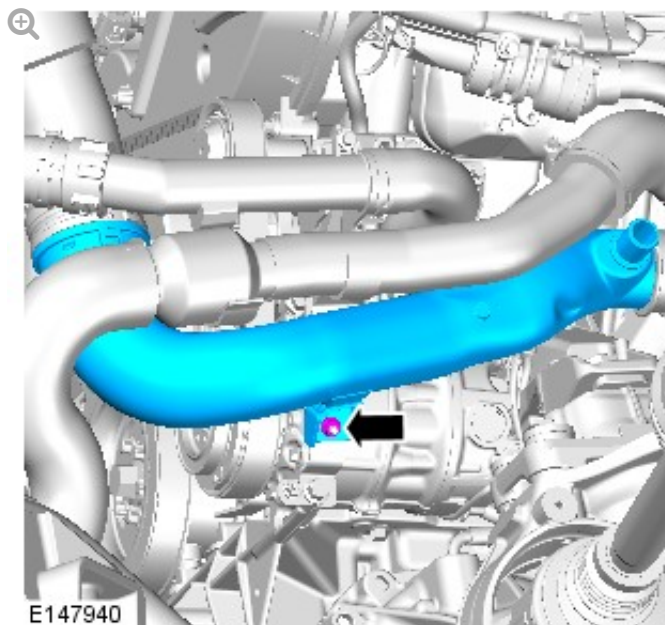

*Torque: 6 Nm*

9.

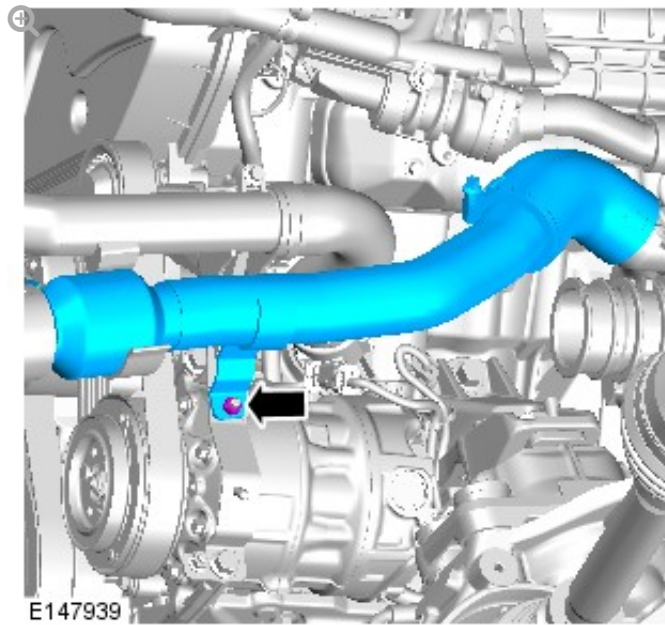


*Torque: 6 Nm*

10.

**CAUTION:**

Be prepared to collect escaping coolant.

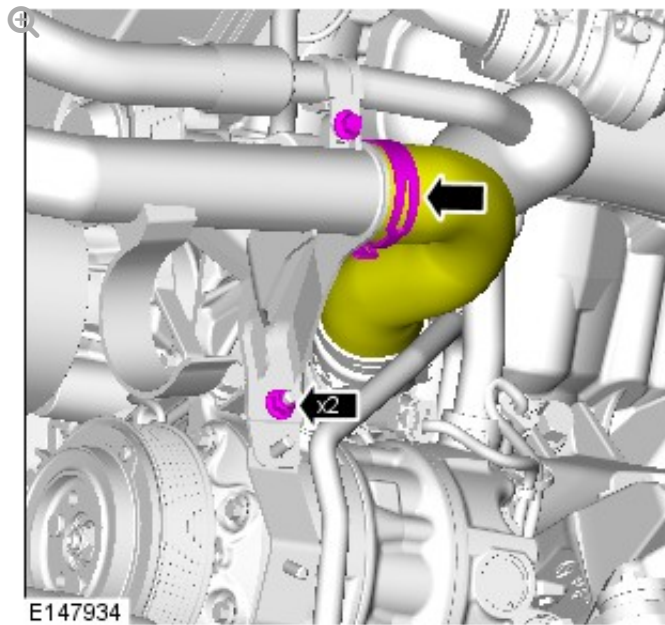


*Torque: 6 Nm*


11.

**CAUTION:**

Be prepared to collect escaping coolant.

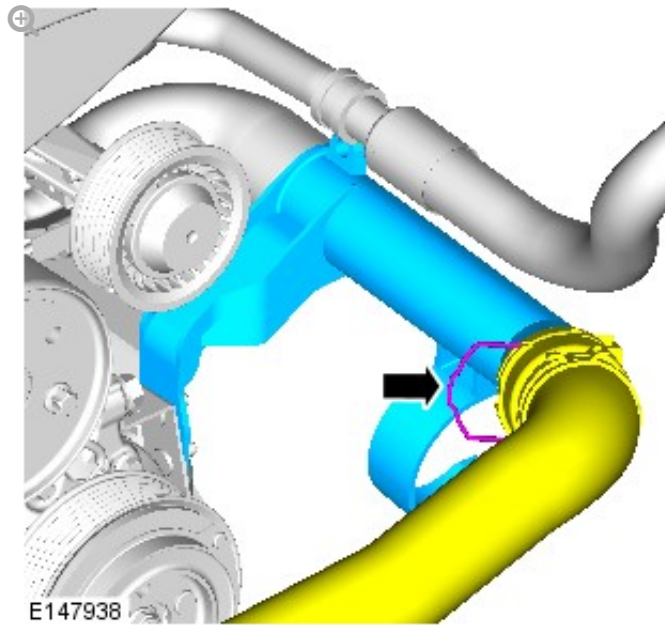


12.

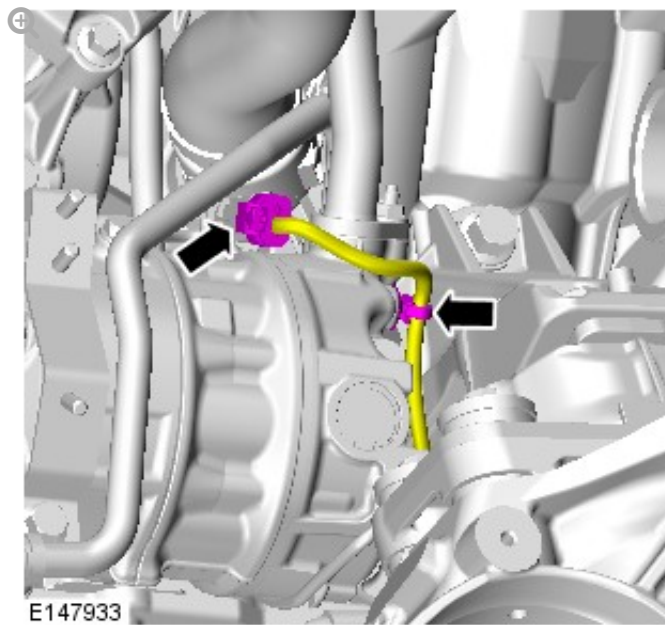



13.

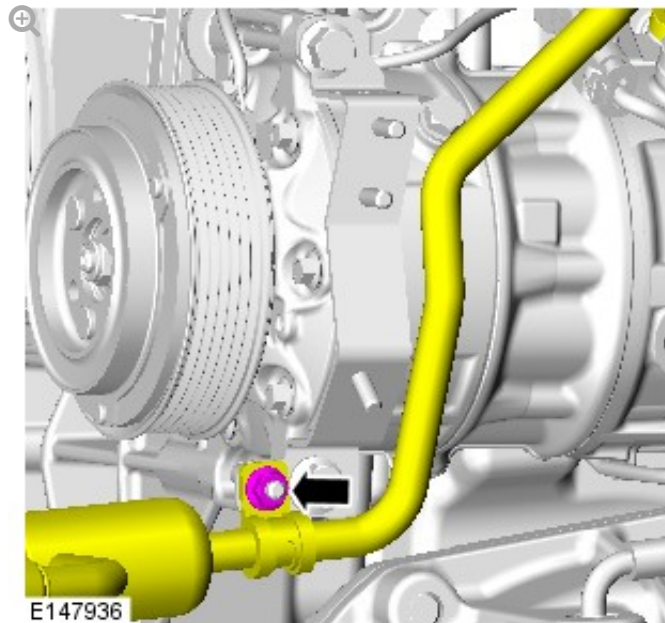


*Torque: 6 Nm*

14.


**CAUTION:**

A new O-ring seal is to be installed.

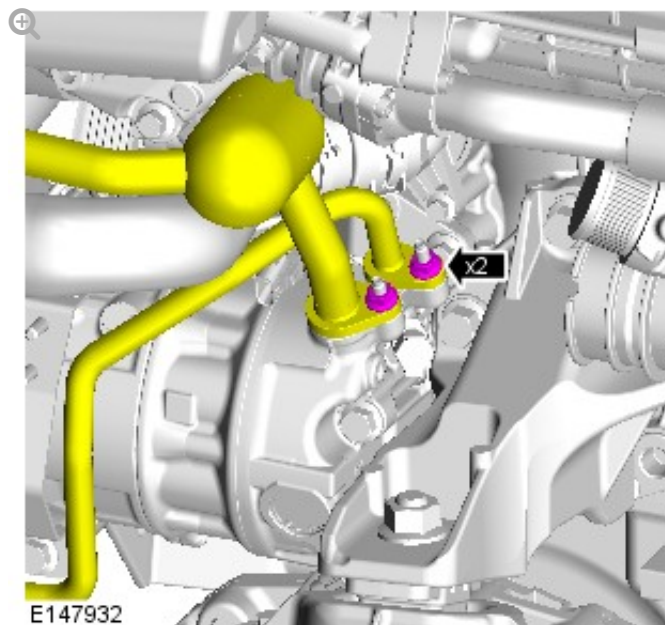

*Torque: 18 Nm*

15.

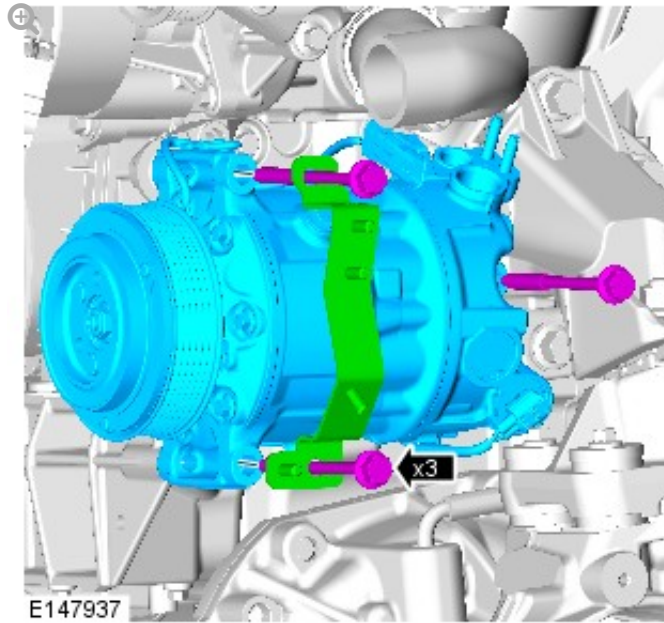

*Torque: 25 Nm*

---

## INSTALLATION

1. To install, reverse the removal procedure.