

PUBLISHED: 07-JUN-2017
2015.0 RANGE ROVER (LG), 412-01

CLIMATE CONTROL

AIR CONDITIONING COMPRESSOR - TDV8 4.4L DIESEL (G1509824)

REMOVAL AND INSTALLATION

82.10.20

COMPRESSOR
- RENEW

4400 CC,
TDV8

3.3

USED
WITHINS

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Installation Step 3	Renew Part	Air conditioning pipe to compressor O-ring seals	1
Installation Step 9	Renew Part	Steering column lower shaft lower bolt	1

REMOVAL



CAUTION:

Before disconnecting any components, make sure the area is clean and free from foreign material. When disconnected all openings must be sealed.



NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Component shown removed for clarity.

1.

Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.



WARNING:


Make sure to support the vehicle with axle stands.

Raise and support the vehicle.


-
3. Refer to: [Air Conditioning System Recovery, Evacuation and Charging](#) (412-00 Climate Control System - General Information, General Procedures).

-
4. Refer to: [Cooling Fan](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, Removal and Installation).

5.

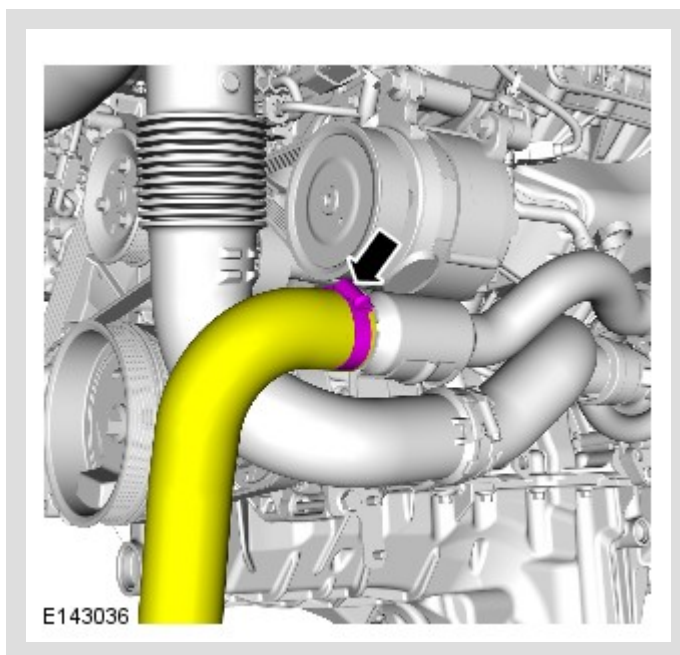

6.

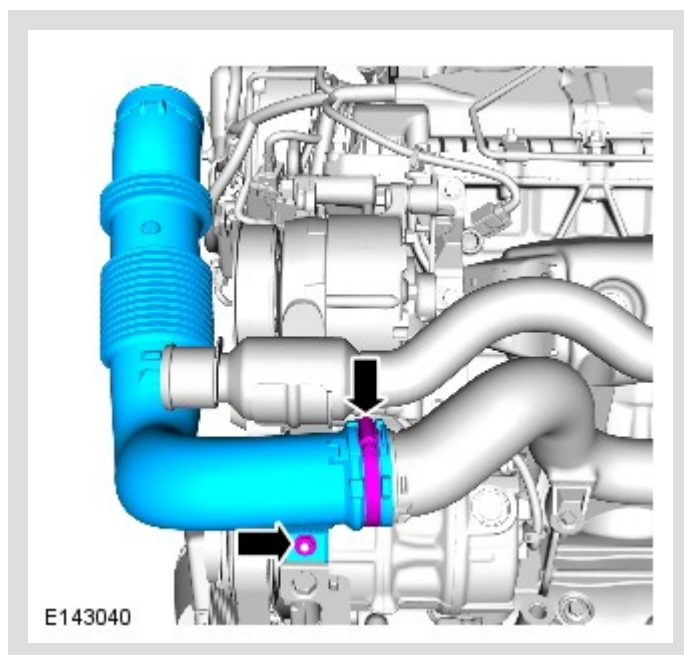


7.

⚠ CAUTION:

Discard the bolt.


⚠ NOTE:



Left hand drive only.

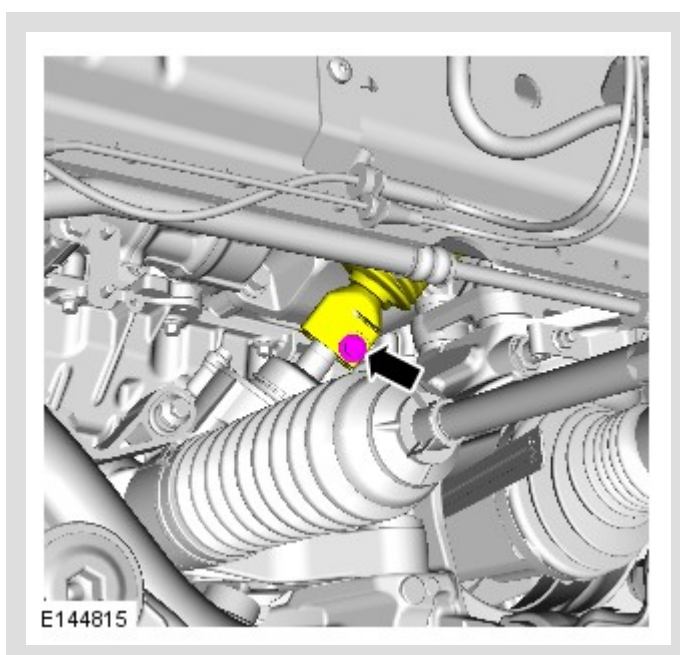


Align the steering wheel to straight ahead.

8.

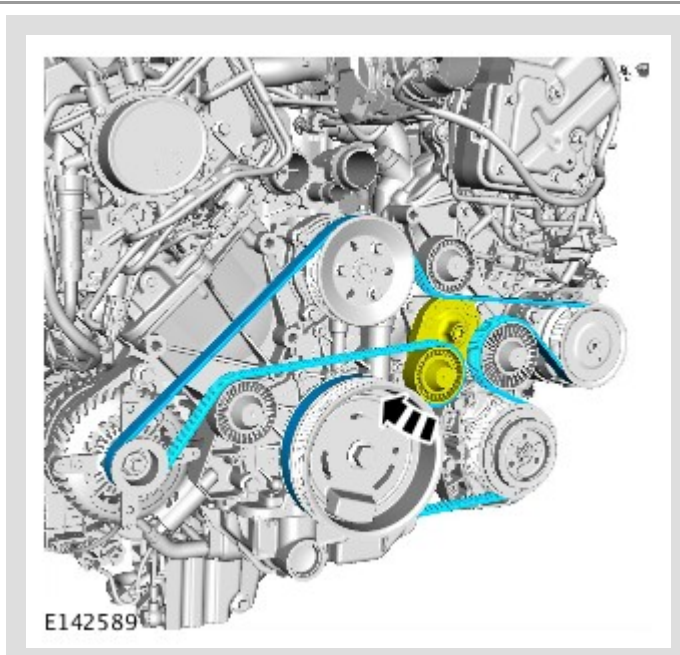

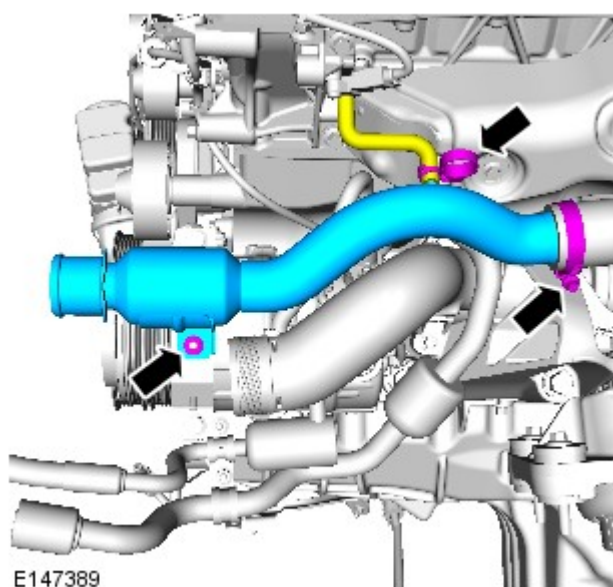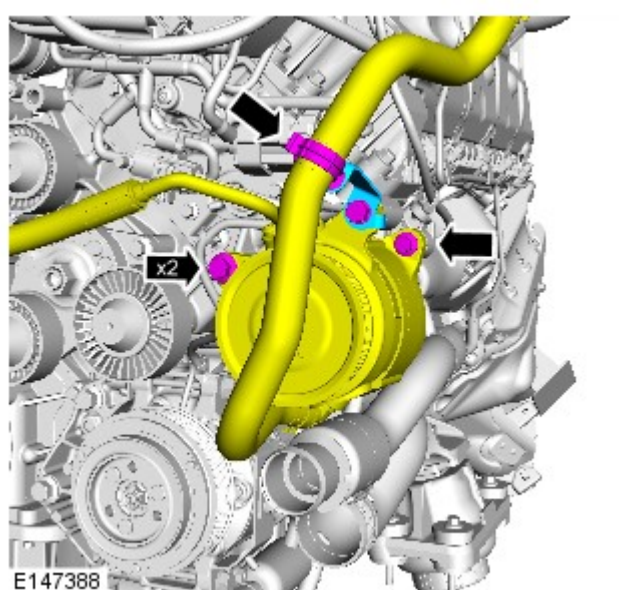


11.

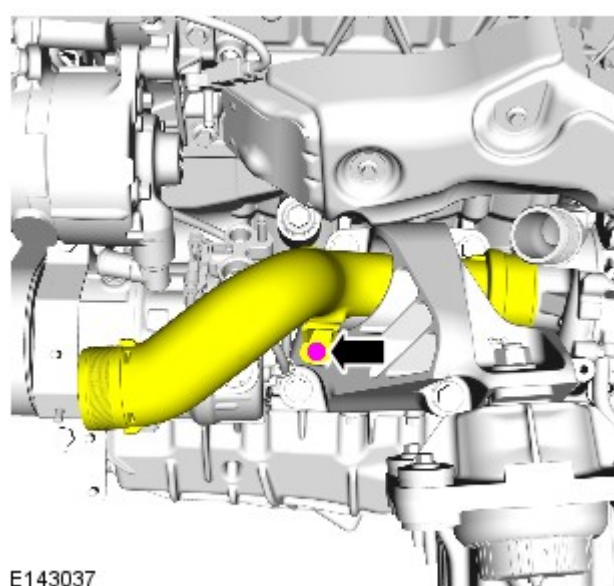

E143037

12.

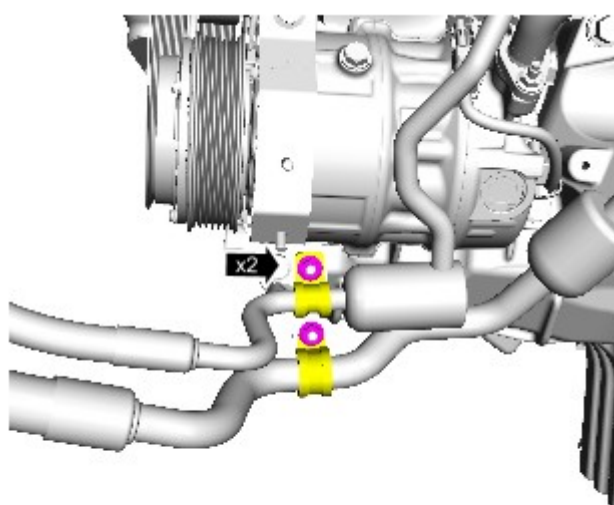


E147390


13.


**CAUTION:**

Remove and discard the O-ring seals.

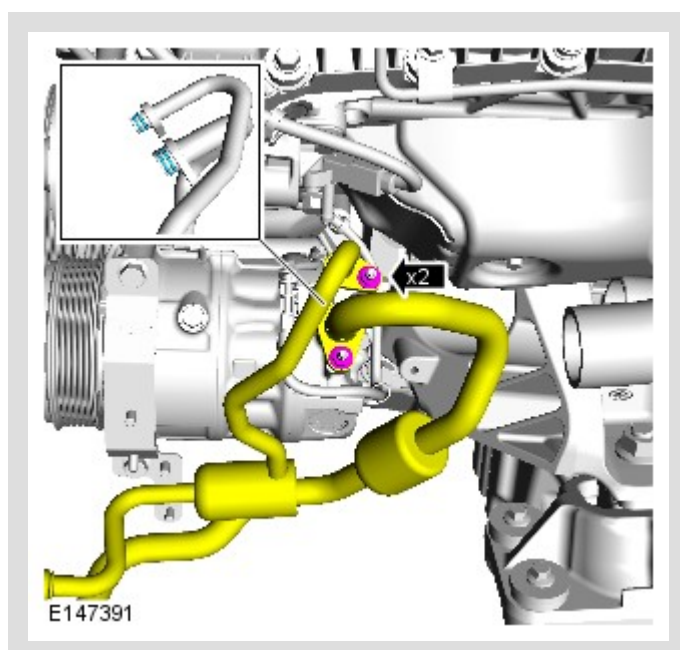


14.

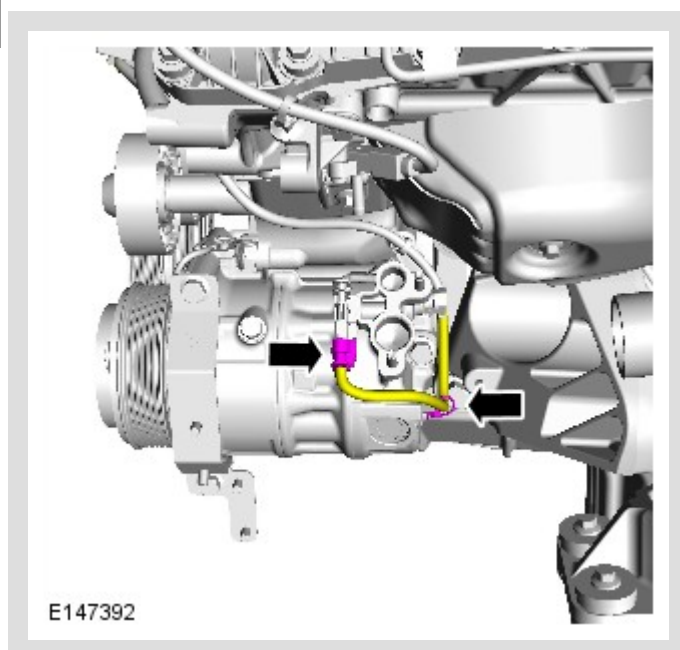

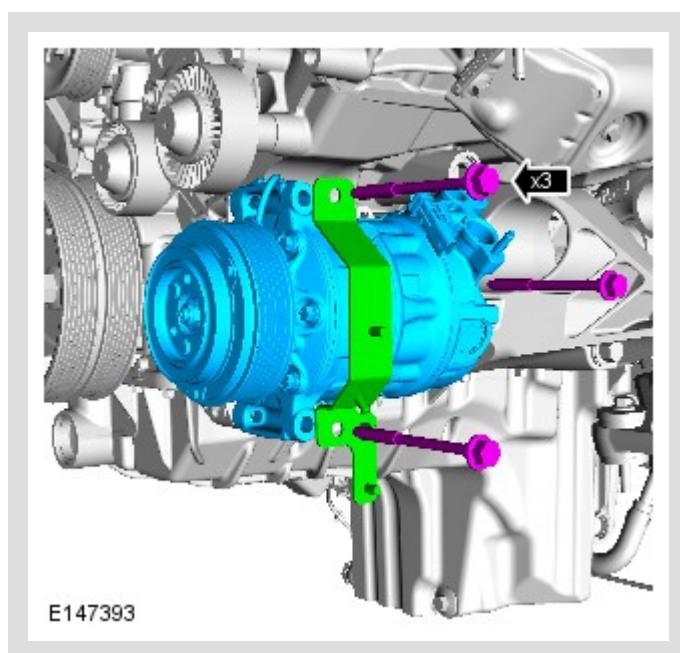


INSTALLATION

1.

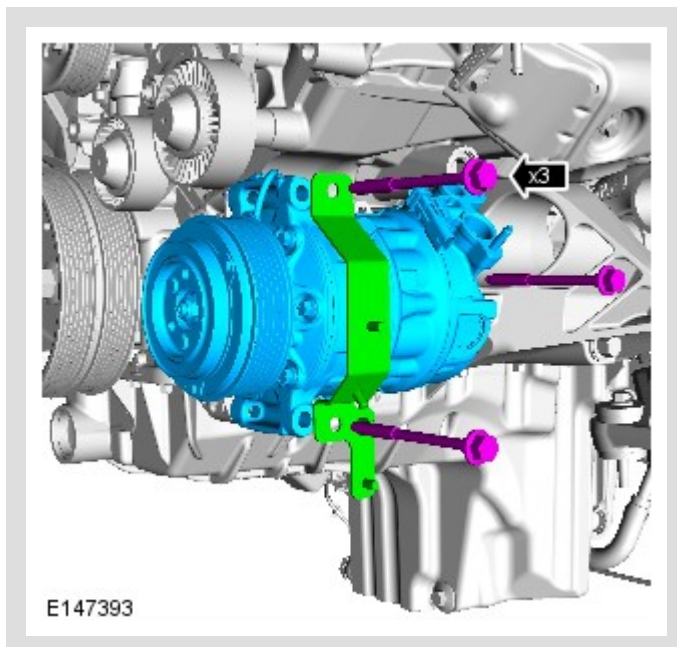

Torque: 25 Nm

2.

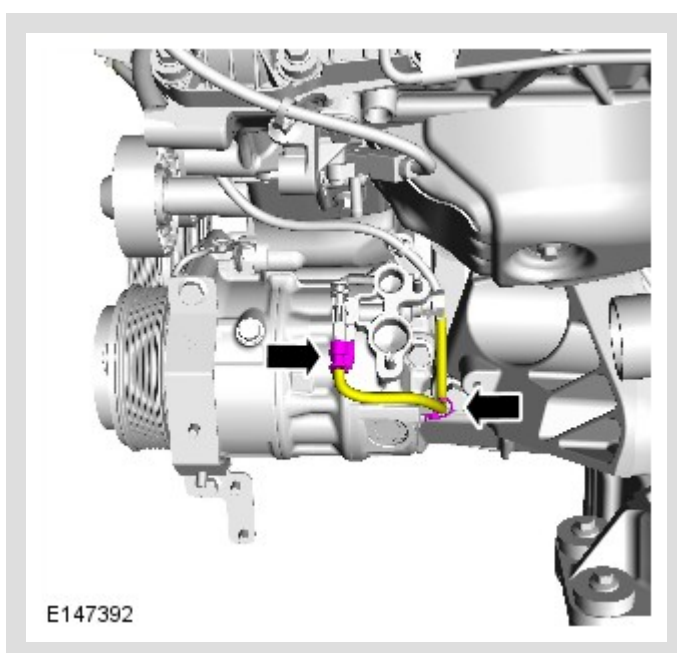


3.



CAUTION:


Install new o-ring seals

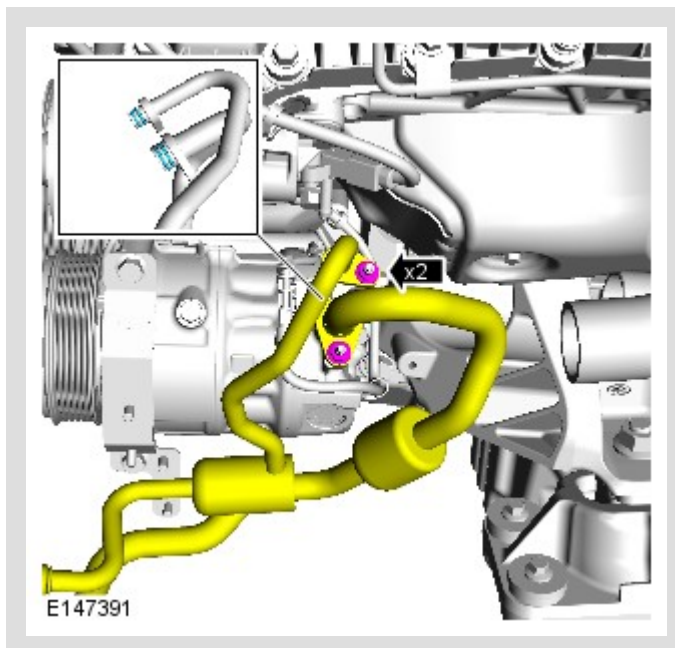

Renew Part: *Air conditioning pipe to compressor O-ring seals* : 1 .


Torque: 9 Nm

4.

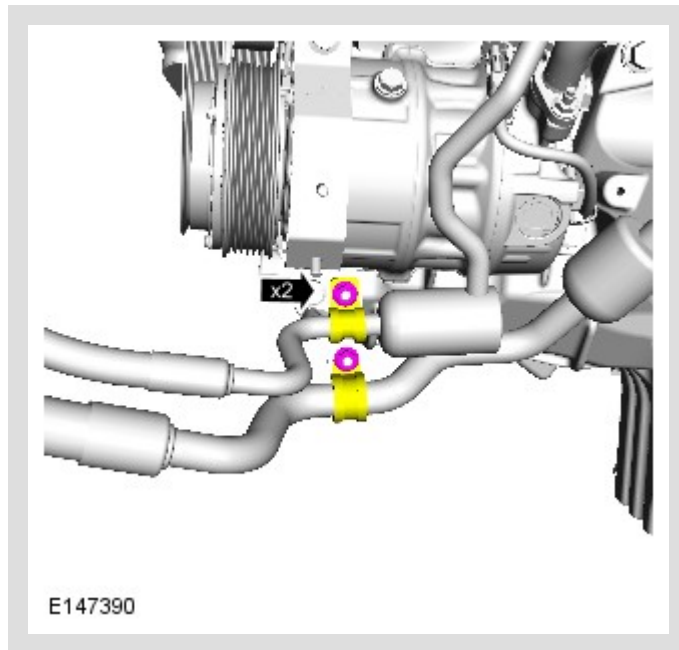

Torque: 9 Nm

5.

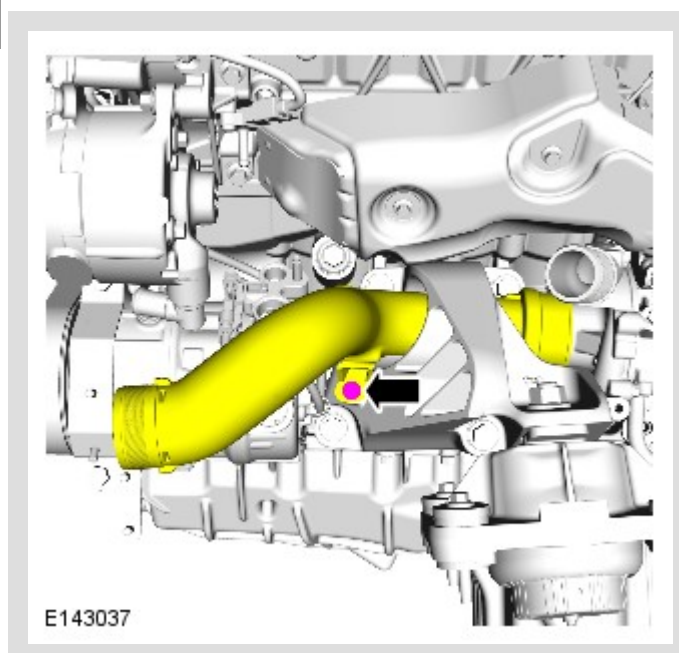


Torque: 12 Nm

6.



NOTE:

Make sure the retaining clips are correctly installed and tightened.

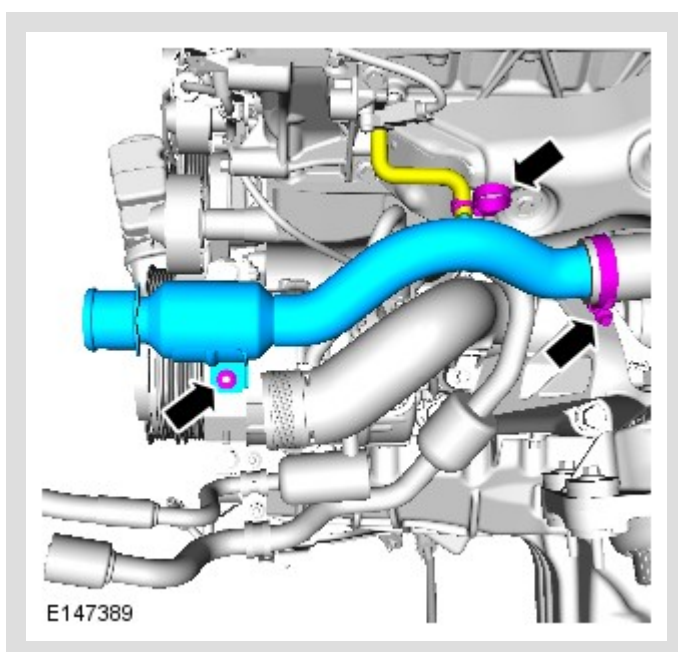


Torque:

M6 10 Nm

Clamp 3.5 Nm


7.

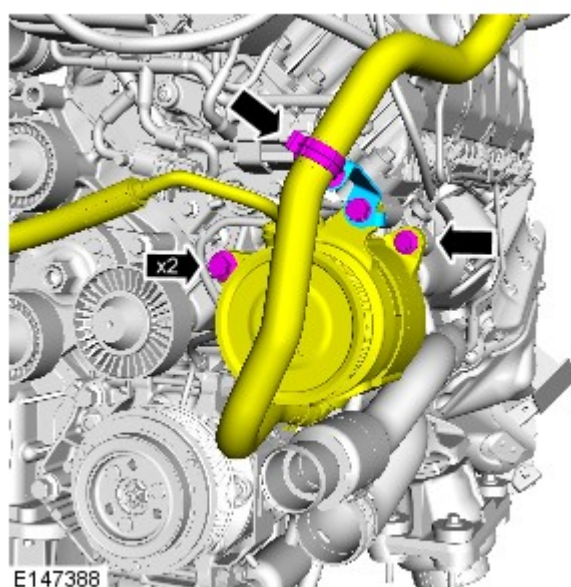

Torque:

M8 25 Nm

M10 45 Nm

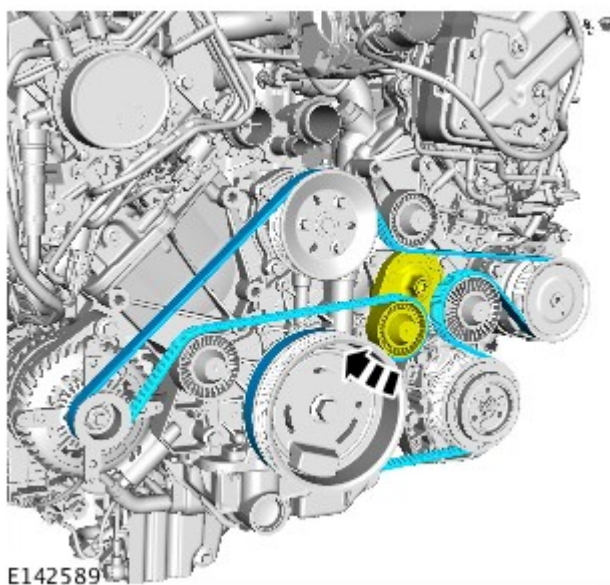

9.




CAUTION:

Make sure that a new bolt is installed.



NOTE:

Left hand drive only.

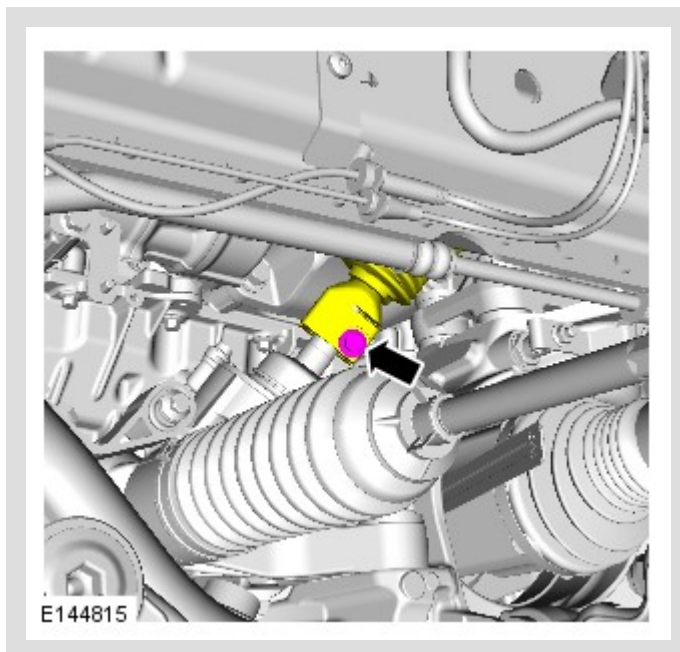

Using a suitable tool, clean out the threads.

Renew Part: *Steering column lower shaft lower bolt : 1* .


Torque: 30 Nm

10.



NOTE:

Make sure the retaining clips are correctly installed and tightened.

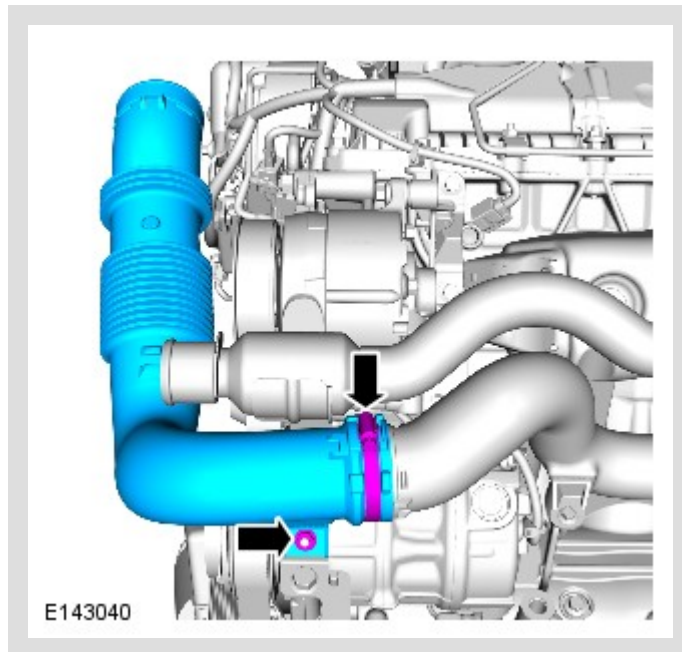

Torque:

M6 **10 Nm**


Clamp **3.5 Nm**

11.



NOTE:

Make sure the retaining clips are correctly installed and tightened.

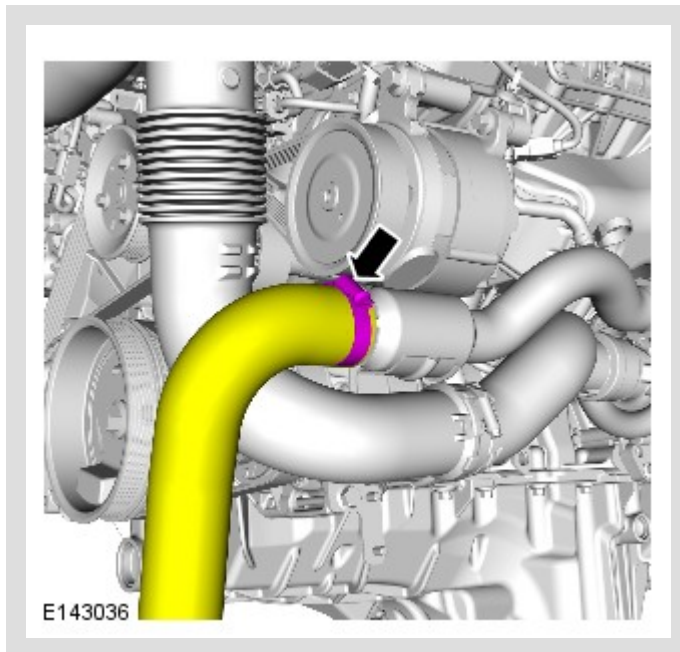

Torque: 3.5 Nm

-
12. Refer to: [Cooling Fan](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, Removal and Installation).
-
13. Refer to: [Air Conditioning System Recovery, Evacuation and Charging](#) (412-00 Climate Control System - General Information, General Procedures).
-
14. Reconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).