

2016.0 RANGE ROVER (LG), 412-01

CLIMATE CONTROL

# EVAPORATOR (G1509811)

REMOVAL AND INSTALLATION

---

---

## REMOVAL

### NOTE:

Removal steps in this procedure may contain installation details.

1.

### WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

2. Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).


3. Refer to: [Heater Core - GTDi 2.0L Petrol](#) (412-01A Climate Control, Removal and Installation).

4.

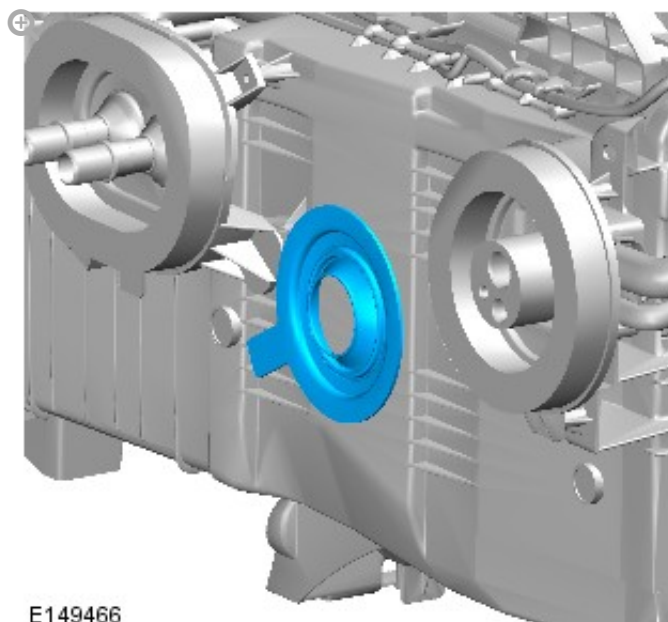


E149466

5.

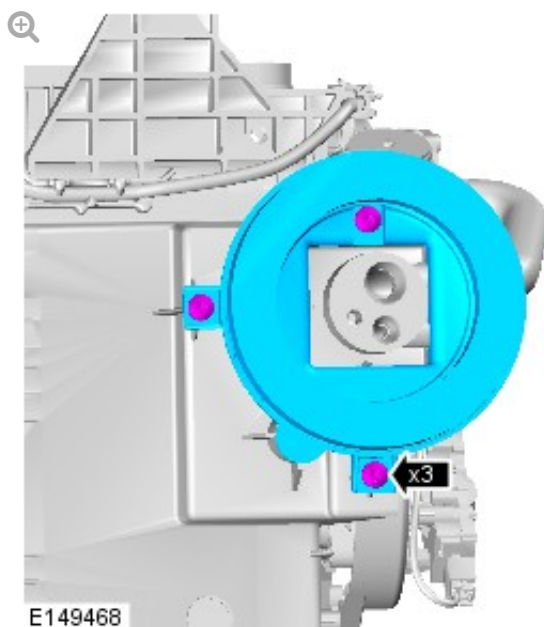

E149468

6.

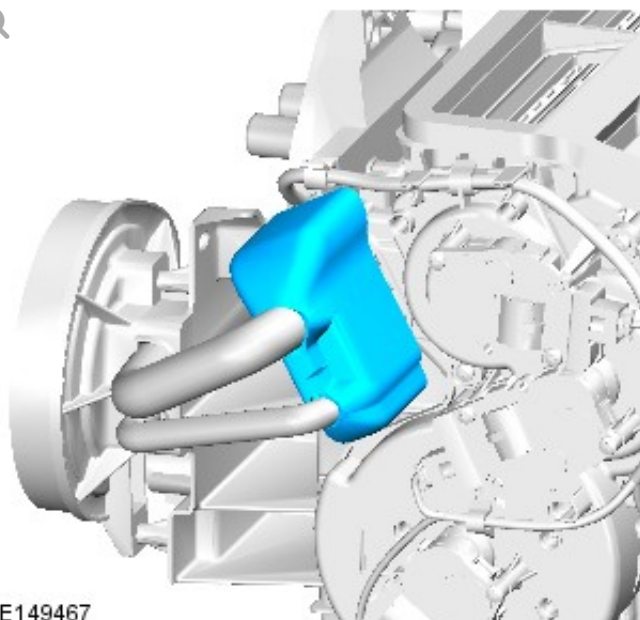

E149467


7.

**CAUTION:**

Remove and discard the O-ring seals.

**NOTE:**

Install new O-ring seals.

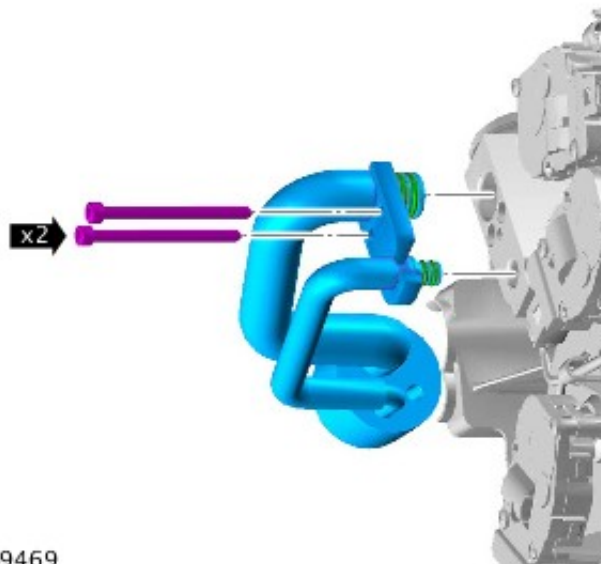

E149469

*Torque: 4 Nm*


8.

**CAUTION:**

Remove and discard the O-ring seals.


**NOTE:**

Install new O-ring seals.

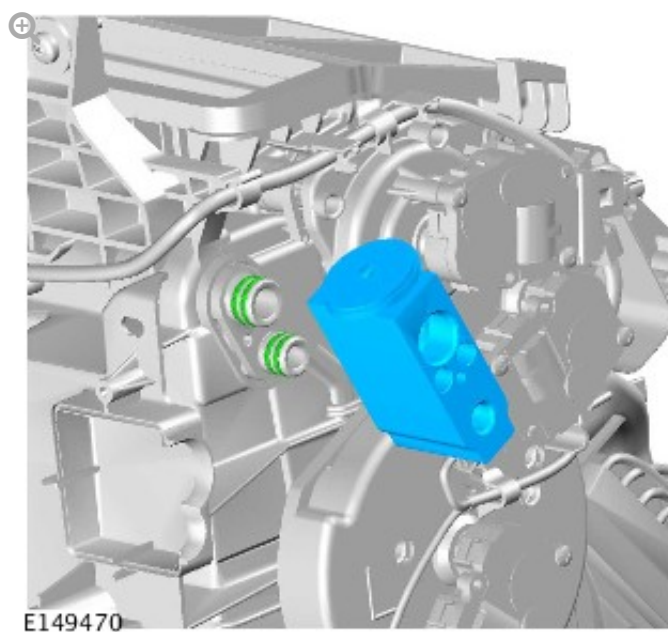


E149470

9.

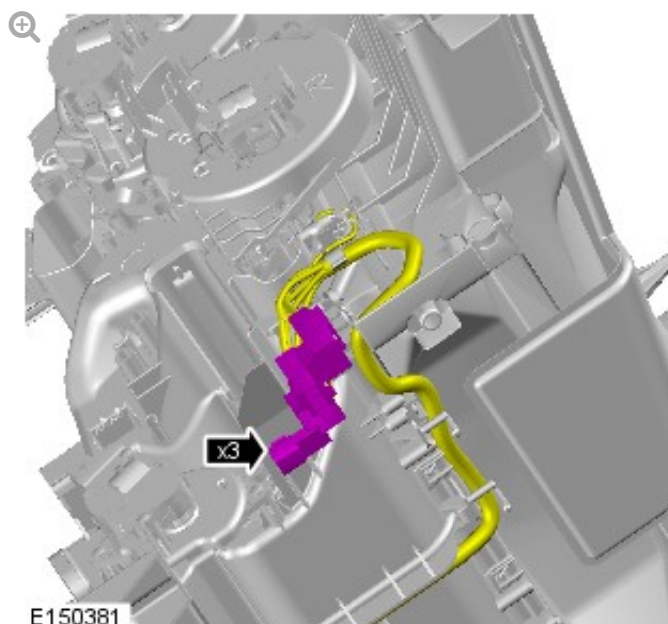



E150381

10.

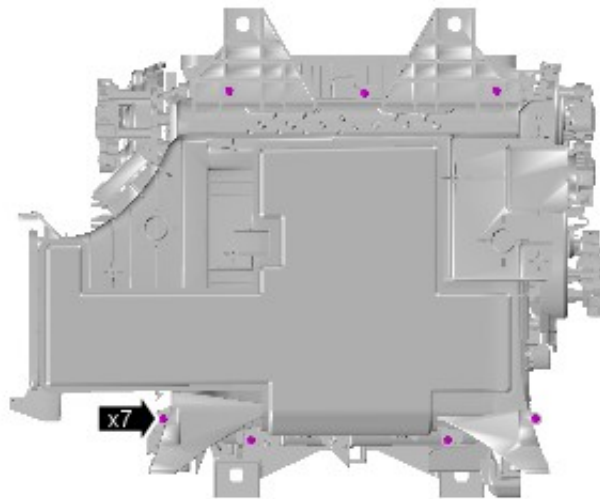


E150380

11.

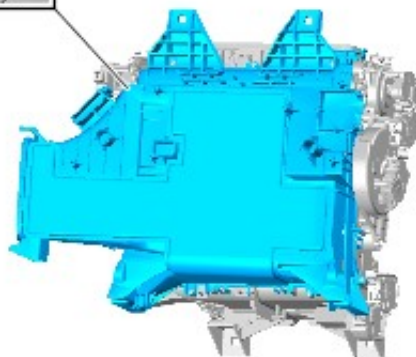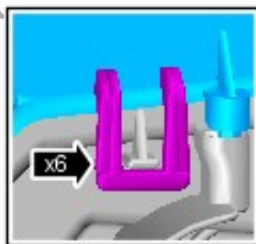


E150379

12.

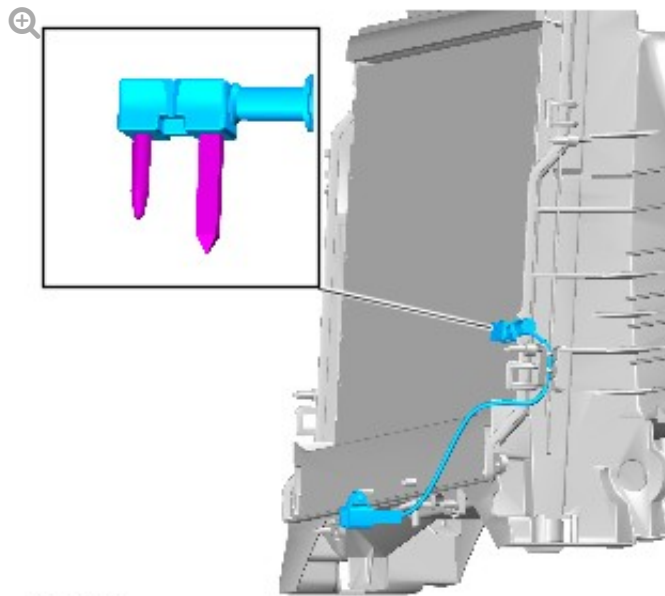

E150876

13.

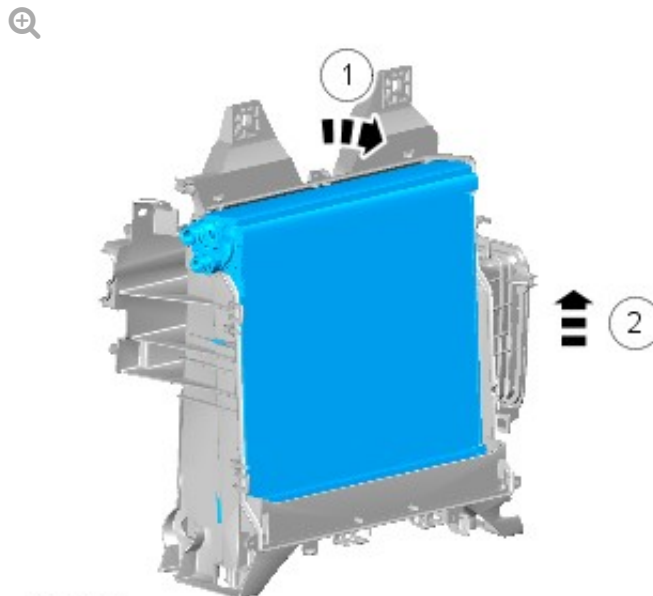

E150382

---

## INSTALLATION

1. To install, reverse the removal procedure.