

2016.0 RANGE ROVER (LG), 412-01

CLIMATE CONTROL

HEATER CORE AND EVAPORATOR HOUSING (G1509827)

REMOVAL AND INSTALLATION

REMOVAL


NOTE:

Removal steps in this procedure may contain installation details.

1.

CAUTION:

The heater core and evaporator core housing must only be handled in the positions shown. Failure to do so may result in damage to the component.

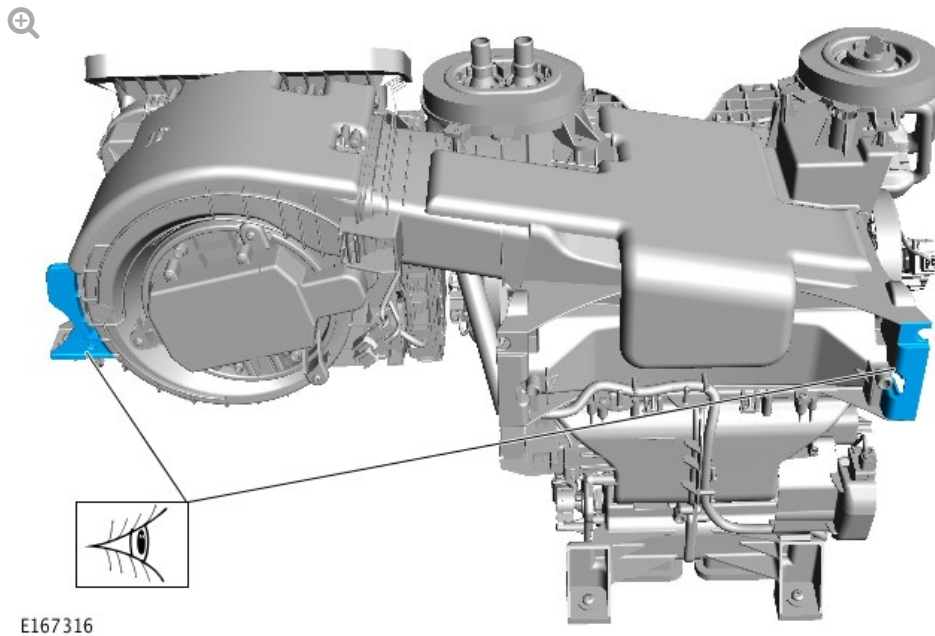

2.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3. Make the SRS system safe.
Refer to: [Standard Workshop Practices](#) (100-00 General Information, Description and Operation).
4. Refer to: [Air Conditioning System Recovery, Evacuation and Charging](#) (412-00 Climate Control System - General Information, General Procedures).
5. Refer to: [Wiper Linkage Assembly](#) (501-16 Wipers and Washers, Removal and Installation).
6. Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, General Procedures).
Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, General Procedures).

Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, General Procedures).


Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, General Procedures).

Refer to: [Cooling System Partial Draining and Vacuum Filling](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, General Procedures).

7.


CAUTION:

Discard the bolt.

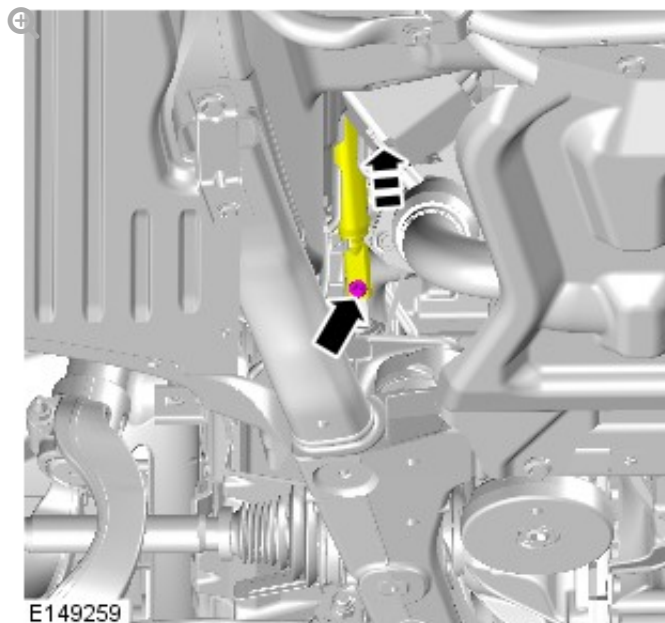


Torque: **44 Nm**

8.

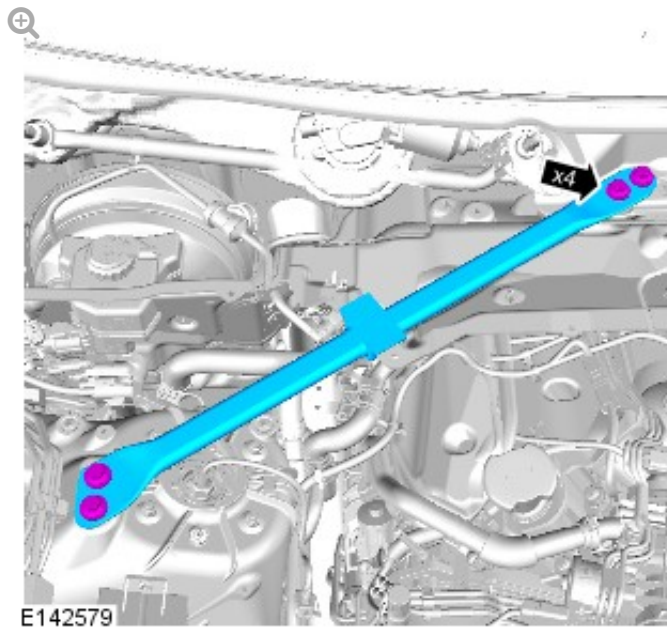


Torque: 55 Nm

9.

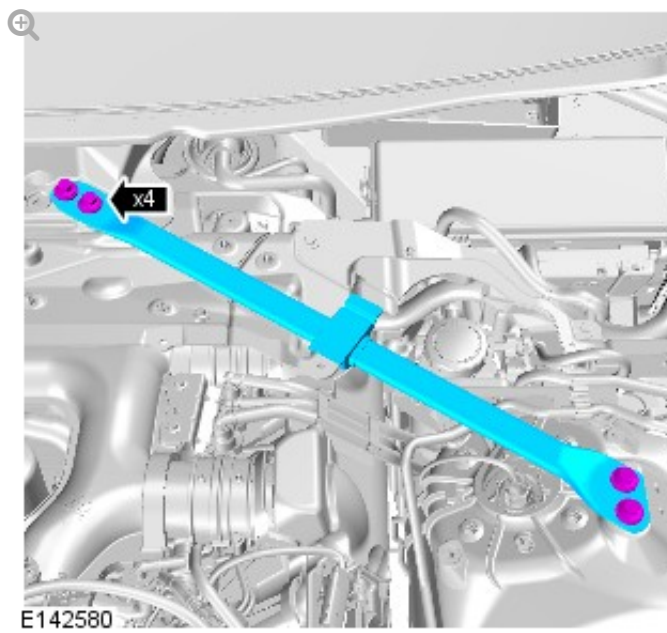


Torque: 55 Nm

10.

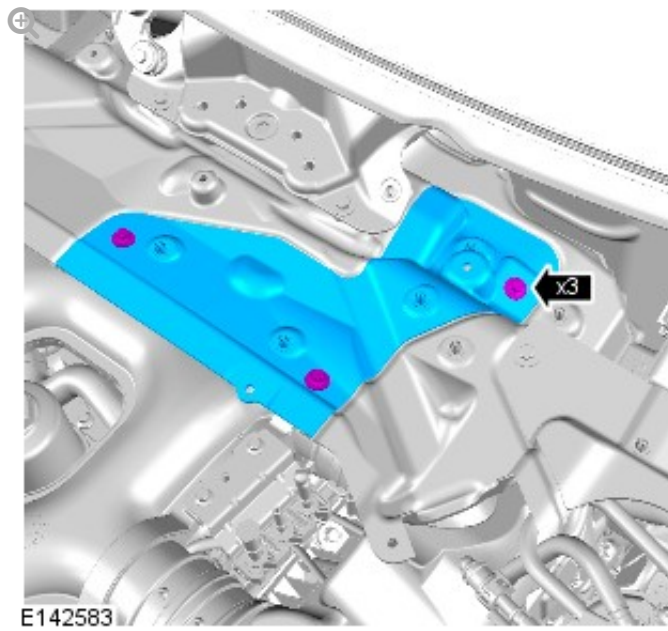


Torque: 6 Nm

11.

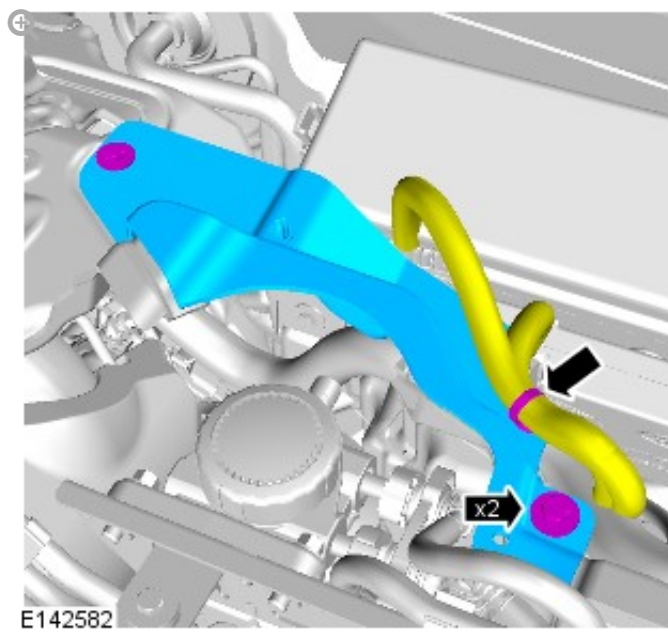

Torque: 6 Nm

12.

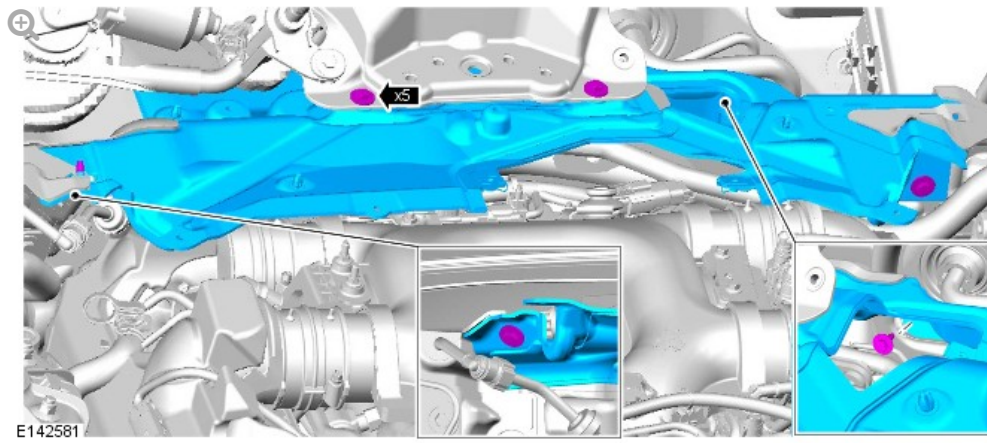


Torque: 6 Nm

13.

CAUTION:

Install all the bolts finger tight before final tightening.

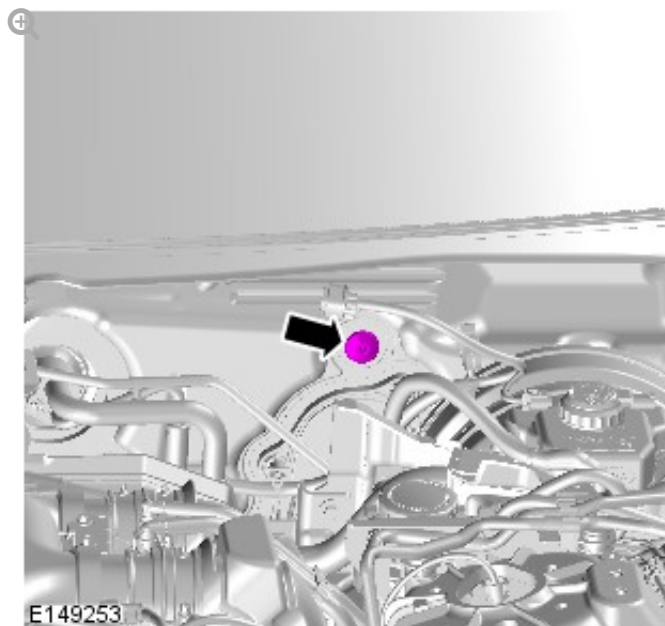


Torque: 20 Nm

14.

CAUTION:

Make sure that all openings are sealed. Use new blanking caps.

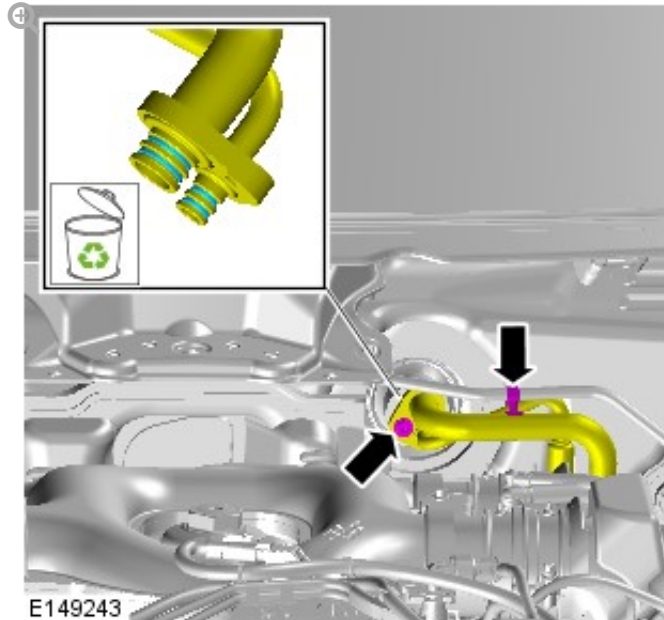


Torque: 10 Nm

15.

CAUTION:


Be prepared to collect escaping coolant.

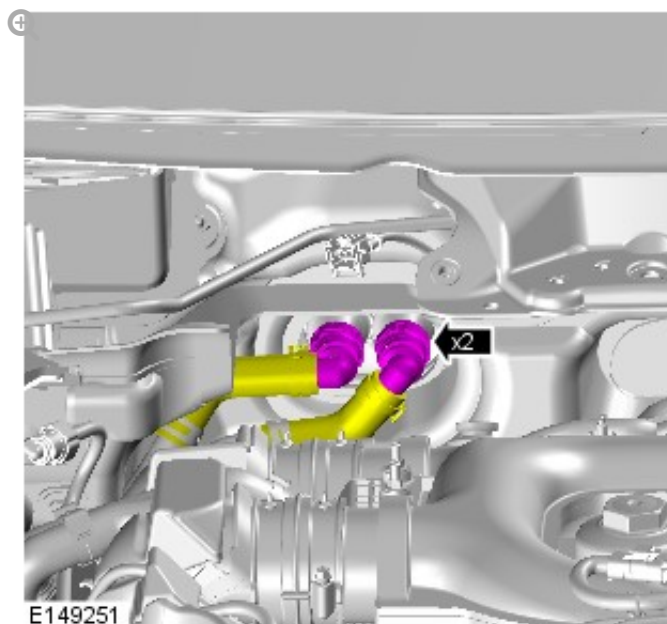

16.

NOTE:


Left illustration shown, right is similar.

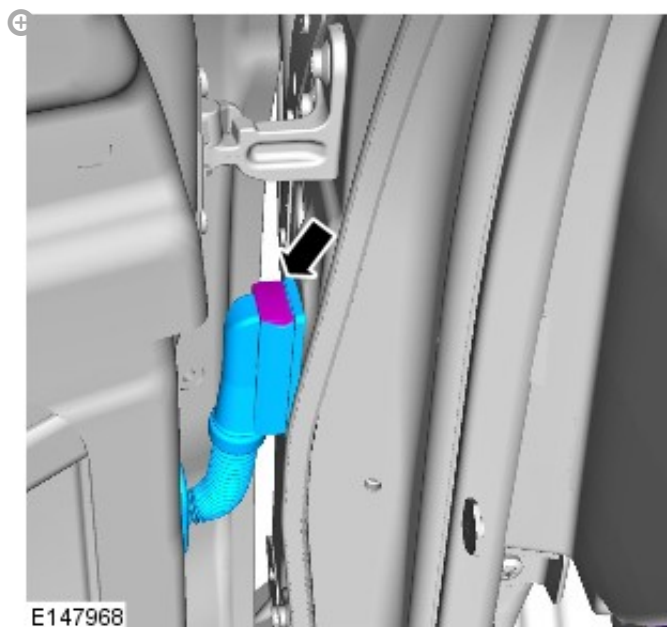

17.

NOTES:

- Left illustration shown, right is similar.
- This step requires the aid of another technician.

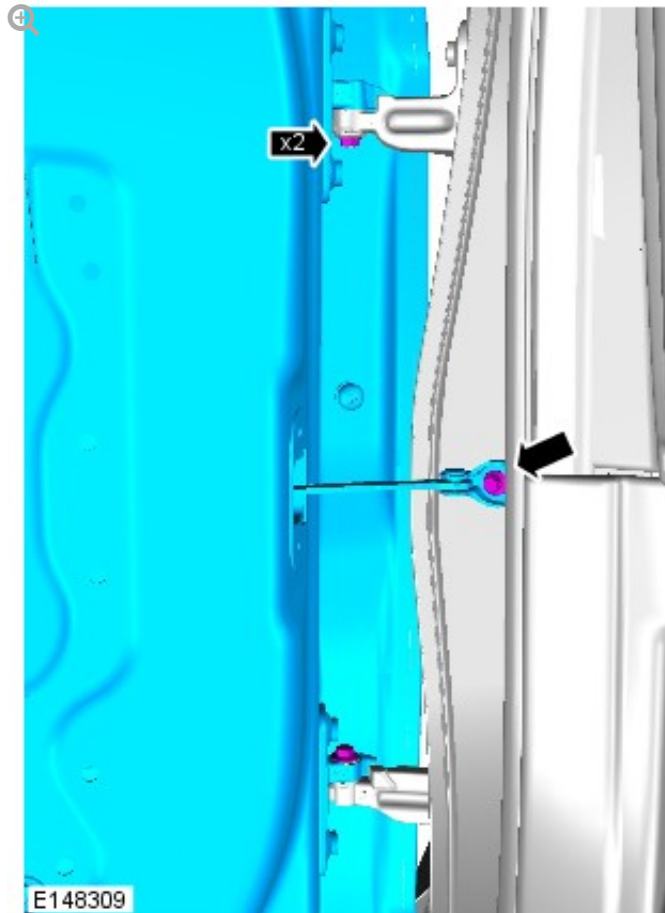

Torque:


Torx bolt **24 Nm**

M8 bolt **30 Nm**

18.

NOTES:


- Repeat the procedure for the other side.
- Right illustration shown, left is similar.

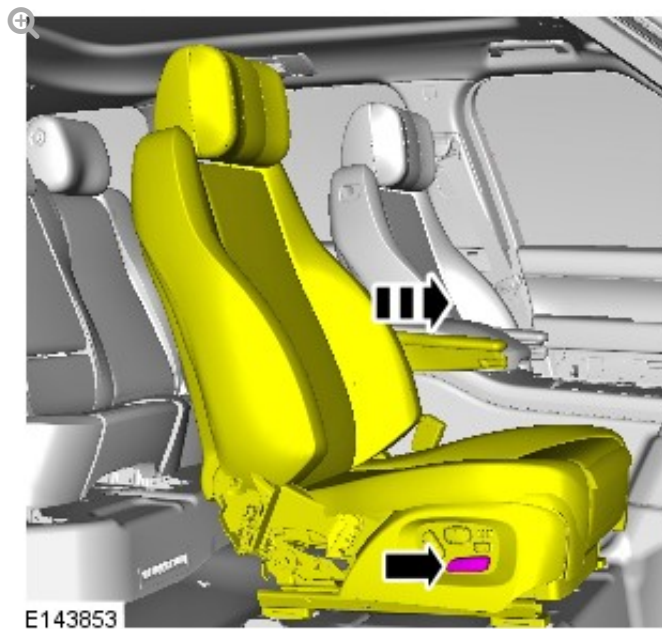

19.

NOTES:

- Repeat the procedure for the other side.
- Right illustration shown, left is similar.

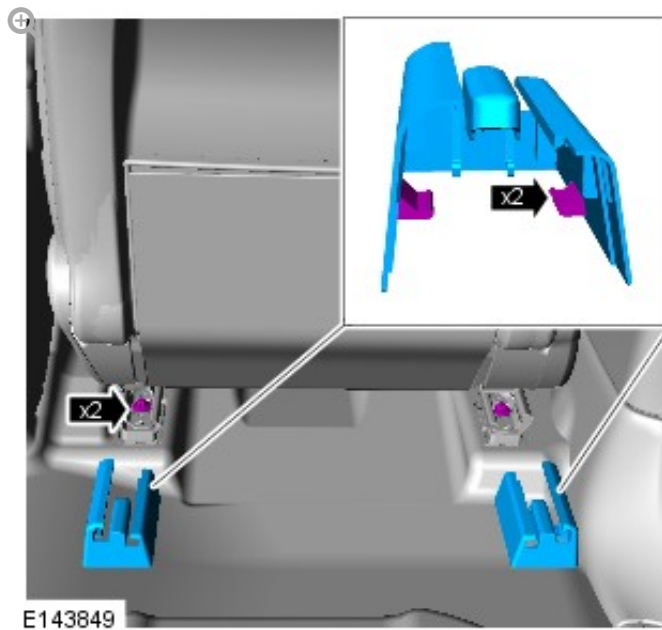


Torque: 47 Nm

20.

NOTES:


- Repeat the procedure for the other side.
- Right illustration shown, left is similar.

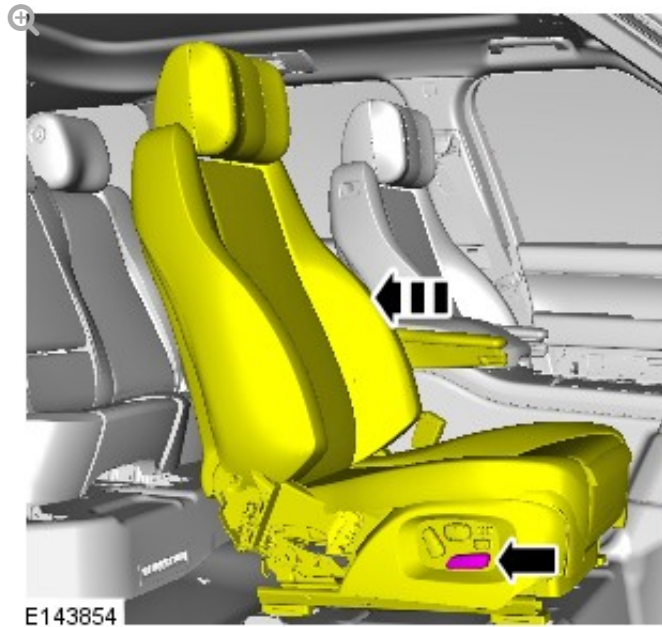

21.

NOTES:

- Repeat the procedure for the other side.
- Right illustration shown, left is similar.

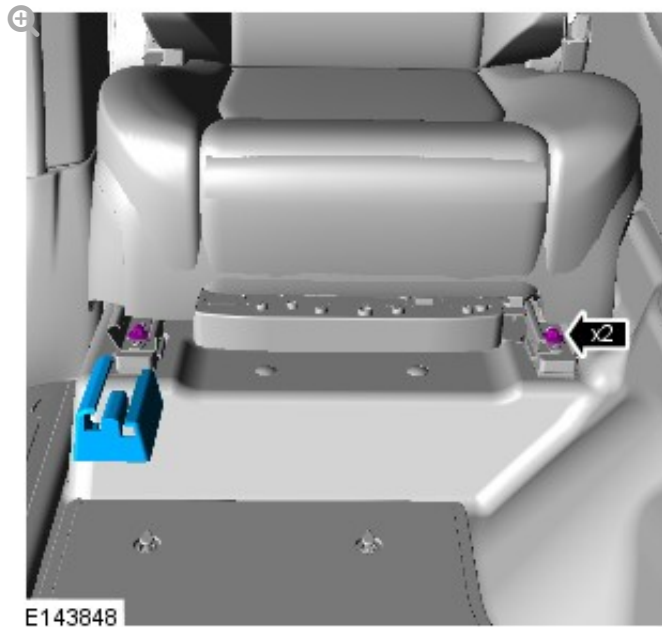



Torque: 47 Nm

22. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

23.

NOTES:

- Repeat the procedure for the other side.
- Right illustration shown, left is similar.

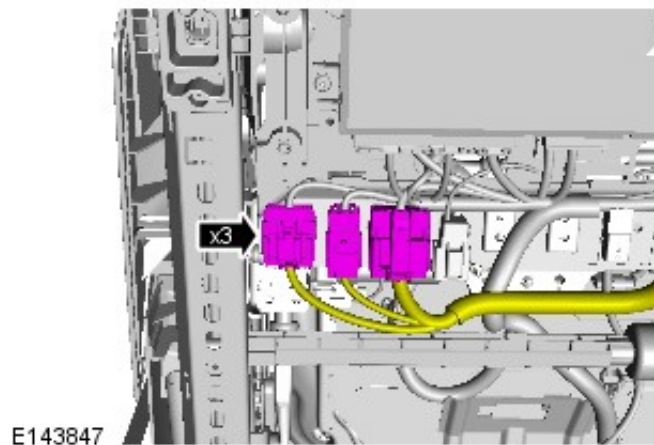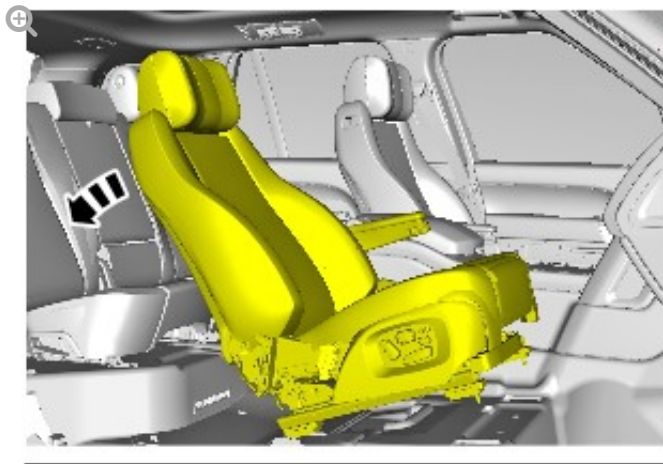


24. Refer to: [Driver Airbag Module](#) (501-20B Supplemental Restraint System, Removal and Installation).

25.

CAUTION:


If a new steering column is installed, a new longer retaining bolt must be used to secure the steering wheel.

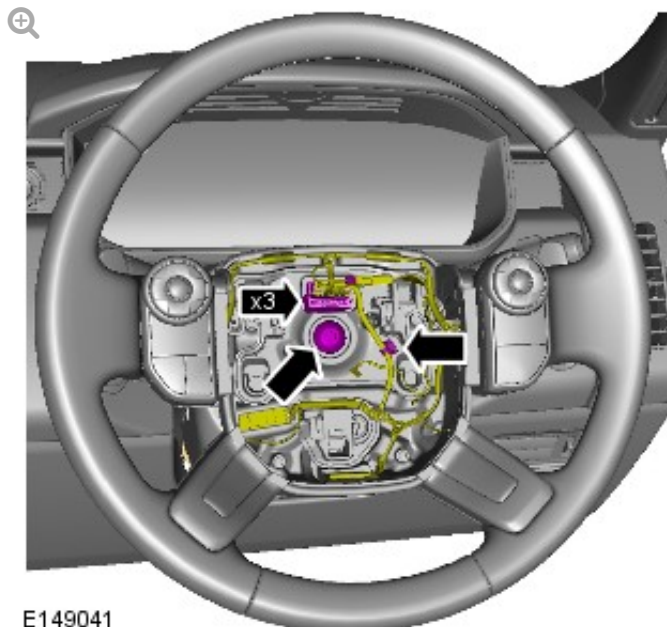

E149041

Torque: 47 Nm

26.

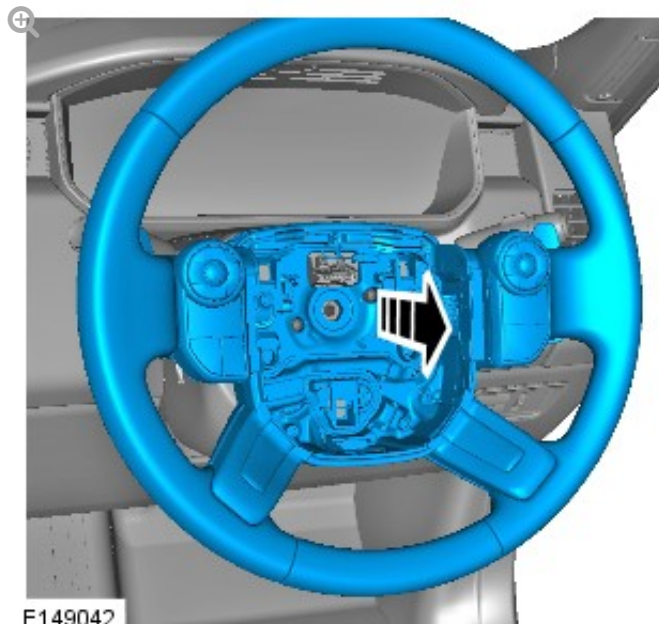


E149042

27.

CAUTION:

Make sure that the clockspring rotor does not rotate.

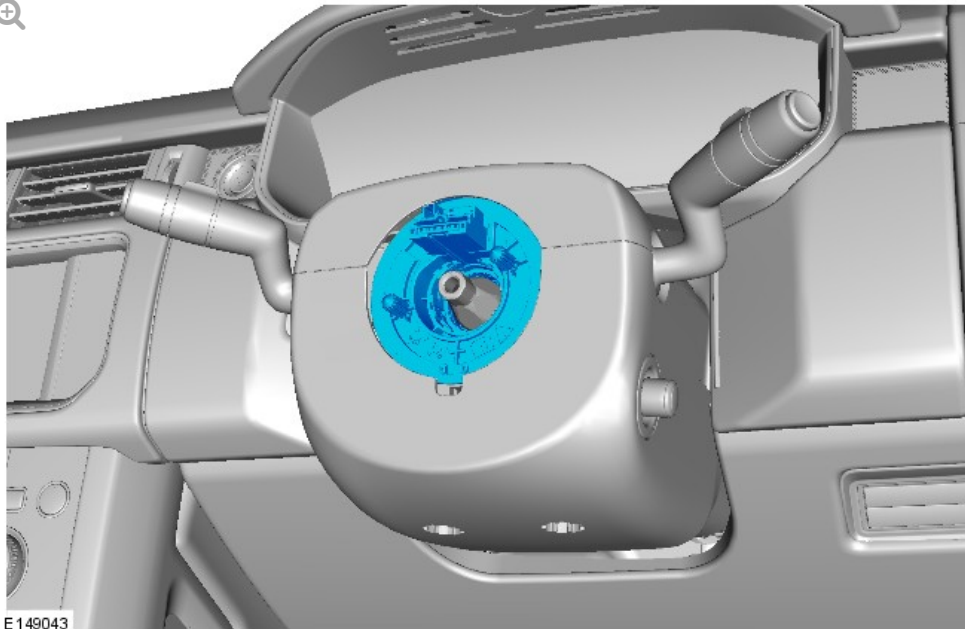


E149043

Secure with adhesive tape.

28.

NOTES:

- Repeat the procedure for the other side.
- Right illustration shown, left is similar.

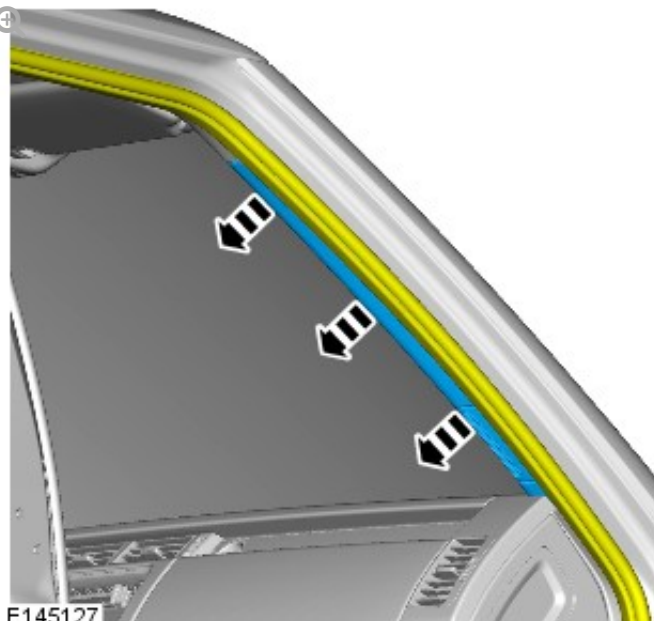


E145127

29.

NOTES:

- Repeat the procedure for the other side.
- Right illustration shown, left is similar.

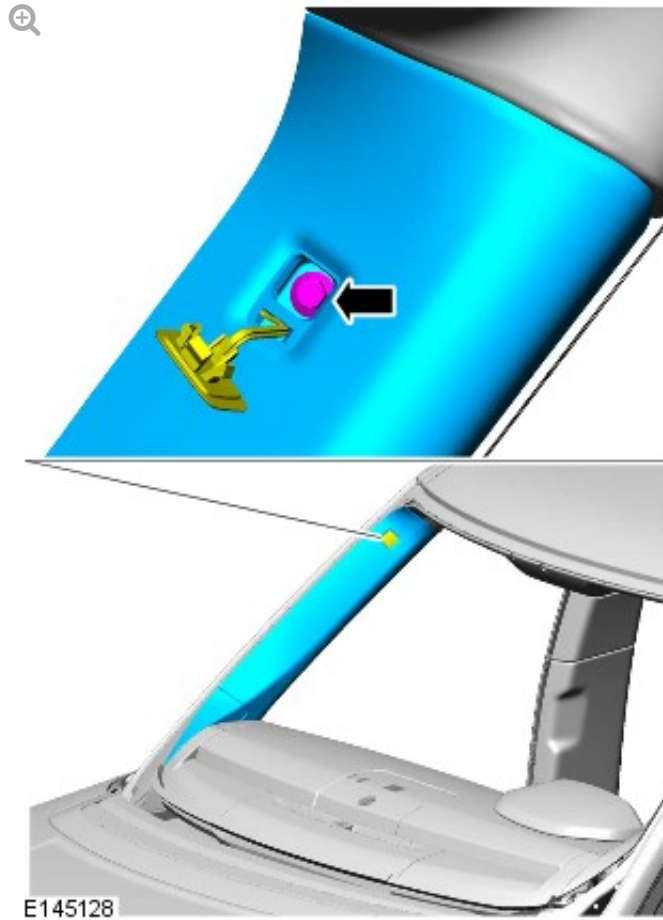


Torque: 6 Nm

30.


NOTES:

- Repeat the procedure for the other side.
- Right illustration shown, left is similar.

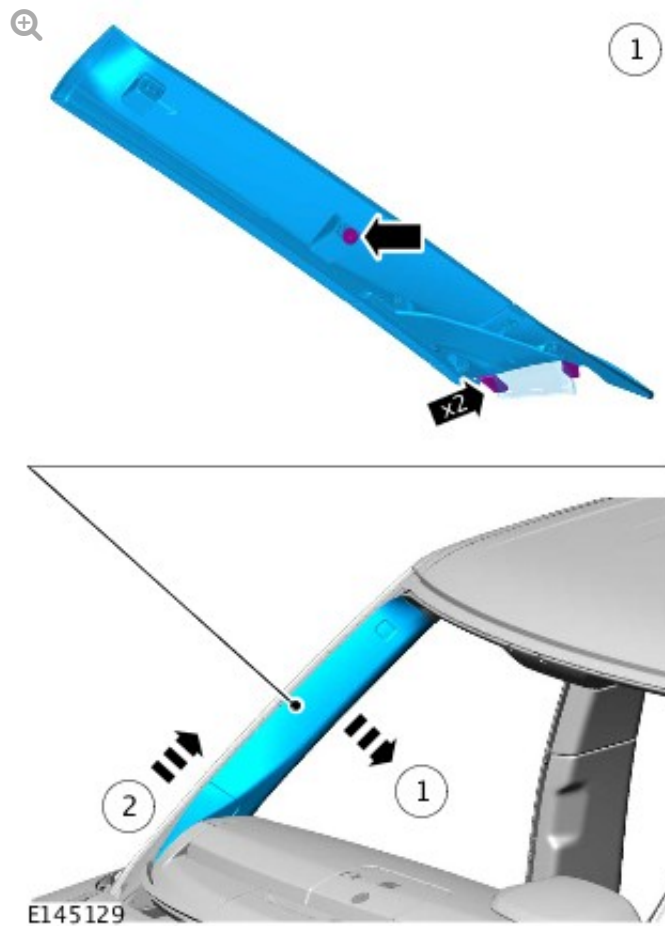


31. Refer to: [Floor Console](#) (501-12A Instrument Panel and Console - Standard Wheel Base, Removal and Installation).
32. Refer to: [Lower Glove Compartment](#) (501-12A Instrument Panel and Console - Standard Wheel Base, Removal and Installation).
33. Refer to: [Cowl Side Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

34.

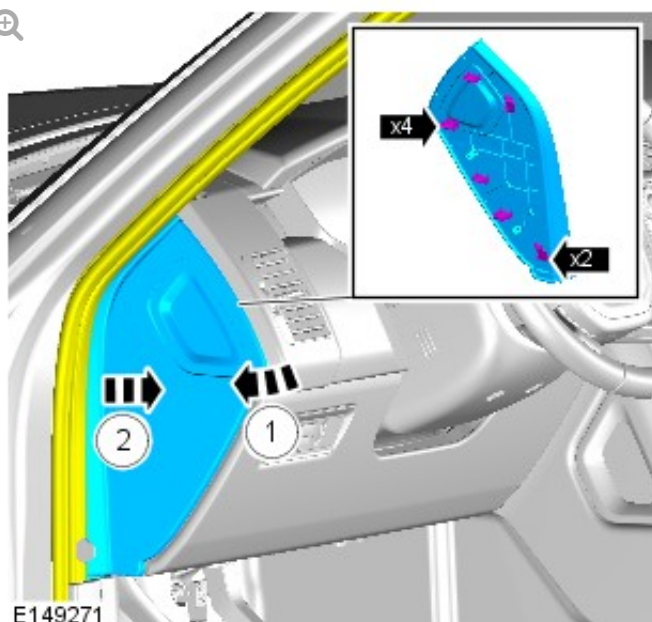


35.

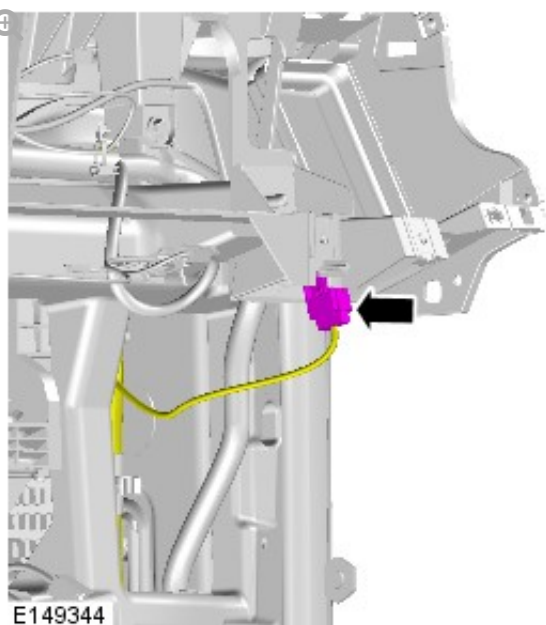

36.




37.

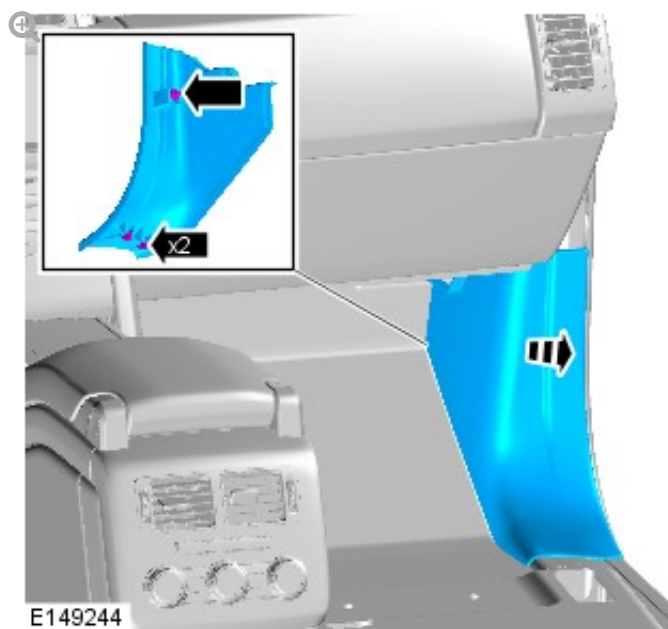


38.



39.

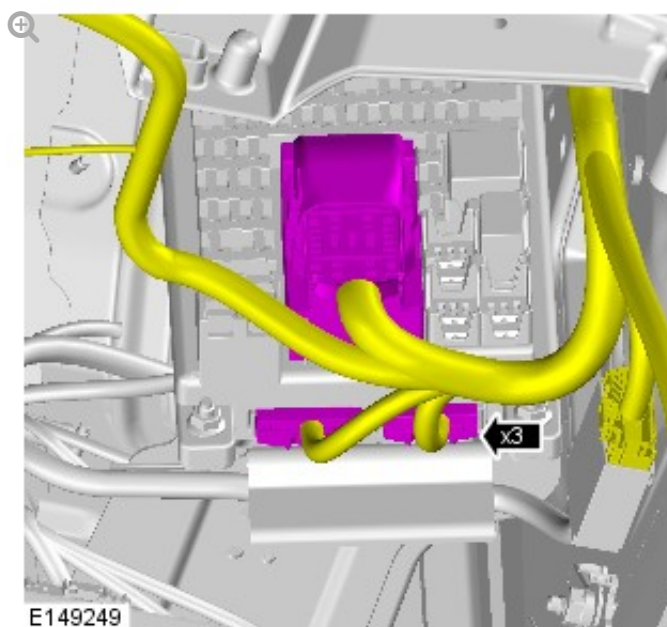


40.

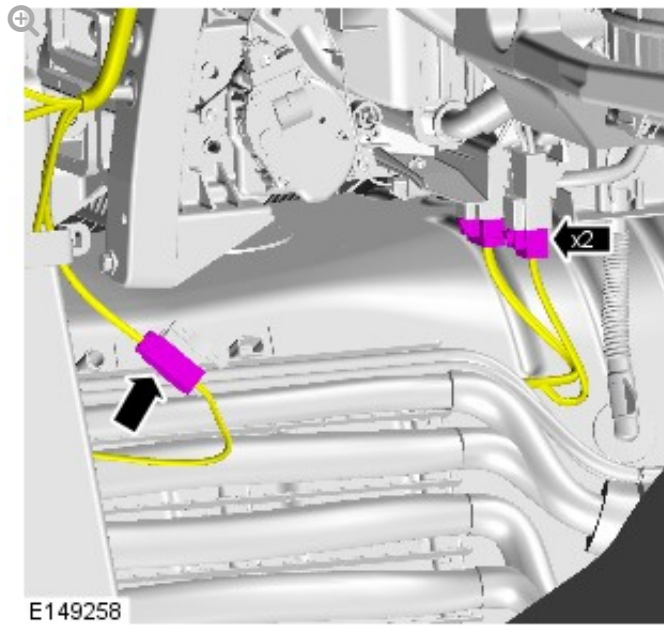


41.

NOTE:

Repeat the procedure for the other side.

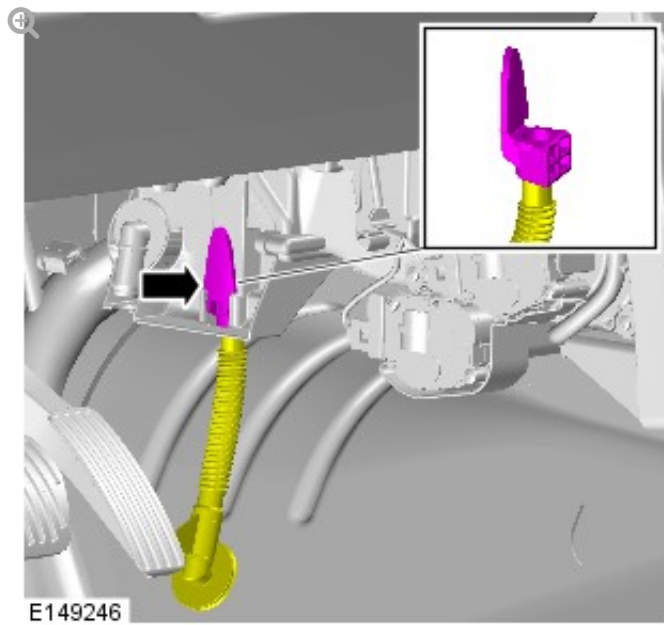

42.

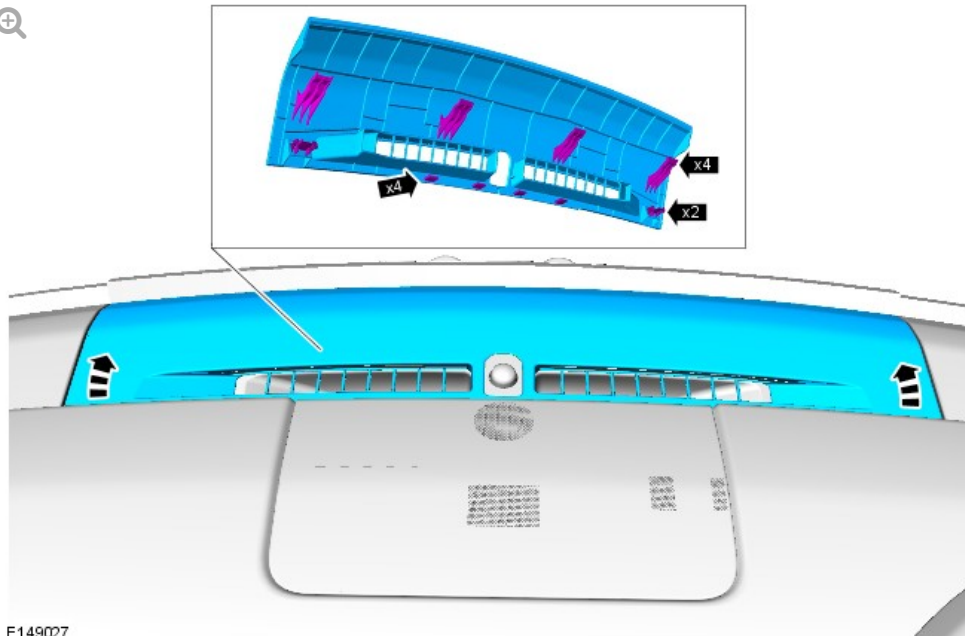


E149027

43.

CAUTION:

Install all the bolts finger tight before final tightening.

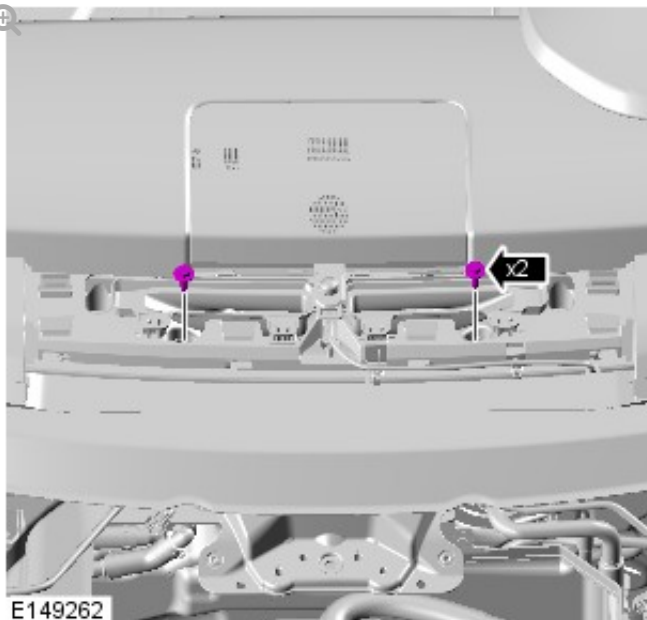


E149262

Torque: 20 Nm

44.

CAUTION:

Install all the bolts finger tight before final tightening.


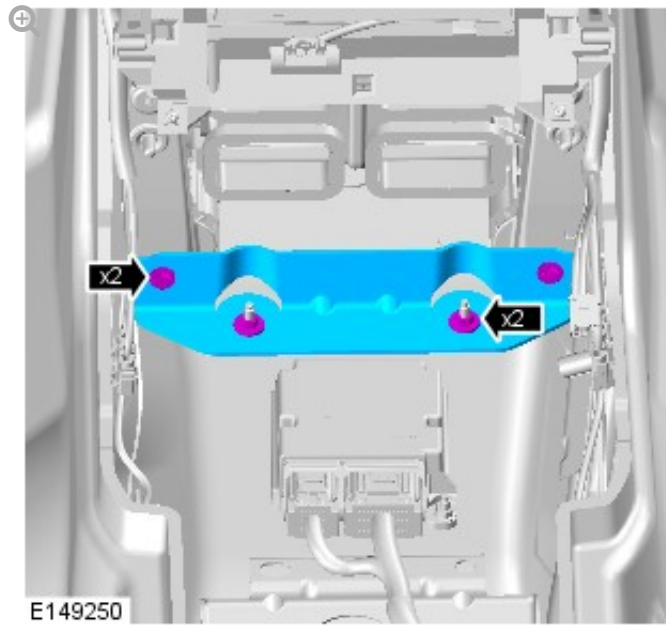


Torque: 9 Nm

45.

CAUTION:


Install all the bolts finger tight before final tightening.

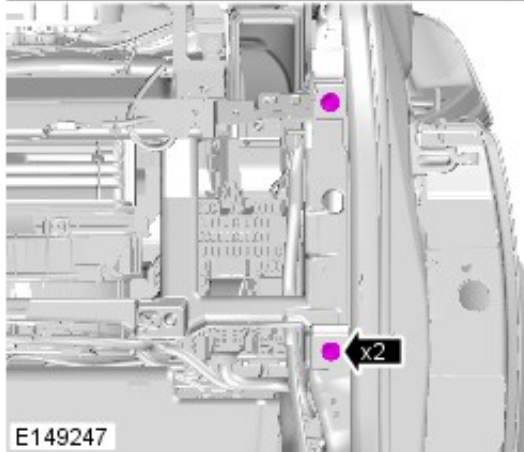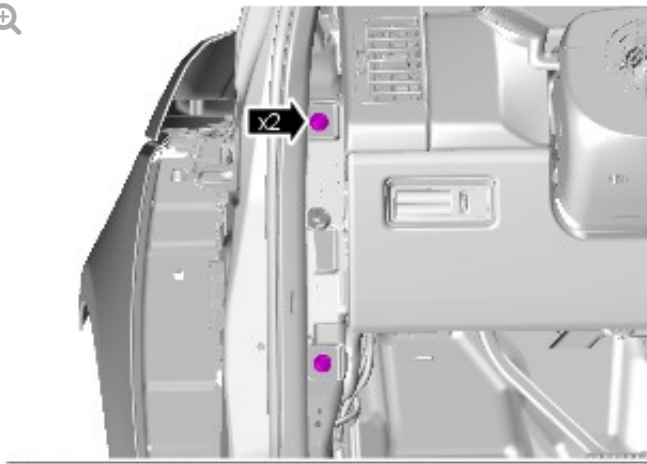

E149247

Torque: 20 Nm

46.

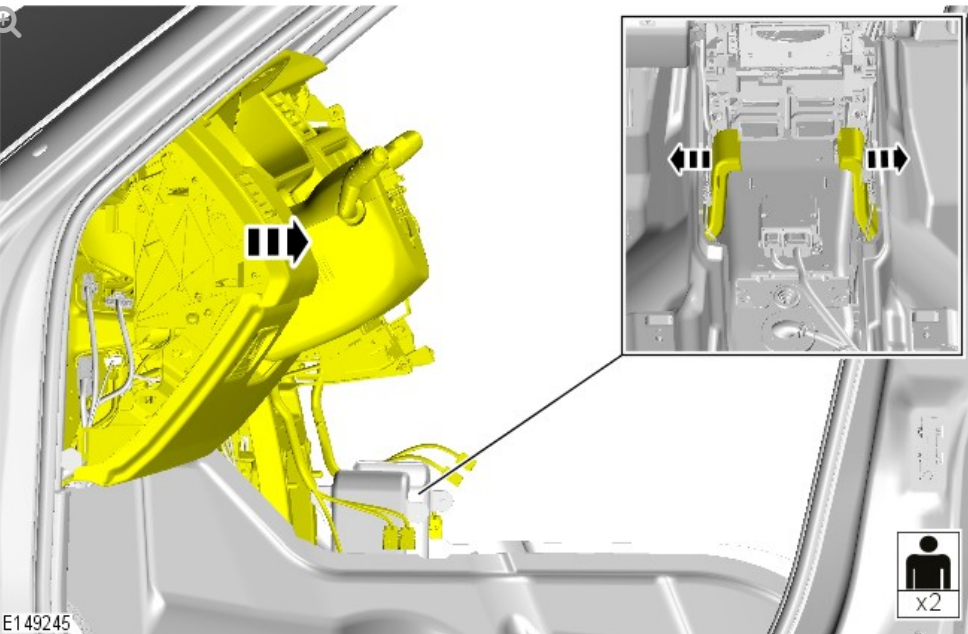


E149245

47.


NOTE:

Secure with cable ties.

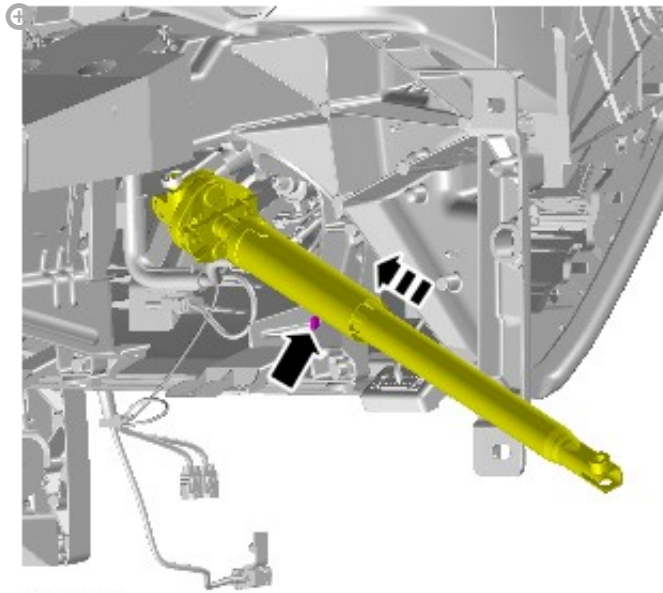

E149260


48.

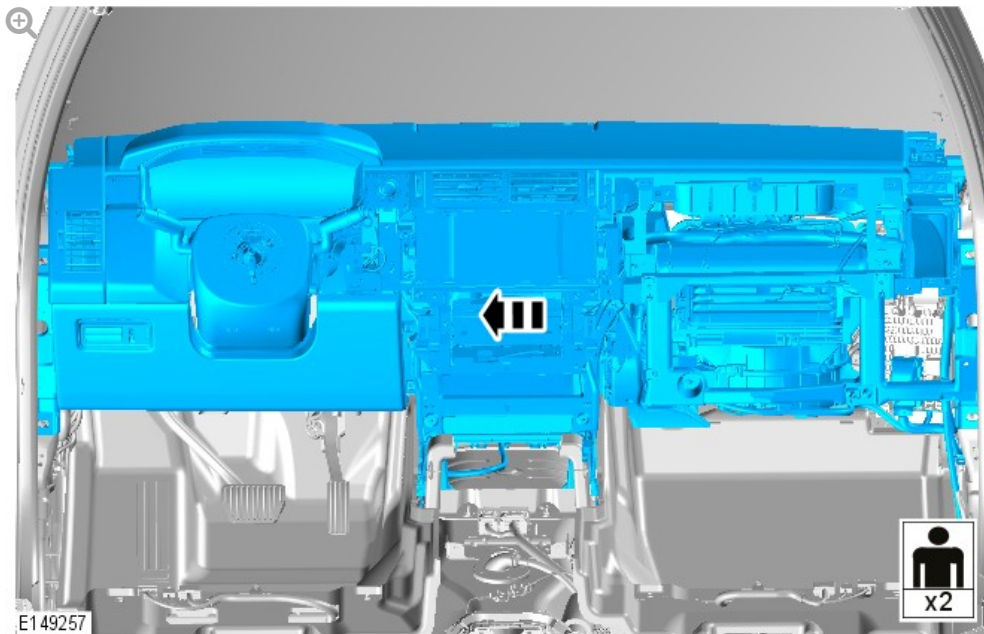

E149257


CAUTION:

Make sure that the weight of the instrument panel is evenly supported. Failure to follow this instruction may result in damage to the components.

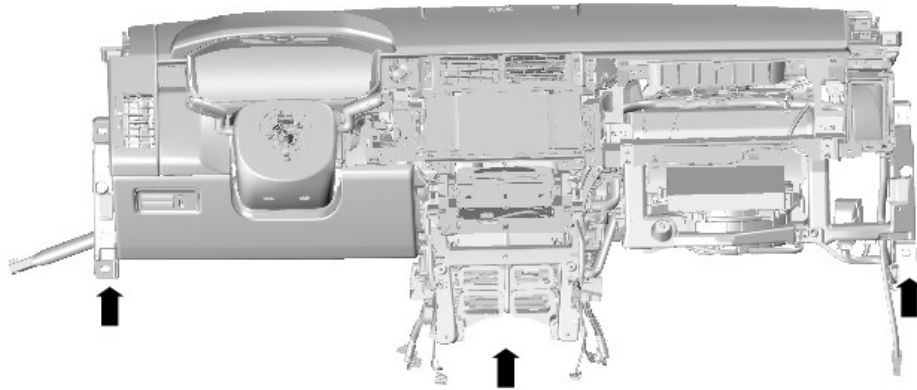


E149261

50.

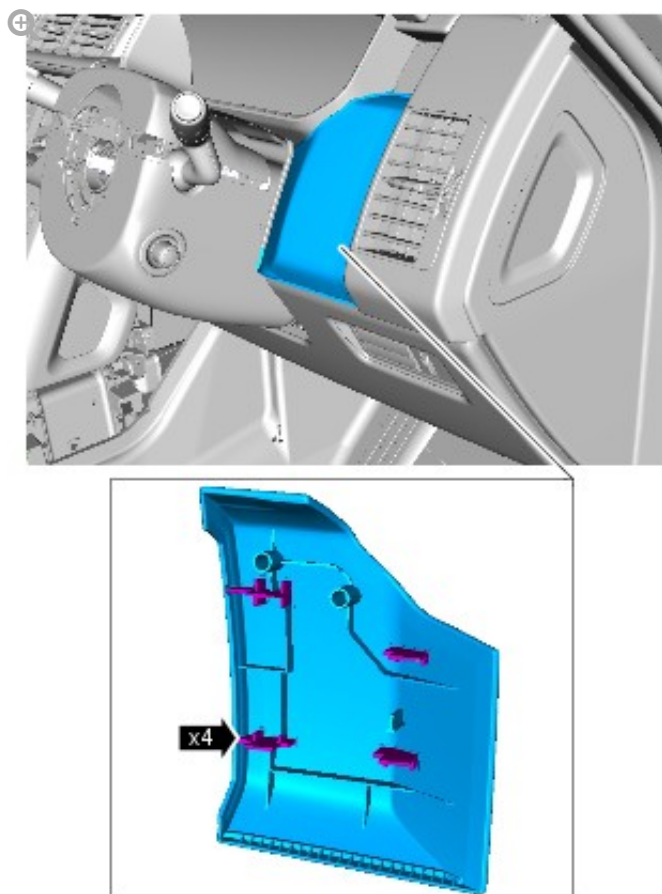


E148285

51.

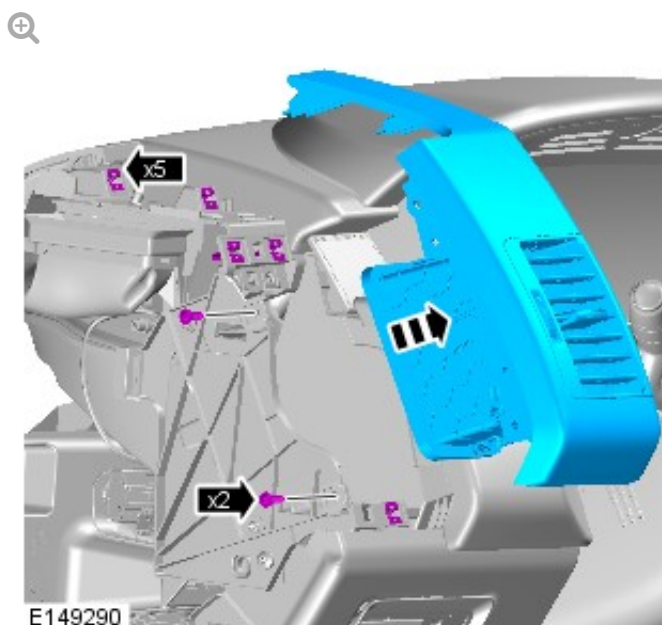


E149290

52.


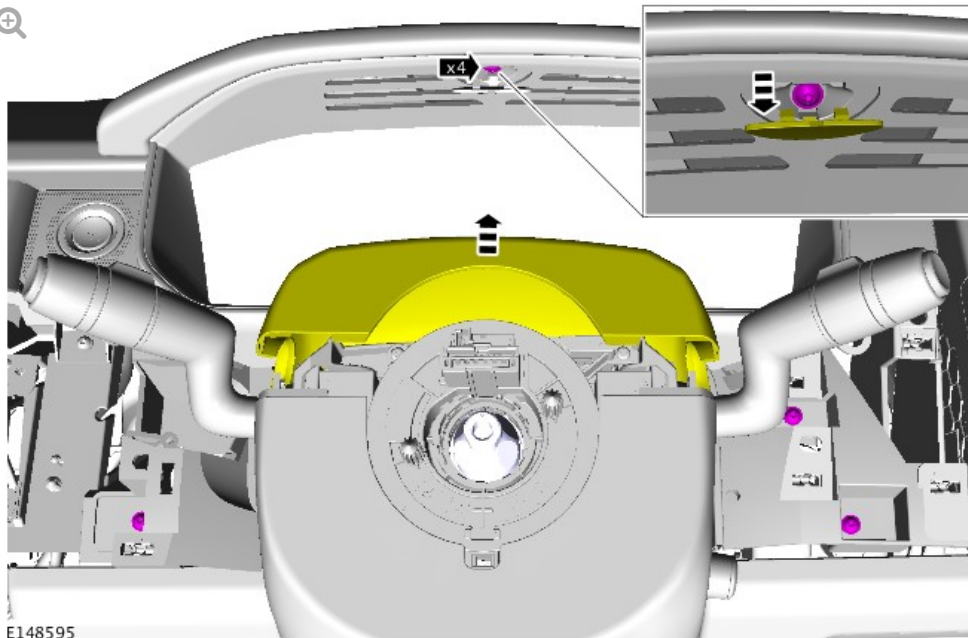


E148595

53.


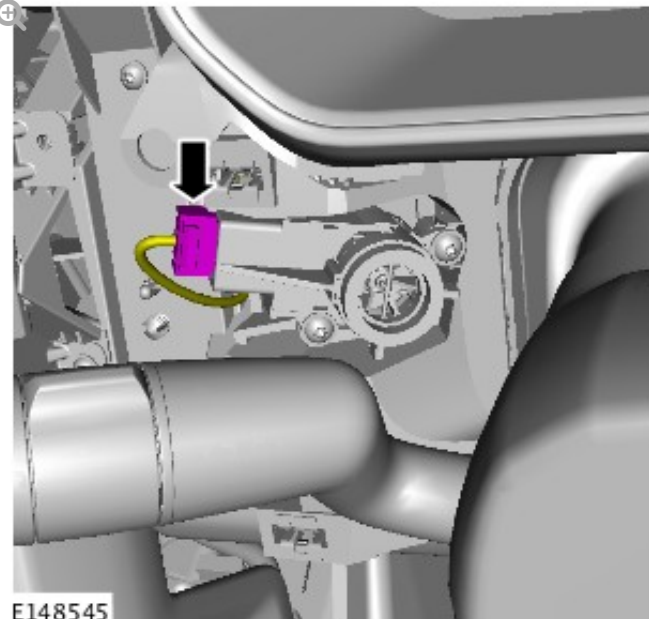


E148545

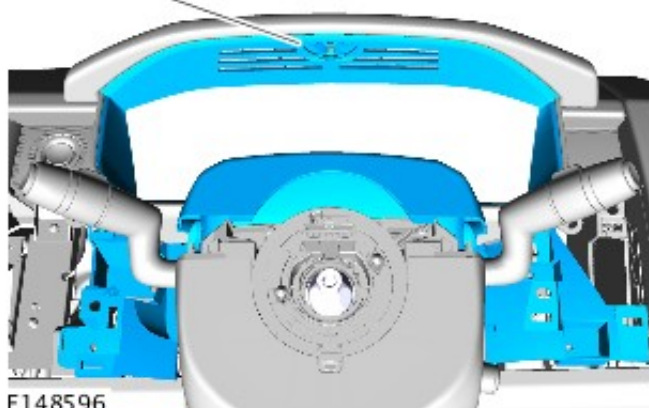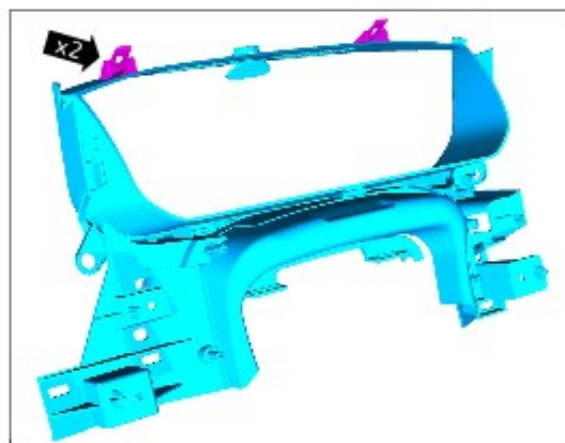


E148596

55.

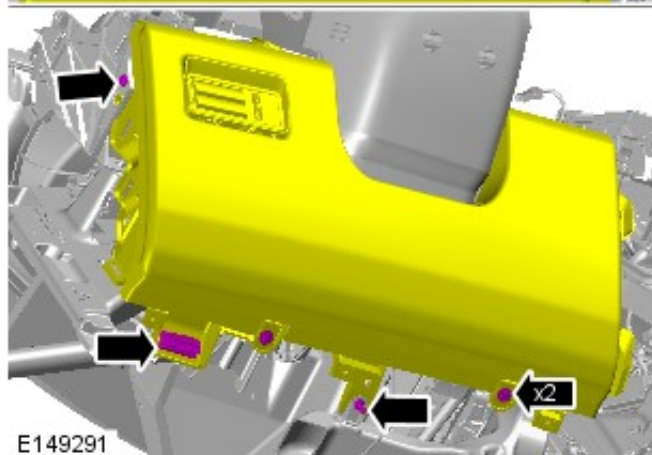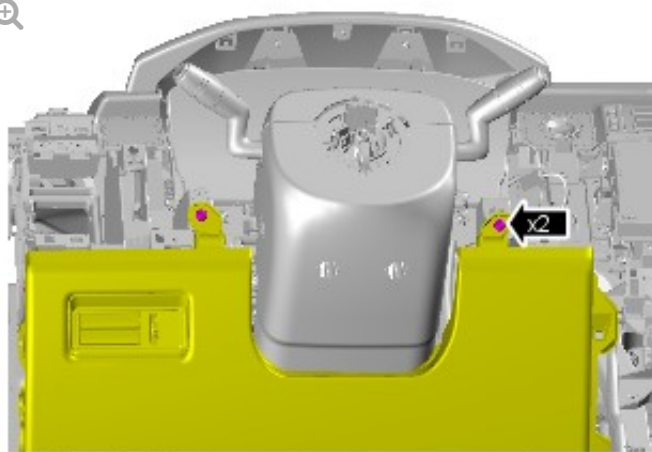


E149291

56.

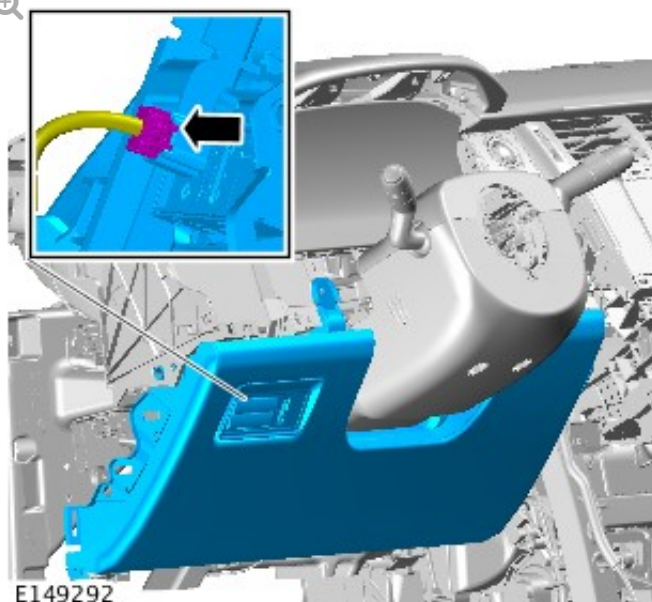


E149292


57.

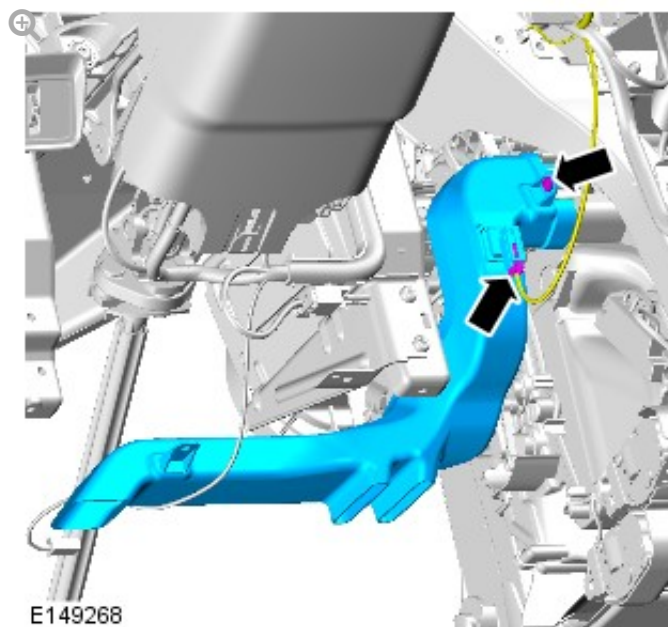

58.

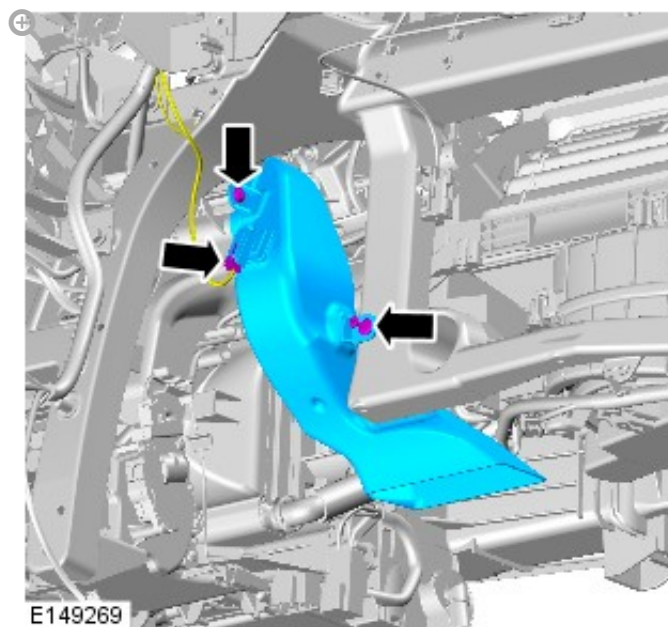


59.

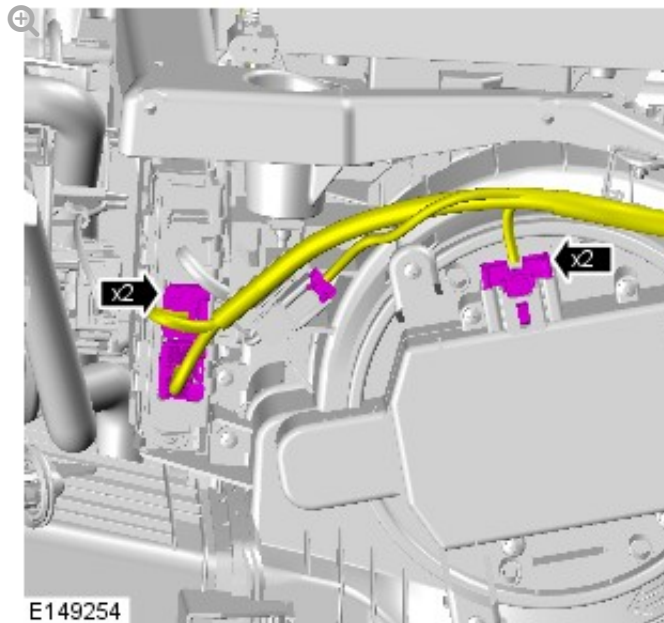

60.

CAUTION:

Install all the bolts finger tight before final tightening.

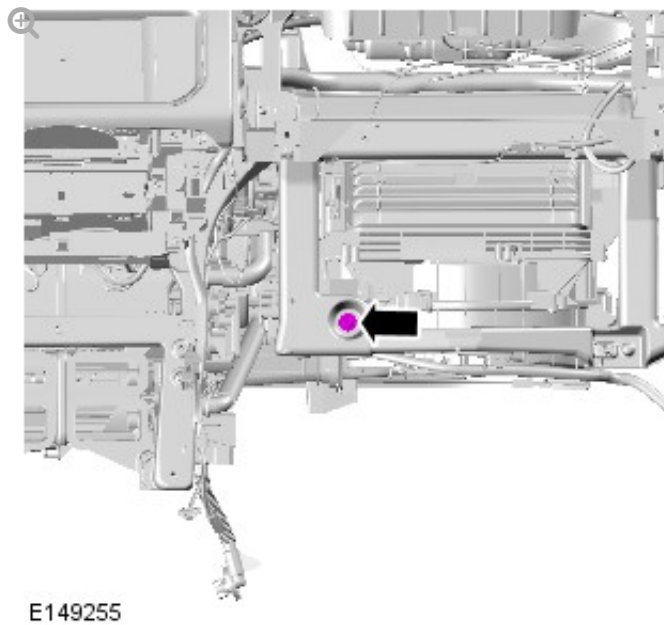


Torque: 9 Nm

61.

CAUTIONS:

- Install all the bolts finger tight before final tightening.
- Tighten the bolts in the sequence shown.

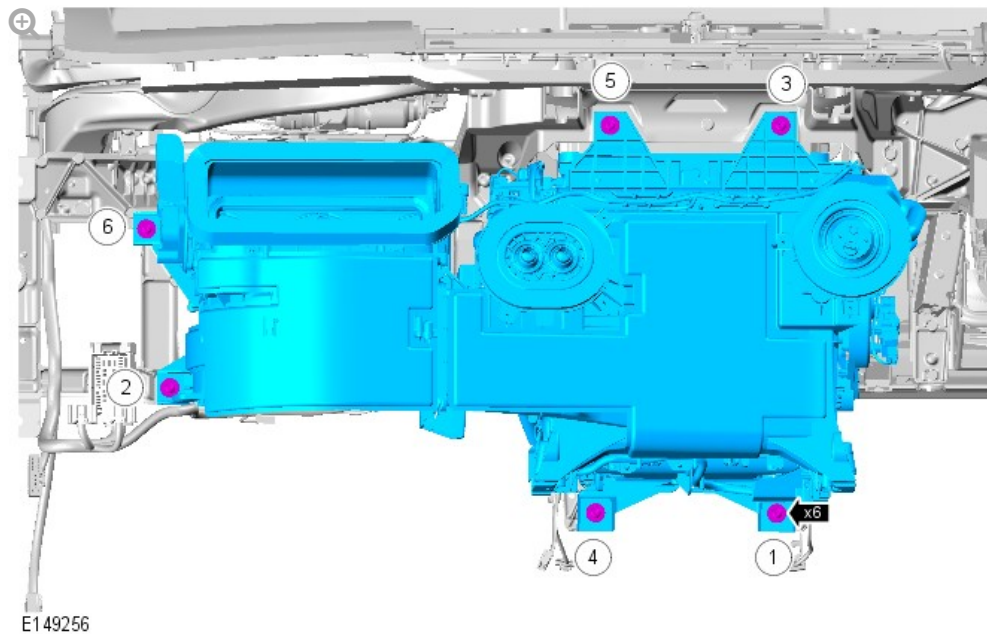

Torque: 9 Nm

INSTALLATION


1.

CAUTION:

Remove and discard the seals.

NOTE:

Install new seals.

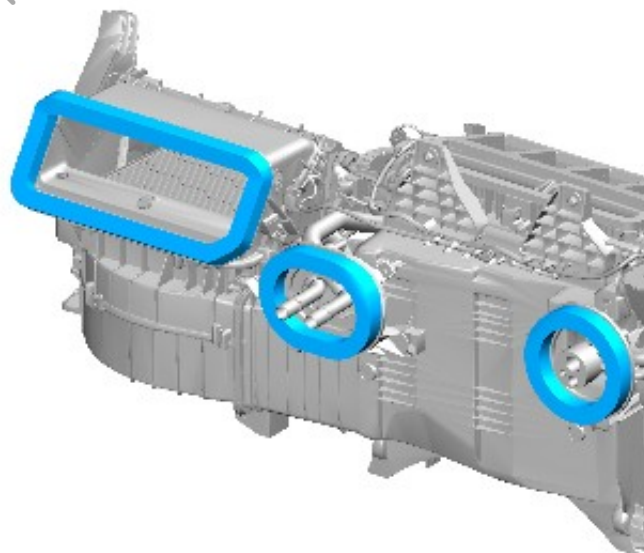

E149476

2.

NOTE:

Make sure that the grommets are correctly seated.



E149477

3.

NOTE:

Install the trim retaining clips in the moulding prior to installing the components.



E149095

4. To install, reverse the removal procedure.