

2016.0 RANGE ROVER (LG), 412-01

CLIMATE CONTROL

HEATER CORE (G1509815)

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.

1.

WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

2. Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).


3. Refer to: [Heater Core and Evaporator Housing - GTDi 2.0L Petrol](#) (412-01A Climate Control, Removal and Installation).

4.

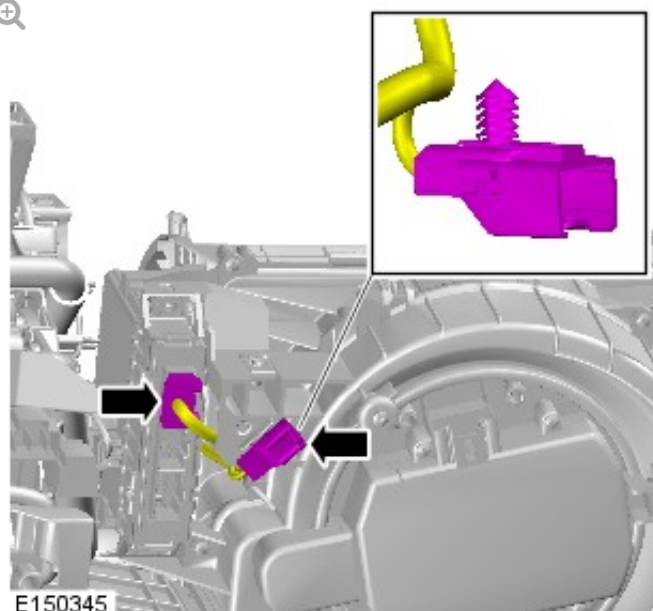


E150345

5.

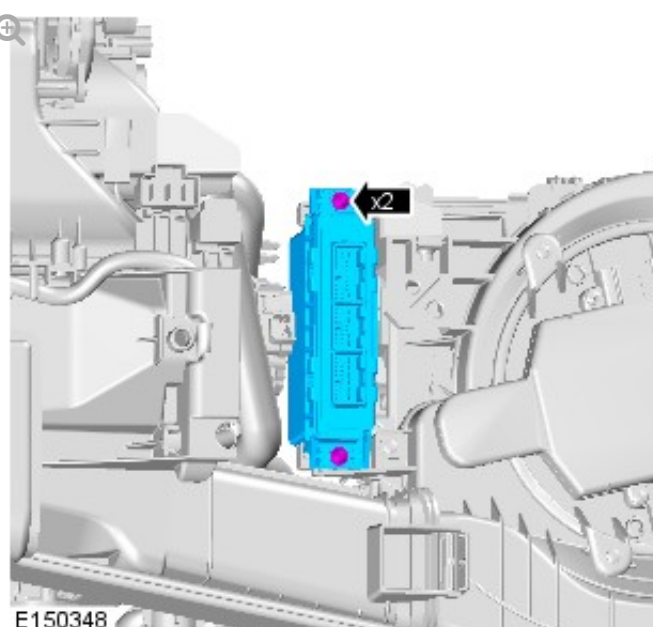


E150348



6.

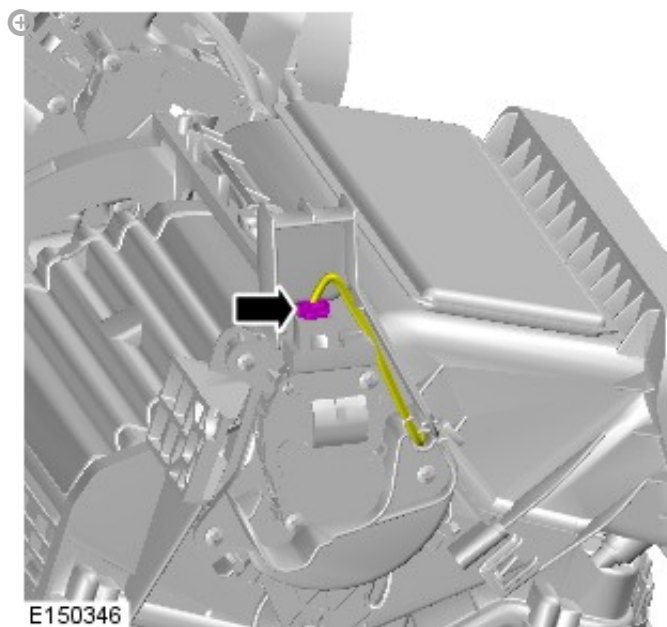

7.

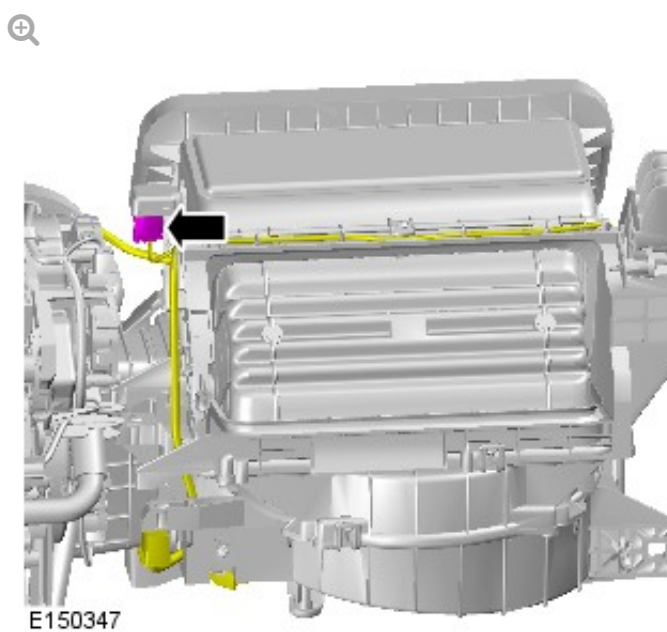


8.

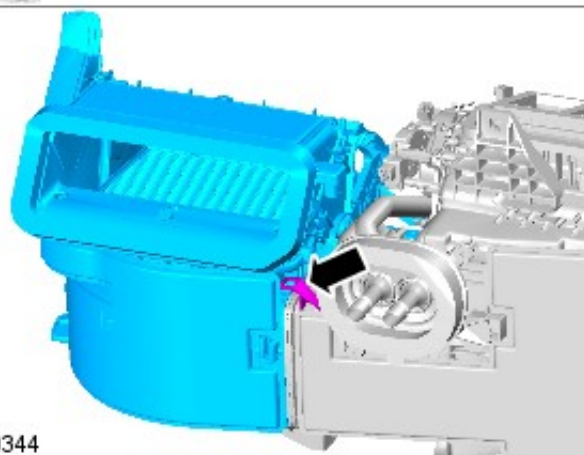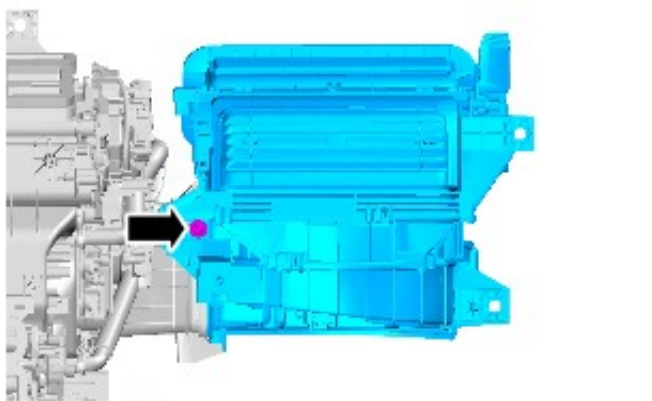


E150344

9.

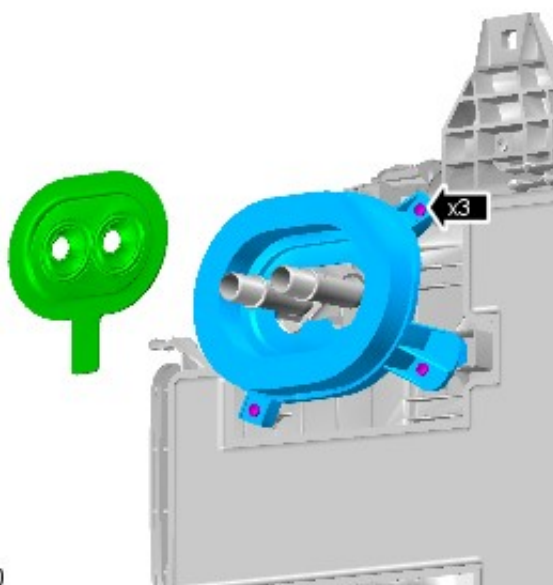

E150350

10.

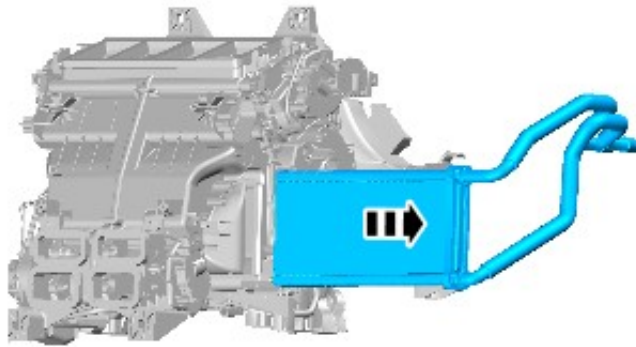

E150349

INSTALLATION

1. To install, reverse the removal procedure.