

2016.0 RANGE ROVER (LG), 412-01

CLIMATE CONTROL

THERMOSTATIC EXPANSION VALVE [G1509809]

REMOVAL AND INSTALLATION


REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.


1. Refer to: Heater Core and Evaporator Core Housing (412-01, Removal and Installation).

2.

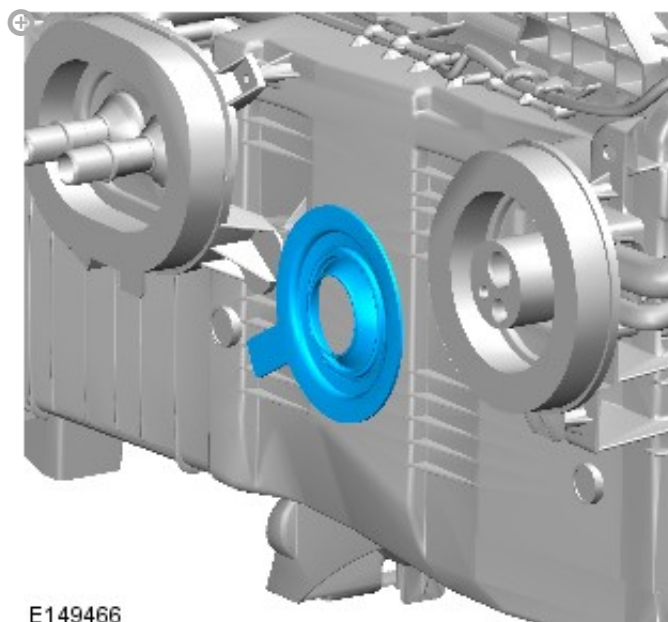


E149466

3.

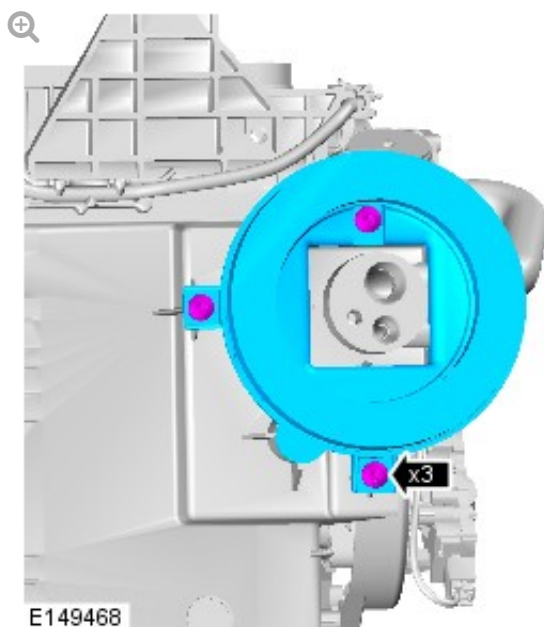

E149468

4.

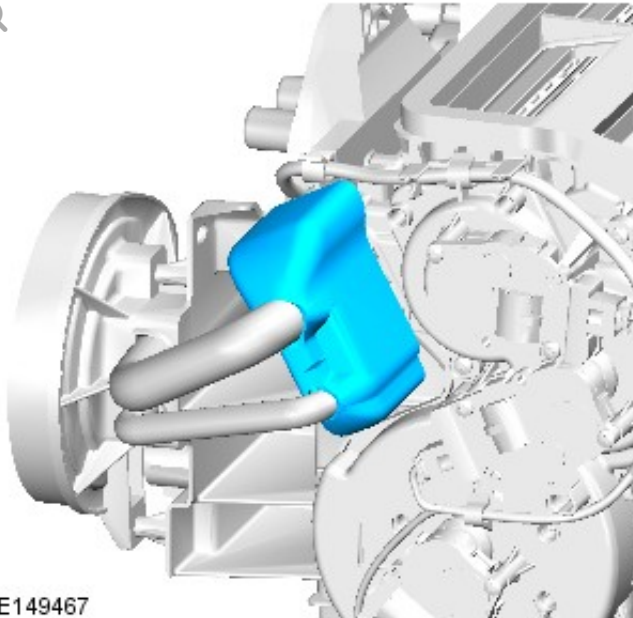

E149467


5.

CAUTION:

Remove and discard the O-ring seals.

NOTE:

Install new O-ring seals.

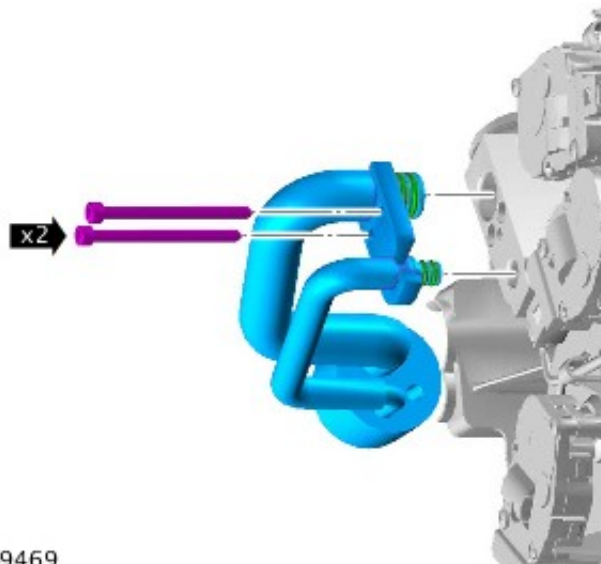

E149469

Torque: 4 Nm


6.

CAUTION:

Remove and discard the O-ring seals.

NOTE:

Install new O-ring seals.

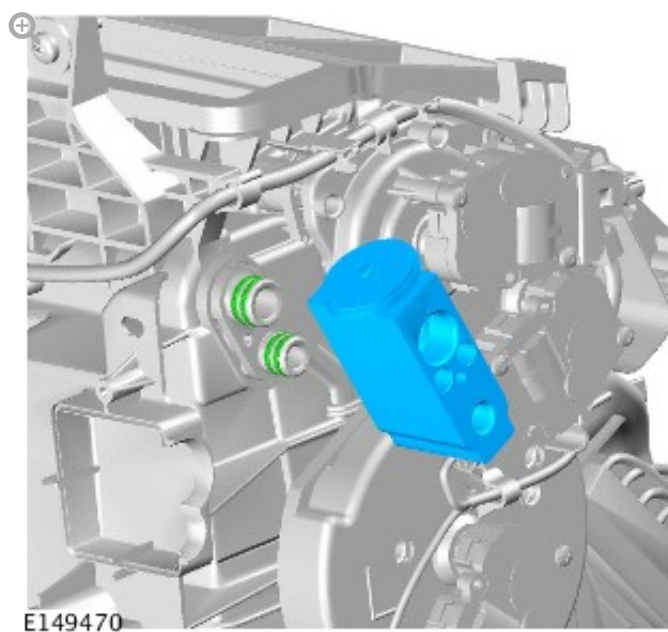

E149470

INSTALLATION

1. To install, reverse the removal procedure.