

2016.0 RANGE ROVER (LG), 414-02

GENERATOR AND REGULATOR - TDV6 3.0L DIESEL

GENERATOR [G1520919]

REMOVAL AND INSTALLATION

REMOVAL

NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.
Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).
2. Refer to: [Accessory Drive Belt Tensioner](#) (303-05E Accessory Drive - SDV6 3.0L Diesel - Hybrid Electric Vehicle, Removal and Installation).

3.


WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

4. Refer to: [Engine Undershield](#) (501-02 Front End Body Panels, Removal and Installation).

5.

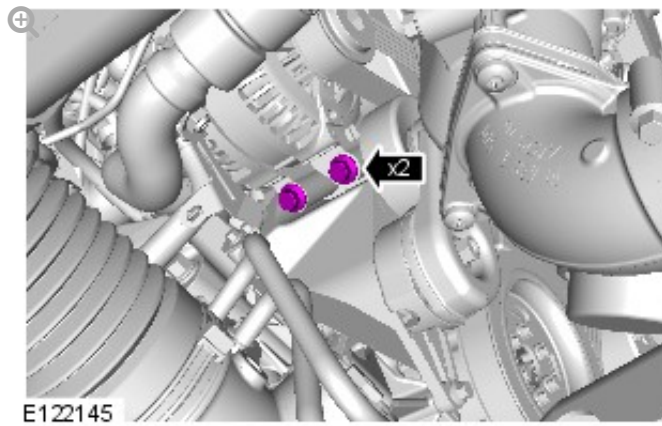


Torque: 47 Nm

6.

NOTE:

Make sure the retaining clips are correctly installed and tightened.

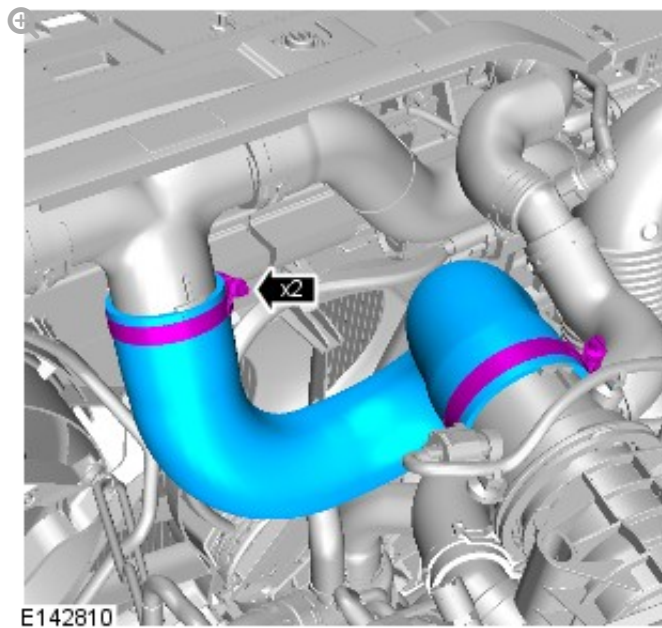


Torque: 3 Nm

7.


CAUTION:

Take extra care not to damage the wiring harnesses.

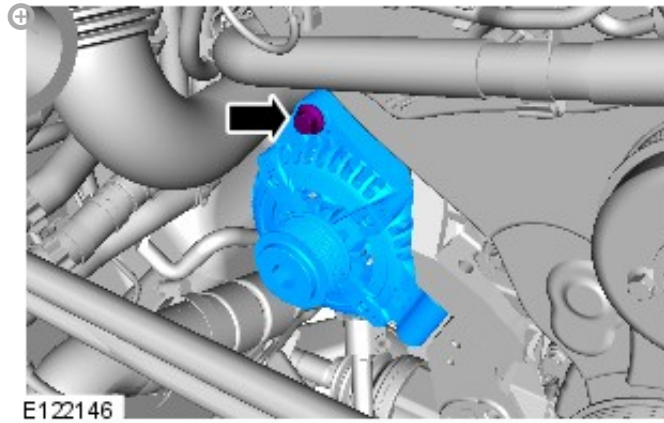

Torque: 47 Nm

8.

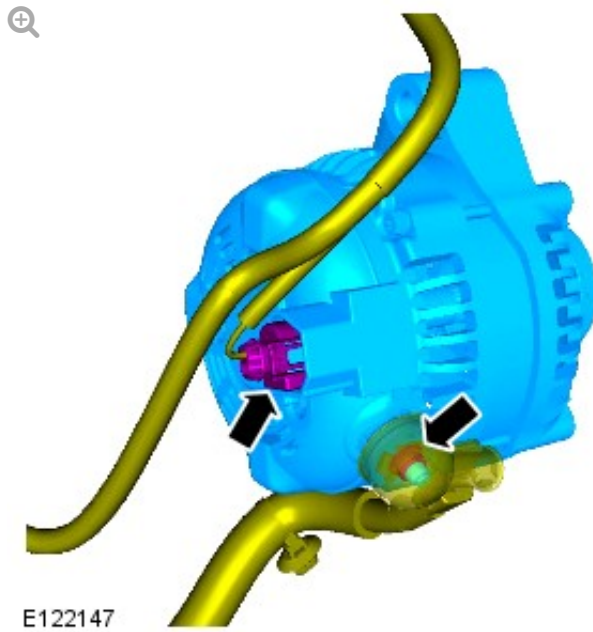

Torque: 12 Nm

INSTALLATION

1. To install, reverse the removal procedure.

