

PUBLISHED: 03-MAY-2017
2015.0 RANGE ROVER (LG), 414-02

GENERATOR AND REGULATOR - TDV8 4.4L DIESEL

GENERATOR (G1524731)

REMOVAL AND INSTALLATION

86.10.02	ALTERNATOR - RENEW	LEFT HAND DRIVE, 4400 CC, TDV8	3.7	USED WITHINS	
----------	-----------------------	--	-----	-----------------	--

PART(S)

STEP	REPLACE PART / RENEW PART	PART NAME	
Removal Step 6	Renew Part	Steering column lower shaft lower bolt	1

REMOVAL



NOTES:

- Removal steps in this procedure may contain installation details.
- Some variation in the illustrations may occur, but the essential information is always correct.
- Engine shown removed for clarity.

1.

Disconnect the battery ground cable.

Refer to: [Specifications](#) (414-00 Battery and Charging System - General Information, Specifications).

2.



WARNING:


Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

3.

Refer to: [Cooling Fan](#) (303-03F Engine Cooling - TDV8 4.4L Diesel, Removal and Installation).

4.

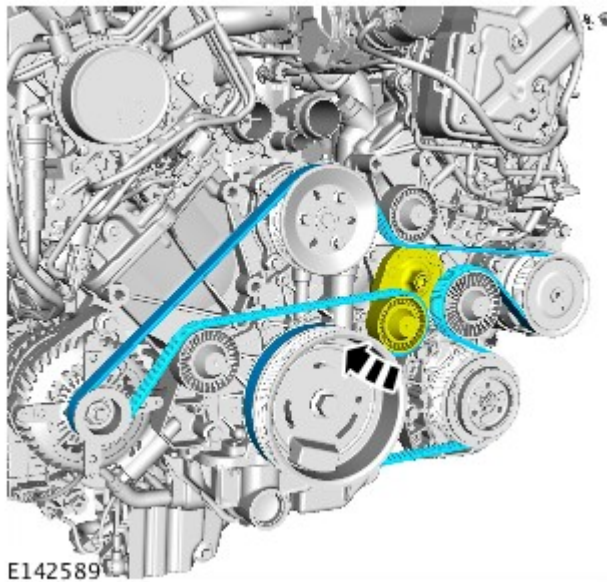

5.

Refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).

6.




CAUTION:

Discard the bolt.




NOTES:


- Right hand drive only.
- LHD illustration shown, RHD is similar.

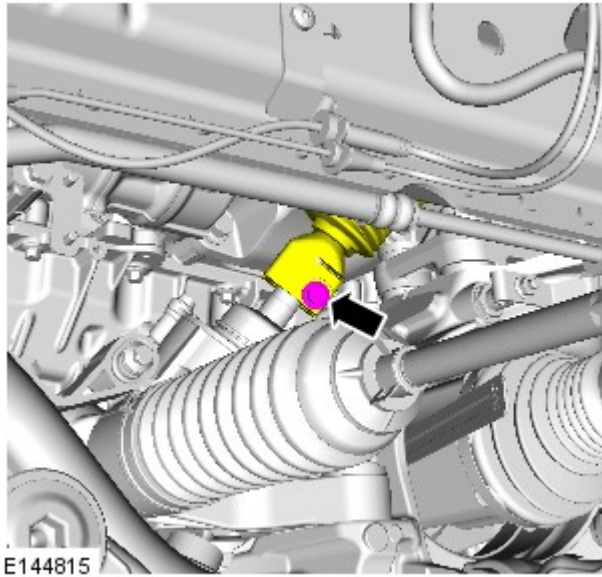

- Align the steering wheel to straight ahead.
- Using a suitable tool, clean out the threads.
- *Renew Part: [Steering column lower shaft lower bolt : 1](#) .*
Torque: 30 Nm

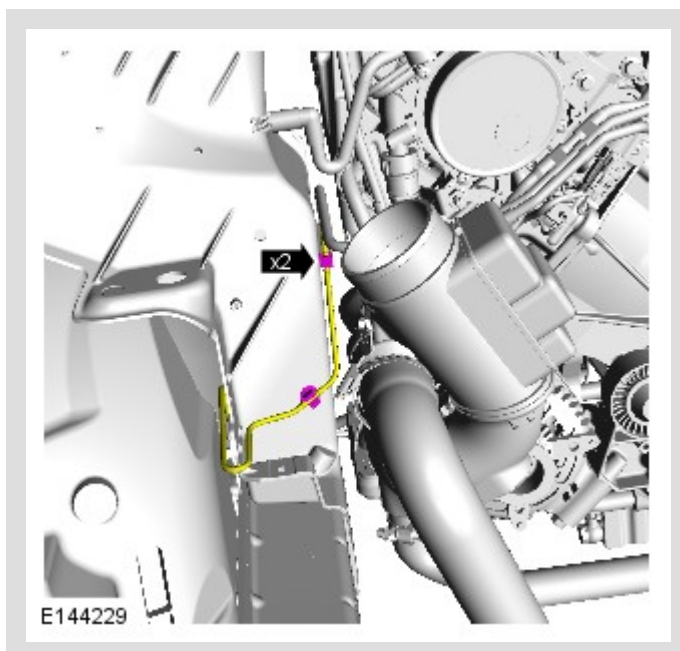


8.

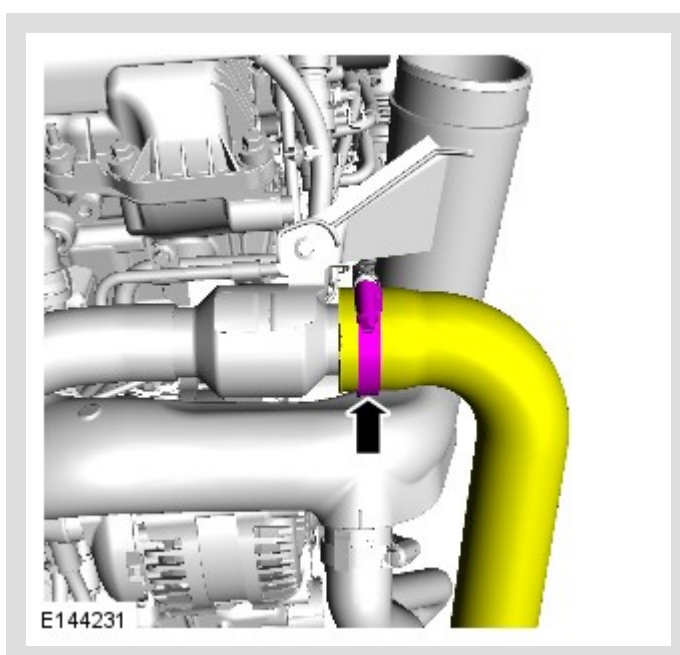


Torque: 3.5 Nm

9.

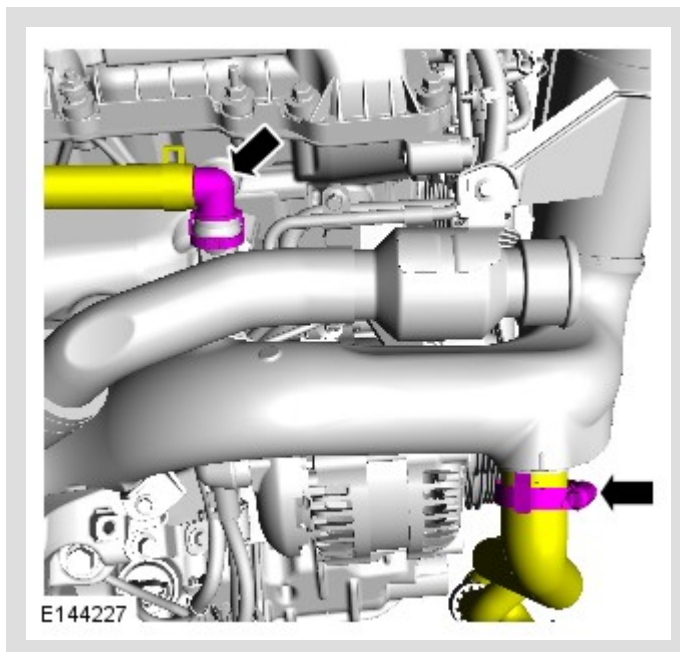

Torque: 3.5 Nm

10.

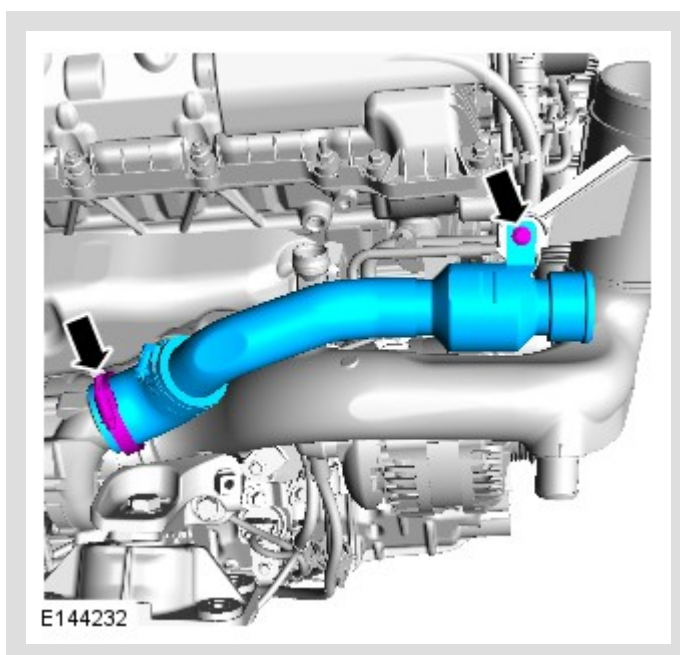

Torque:
Clamp 3.5 Nm


Bolt 8 Nm

11.



CAUTION:

Take extra care when removing the battery cable from the generator.

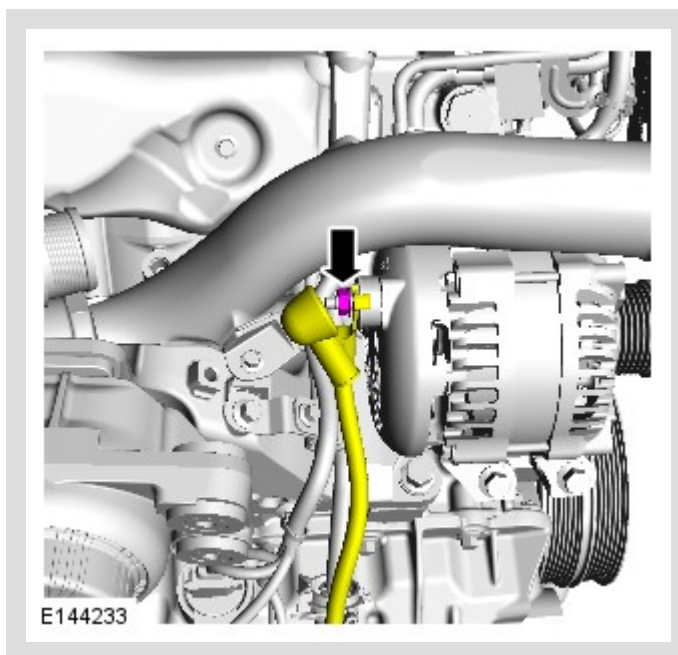


Torque: 12 Nm

12.



NOTE:

The component cannot be removed at this stage.

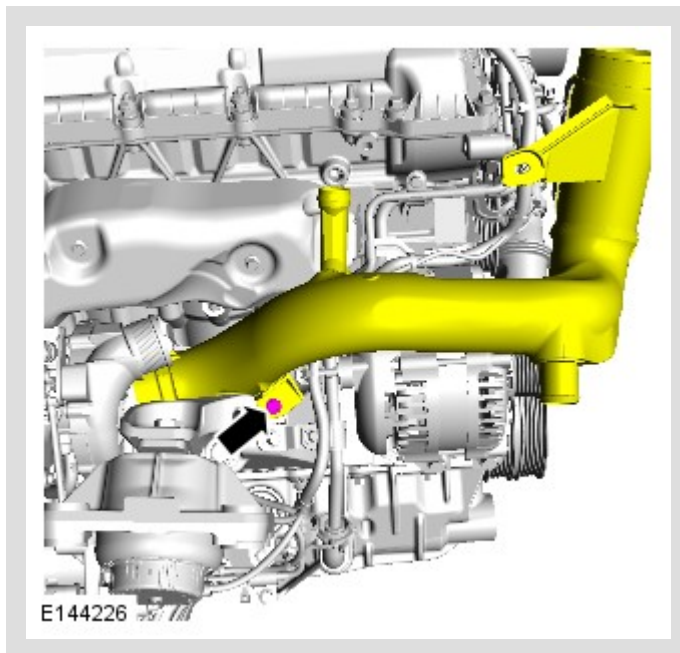

Torque: 8 Nm

13.




CAUTIONS:

- Take extra care not to damage the battery cable terminal when removing the wiring harness or generator. Make sure that the terminal is not bent or split.
- Support the generator prior to disconnecting the electrical connectors.




NOTE:

The component cannot be removed at this stage.

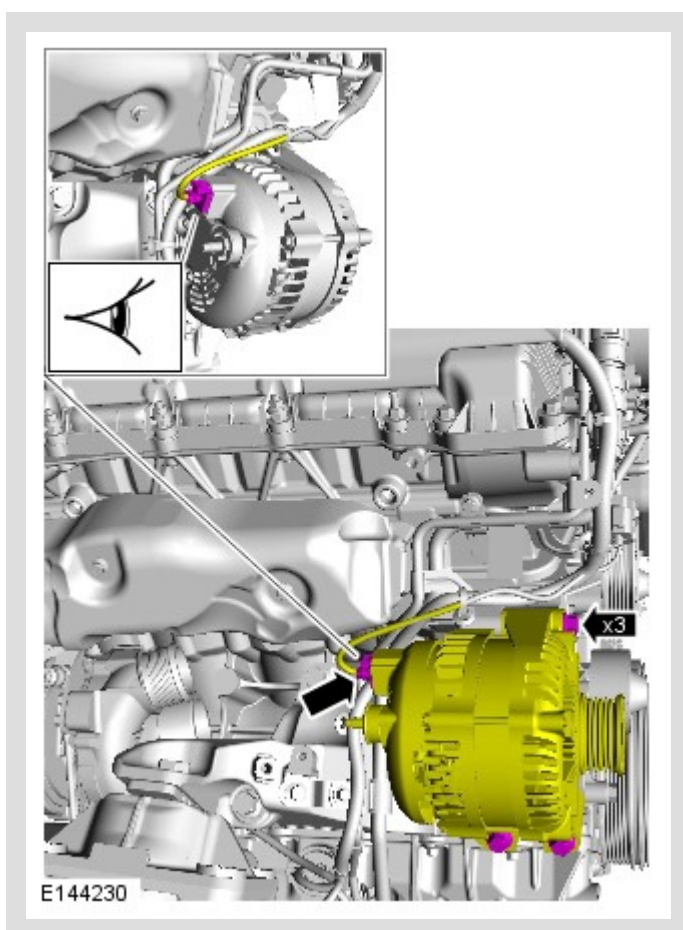


Torque: 47 Nm

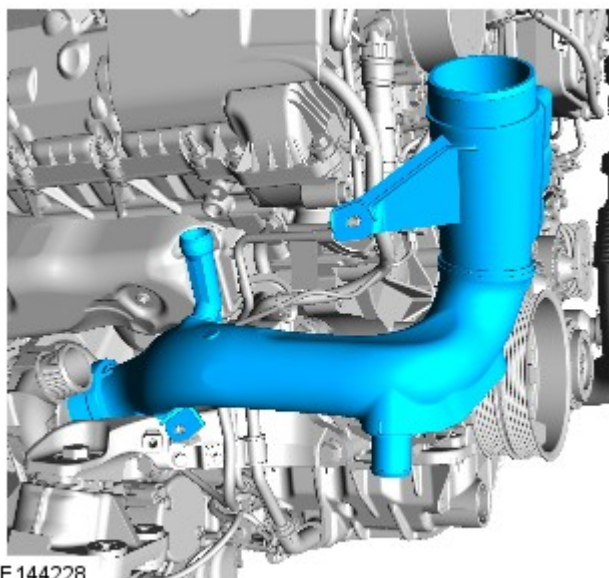

E144228

15.

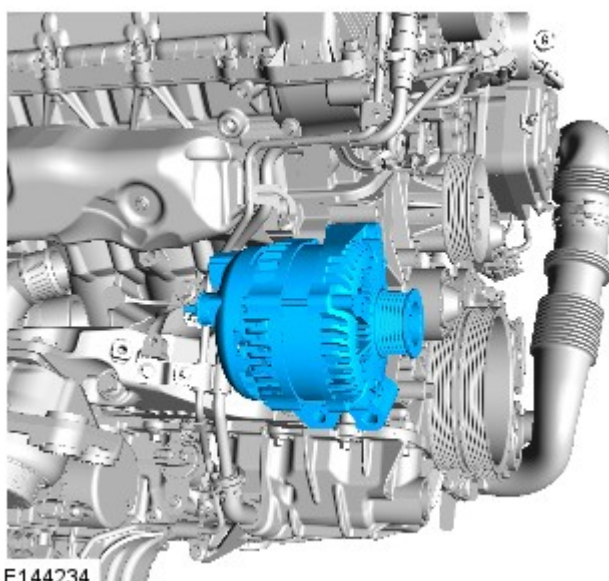

E144234

INSTALLATION

1. To install, reverse the removal procedure.