

PUBLISHED: 28-FEB-2013
2014.0 RANGE ROVER (LG), 414-02

GENERATOR AND REGULATOR - V8 N/A 5.0L PETROL/V8 S/C 5.0L PETROL

GENERATOR - V8 S/C 5.0L PETROL


(G1224666)

REMOVAL


NOTE:

Some variation in the illustrations may occur, but the essential information is always correct.

1. Disconnect the battery ground cable.
Refer to: Specifications (414-00 Battery and Charging System - General Information, Specifications).
2. Refer to: Air Cleaner Outlet Pipe LH (303-12C, Removal and Installation).
3. Refer to: Air Cleaner Outlet Pipe RH (303-12C, Removal and Installation).
4. Refer to: Engine Undershield (501-02 Front End Body Panels, Removal and Installation).
5. Refer to: Cooling Fan (303-03 Engine Cooling - V8 S/C 5.0L Petrol, Removal and Installation).
- 6.

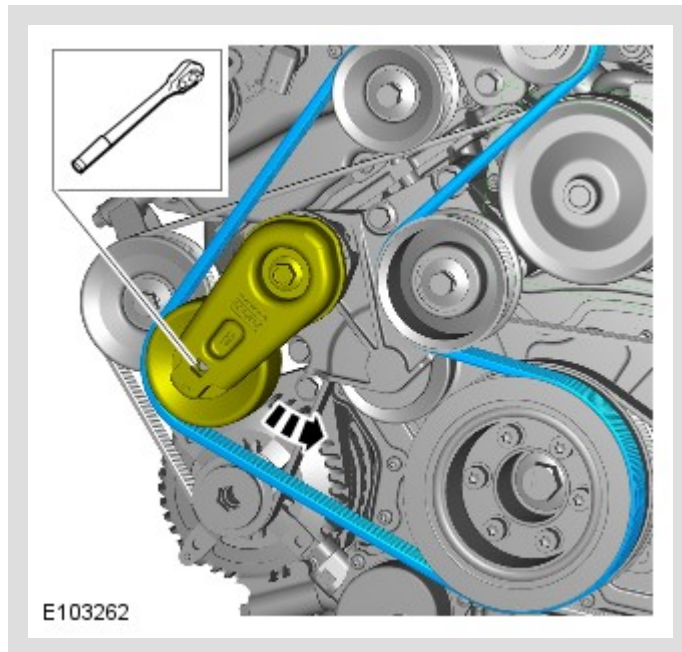


7.

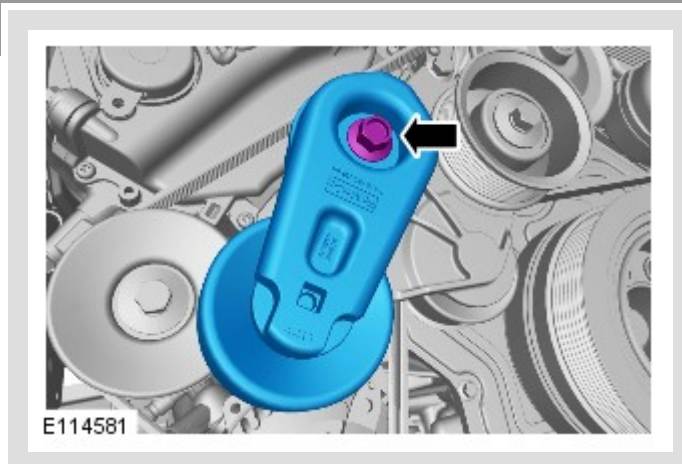


Torque: 40 Nm


8.

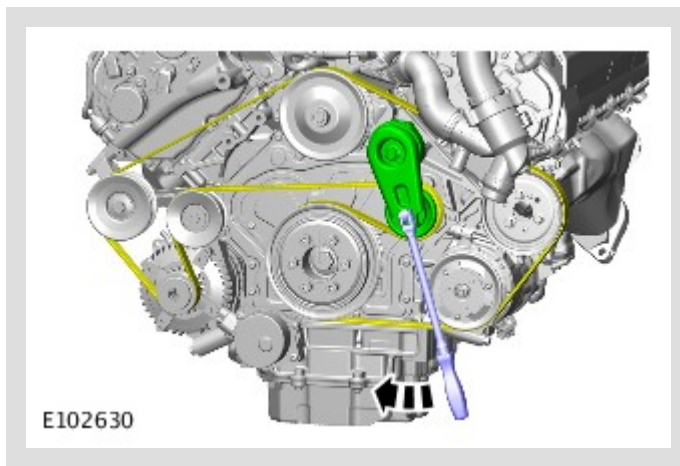

9.

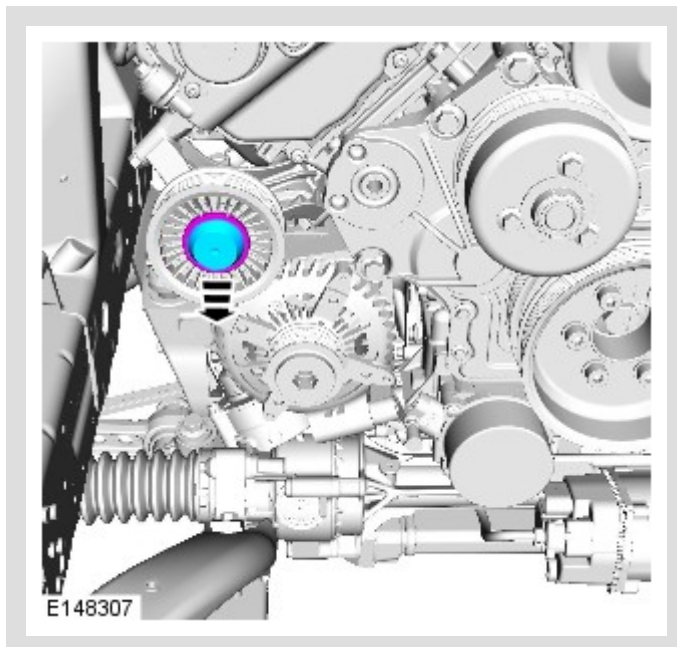


10.

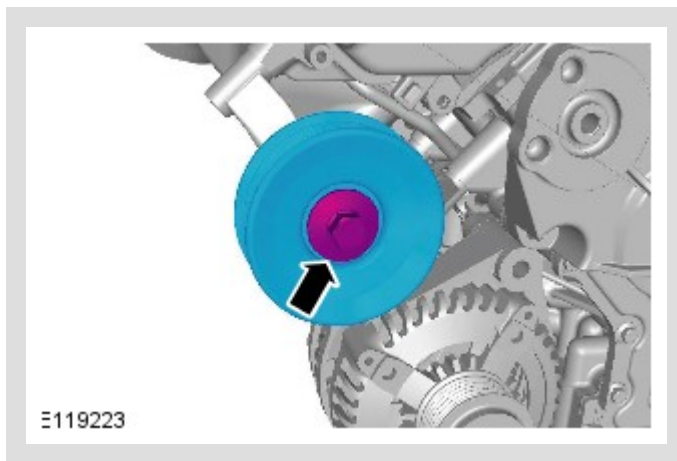


Torque: 40 Nm

11.

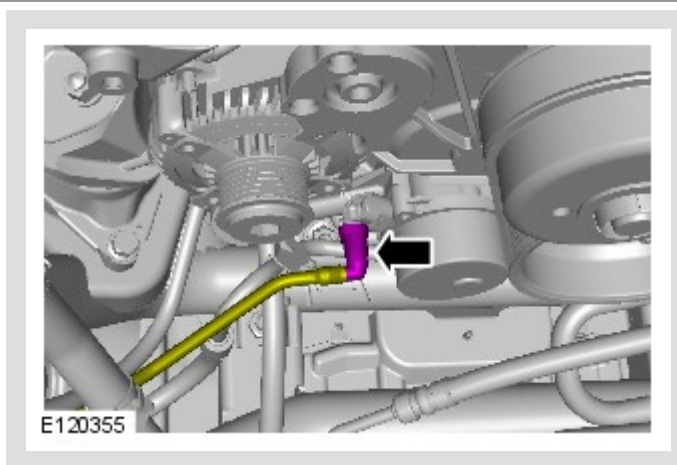


12.

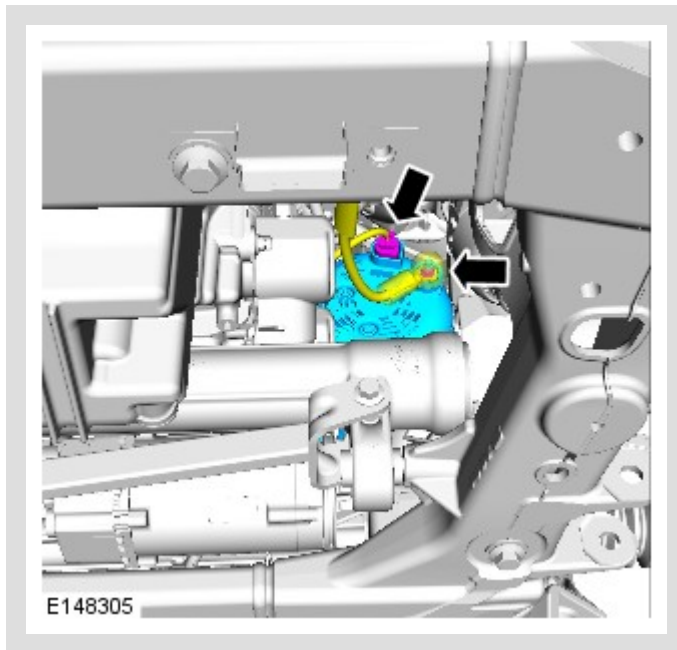


Torque: 12 Nm

13.

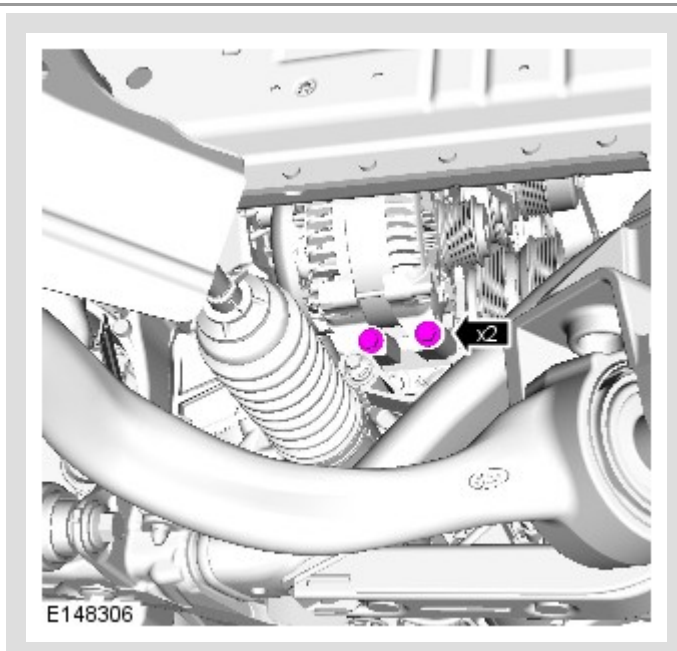

Torque: 48 Nm

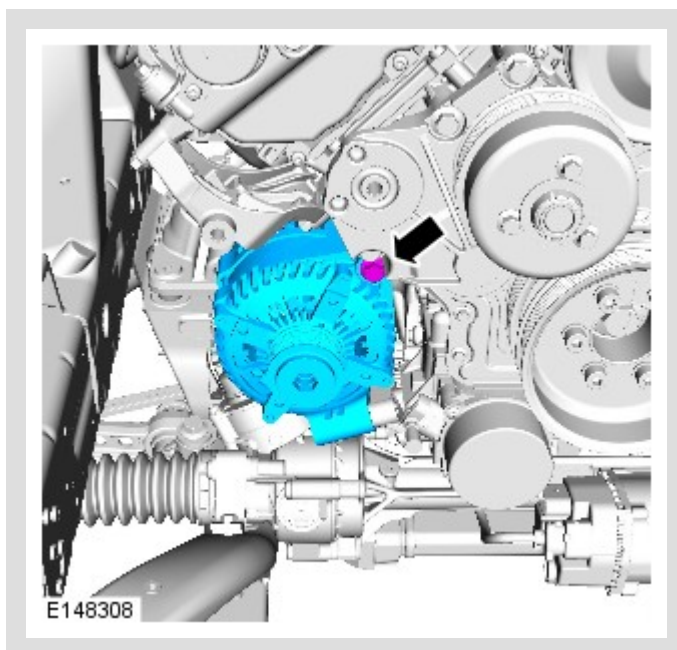

Torque: 48 Nm

INSTALLATION

1.



CAUTIONS:

- Make sure that the accessory drive belt is correctly located on each pulley.
- Clean and inspect the accessory drive belt pulleys for damage.

To install, reverse the removal procedure.

